

NASA
CR
2847
v.1
c.1

LOAN OR USE RETURN TO
AFWL TECHNICAL LIBRARY
KIRTLAND AFB, NM 87501



TECH LIBRARY KAFB, NM

NASA Contractor Report 2847

Modal Interpolation Program, L 215 (INTERP)

Volume I: Engineering and Usage

R. I. Kroll and M. Y. Hirayama

CONTRACT NAS1-13918
OCTOBER 1979

NASA





0061661

NASA Contractor Report 2847

Modal Interpolation Program, L 215 (INTERP)

Volume I: Engineering and Usage

R. I. Kroll and M. Y. Hirayama
Boeing Commercial Airplane Company
Seattle, Washington

Prepared for
Langley Research Center
under Contract NAS1-13918



National Aeronautics
and Space Administration

Scientific and Technical
Information Branch

1979



CONTENTS

| | Page |
|--|------|
| 1.0 SUMMARY | 1 |
| 2.0 INTRODUCTION | 3 |
| 3.0 SYMBOLS AND ABBREVIATIONS | 4 |
| 4.0 ENGINEERING AND MATHEMATICAL DESCRIPTION | 6 |
| 4.1 Concept of Surfaces | 6 |
| 4.2 Axis Systems and Displacement Sign Conventions | 6 |
| 4.3 Coordinate Transformation | 8 |
| 4.4 Modal Interpolation Methods | 10 |
| 4.4.1 Motion Point | 10 |
| 4.4.2 Motion Axis | 12 |
| 4.4.3 Beam Spline | 15 |
| 4.4.4 Surface Spline | 16 |
| 4.4.5 Polynomial | 18 |
| 4.5 Parent Surface Modes | 18 |
| 4.6 Control Surface Rotations | 19 |
| 4.7 Aerodynamic Axis Shift | 20 |
| 5.0 PROGRAM DESIGN AND STRUCTURE | 23 |
| 5.1 Formation of the SA Arrays | 23 |
| 5.2 Determination of Interpolated Motion | 29 |
| 5.3 Program Overlay Structure | 32 |
| 6.0 COMPUTER PROGRAM USAGE | 35 |
| 6.1 Machine Requirements | 35 |
| 6.2 Operating System | 35 |
| 6.3 Control Cards | 35 |
| 6.4 Resources Estimates | 36 |
| 6.5 Input Data | 40 |
| 6.5.1 Card Input | 40 |
| 6.5.2 Summary of Card Input Data | 66 |
| 6.5.3 Magnetic File Input | 71 |
| 6.6 Output Data | 71 |
| 6.6.1 Printed Output | 71 |
| 6.6.2 Magnetic Files Output | 71 |
| 6.7 Restrictions | 74 |
| 6.8 Diagnostics | 74 |
| 6.8.1 Fatal Errors | 74 |
| 6.8.2 Warning Messages | 79 |
| 7.0 Sample Problem | 80 |
| 7.1 Description of Sample Problem | 80 |
| 7.2 Sample Problem Input and Output | 82 |
| REFERENCES | 116 |

FIGURES

| No. | | Page |
|-----|--|------|
| 1 | Axis System Orientations | 7 |
| 2 | Displacement Sign Convention | 7 |
| 3 | Coordinate Transformation | 8 |
| 4 | Typical Rotational Transformation | 9 |
| 5 | Motion Point Interpolation | 11 |
| 6 | Motion Axis Interpolation | 13 |
| 7 | Beam Spline Interpolation | 15 |
| 8 | Beam Spline Extrapolation | 16 |
| 9 | Control Surface Rotation | 20 |
| 10 | Aerodynamic Axis Shift | 21 |
| 11 | Nodal Mapping | 25 |
| 12 | Combined Freedom Mapping | 27 |
| 13 | Single Freedom Mapping | 28 |
| 14 | Aerodynamic Axis Shifting | 30 |
| 15 | Wing With Control Surface | 31 |
| 16 | Output Dihedral Correction | 32 |
| 17 | Overlay Structure and Input/Output Files | 33 |
| 18 | Input Card Data Flow | 41 |
| 19 | Input File Structures | 72 |
| 20 | Magnetic File Map of SATAP | 73 |
| 21 | Magnetic File Map of MOTAP | 73 |
| 22 | Size Limitations | 75 |
| 23 | Sample Problem | 81 |

1.0 SUMMARY

The program L215 (INTERP) is a modal interpolation program designed to determine specific motions at desired aerodynamic control points. The motions obtainable are translations normal to the surface and surface slopes, which are parallel and perpendicular to the freestream direction.

The program performs the interpolation process in two stages. First, using the modal data generated by a vibration analysis, a set of interpolation coefficient arrays (SA arrays) are formed. Second, the SA arrays are used with aerodynamic control-point geometry data, to calculate the needed surface motions at the control-point locations. Either phase may be executed separately, with the data saved from each phase on a magnetic file (tape or disk) for later use.

Modal data consists of nodal locations and nodal displacements that describe the shape of each vibrational mode (mode shape). This data can be subdivided and rearranged to best meet the user's needs. Nodal locations may be input in reference axis or local axis system coordinates. Mode shape data can be input in combined freedom form (one matrix containing all allowed nodal displacements) or in single freedom form (separate matrices with each matrix containing a specific type of displacement for all nodes) and the number of modes can be reduced or increased as desired. Modes describing rigid control surface rotations can be added to the basic set of input modes.

Five types of interpolation methods are available for use: motion point, motion axis, beam spline, surface spline, and polynomial. Care must be exercised in matching the type of modal input and the desired use of the interpolated motion with the type of interpolation method chosen.

The only theoretical assumption made in the interpolation program is that all displacements described by the mode shapes are defined in the local aerodynamic surface. No displacement transformations are applied to the input mode shapes.

The output from L215 consists of:

- Sorted input mode shapes and node locations
- SA arrays
- Interpolated displacements consisting of surface translations and slopes

The significant program restrictions are:

- All interpolated slopes are given parallel and/or perpendicular to the freestream direction.
- The beam spline interpolation method will yield slopes perpendicular to the freestream direction only if mode shapes for the beams contain these displacements.
- Problem size for any one surface is governed by the SA array size limitation of 10 000 words.

2.0 INTRODUCTION

The computer program L215 (INTERP) was developed for use either as a standalone program or as a module of the program system called DYLOFLEX developed for NASA under the contract NAS1-13918 (ref. 1). The modal interpolation program (L215) was designed to meet the DYLOFLEX contract requirements as defined in reference 2. These requirements specify the need for a program capable of calculating displacements at several points on an aerodynamic surface from modal data generated in a structural vibration analysis. The program was developed using existing BCAC/BCS interpolation subroutines.¹

The objective of this volume is to aid those persons wishing to use the program. To meet this objective, the following items are discussed:

- The engineering and mathematical equations used to formulate the problem
- Program structure and design
- Guidelines to the actual use of the program.

A sample problem is also presented in this volume to aid the user in the execution of the program.

¹ATLAS - An Integrated Structural Analysis and Design System "System Design Document," D6-25400-0002TN, and "User's Manual - Input and Execution Data," D6-25400-0003TN. Boeing Commercial Airplane Company, 1974.

3.0 SYMBOLS AND ABBREVIATIONS

Below is a list of items that appear in the discussion of this document except section 6.5.1 (card input)..

| Engineering Notation | Definition |
|---|---|
| C_{ij} | Coefficients used for the polynomial interpolation method. |
| C_0, C_1, C_2, C_3 | Coefficients of the cubic function used in the cubic spline techniques. |
| $d\delta_z/dx$ | Surface slope parallel to the freestream direction. |
| $d\delta_z/dy$ | Surface slope perpendicular to the freestream direction. |
| LAS | Local axis system. |
| N | Number of nodes used for interpolation. |
| n | Highest order of the polynomial function used for the polynomial interpolation method. |
| \hat{n} | Unit normal. |
| R | Perpendicular distance from the control surface hinge line to the point of interest on the control surface. |
| [R] | Euler rotation matrix. |
| RAS | Reference axis system. |
| r_i | Radial distance from the ith node on the surface to a point of interest on the surface. |
| Δr | Distance from the attachment point on the motion axis to the output point (measured positive for output points forward of the motion axis). |
| Sk | Smoothing factor for surface spline. |
| x_ℓ, y_ℓ, z_ℓ | Local axis system coordinates of a point on the surface. |
| x_{H_I}, y_{H_I} | Coordinates of the inboard end of the control surface hinge line. |
| x_{H_O}, y_{H_O} | Coordinates of the outboard end of the control surface hinge line. |
| X _{OR} , Y _{OR} , Z _{OR} | Reference axis system coordinates of the local axis system origin. |

| | |
|--|--|
| X_R, Y_R, Z_R | Reference axis system coordinates at a point. |
| $x_{\ell_0}, y_{\ell_0}, z_{\ell_0}$ | Local axis system coordinates of an output point. |
| $x_{\ell_n}, y_{\ell_n}, z_{\ell_n}$ | Local axis system coordinates of a node point. |
| $\Delta x_{\ell}, \Delta y_{\ell}, \Delta z_{\ell}$ | Offset distances between the node point and the output point (defined in the local axis system). |
| x_s, y_s, z_s | Local structural axis system coordinates of a point. |
| $\Delta x_{SH}, \Delta y_{SH}$ | The desired x and y shift between the local structural axis system and the local aerodynamic axis system; (OFFX,OFFY) are the variables used inside the program. |
| $\delta_x, \delta_y, \delta_z$ | Nodal translational displacements defined in the x,y,z direction. |
| $\delta z_r, \theta x_r, \theta y_r$ | Displacements at the motion axis reference points. |
| $\delta z_d, \theta x_d, \theta y_d$ | Dependent surface displacements. |
| $\delta z_p, \theta x_p, \theta y_p$ | Parent surface displacements. |
| $\theta_x, \theta_y, \theta_z$ | Nodal rotational displacements defined about the x,y,z axes. |
| θ_H | Rotation of the control surface about its hinge line. |
| $[\phi]$ | Mode shape matrix. |
| ϕ, θ, ψ | Euler rotation angles. |
| γ | Desired dihedral correction to be applied to interpolated data. |
| γ_s | Surface dihedral angle |
| γ_n^{\wedge} | Unit normal orientation with respect to z reference axis in degrees. |
| Λ_r | Orientation angle of the attachment line used in the motion axis interpolation method. |
| Λ_H | Sweep angle of the control surface hinge line. |
| $\alpha_1, \dots, \alpha_N, \alpha_{N+1}, \dots, \alpha_{N+2}, \alpha_{N+3}$ | Coefficients for the surface spline interpolation function |

4.0 ENGINEERING AND MATHEMATICAL DESCRIPTION

4.1 CONCEPT OF SURFACES

In finite-element-type aerodynamic methods, components such as flat plates used for lifting or thin body representations, bodies of revolution used for slender body representations, and polygonal cross-sectional cylinders used to represent interference bodies are employed in various combinations when aerodynamically modeling an airplane. The calculation of aerodynamic forces for each of these elements usually requires normal motions and freestream slopes at aerodynamic control points on the elements. It is often the case that vibration analyses, which can use modelings ranging from simple beams to complete finite element representations, calculate motions at nodal points that are not directly applicable to the aerodynamic modeling. Also, the aerodynamic idealization may often be varied without necessitating a change in the vibrational model. It is necessary, therefore, to be able to interpolate the modal data for the required motions at the aerodynamic control points.

In order to give the analyst the versatility of using a variety of vibrational analyses with various aerodynamic modelings, it is necessary to be able to regroup, rearrange, and reorder the modal data into subsets that best fit the chosen aerodynamic modeling. These subset divisions shall be called surfaces. It is not necessary to have a one-to-one correspondence between the modal subsets, or surfaces, and the aerodynamic bodies. For example, the modal data grouped into one set of surface data may be used to derive interpolation data for a slender body element and a related interference body element. On the other hand, two different surface groupings may be necessary to develop the interpolation data for a thin body that contains a movable control surface, or for a slender body that is capable of both vertical and lateral motions. User understanding of the aerodynamic modeling used and of the modal data being input, is required for proper surface divisioning.

4.2 AXIS SYSTEMS AND DISPLACEMENT SIGN CONVENTIONS

The interpolation program utilizes two basic types of axis systems, the reference axis system (RAS) and the local axis system (LAS). Both are right-hand systems.

Local axis systems are defined for each surface, and all the interpolation data that pertains to a surface is defined with respect to its local axis system. In defining a surface's local axis system, two rules must be followed:

- The local **x** axis must lie in the freestream direction with the positive **x** direction in the direction of the flow.
- The **y** axis must lie perpendicular to the flow with its positive direction pointing in the direction of increasing span.

The reference axis system is used to define the spatial relationships between the various surface local axis systems. Its function is purely geometrical, and it is advisable to maintain the same reference axis system throughout the analysis. A typical axis system orientation is shown in figure 1.

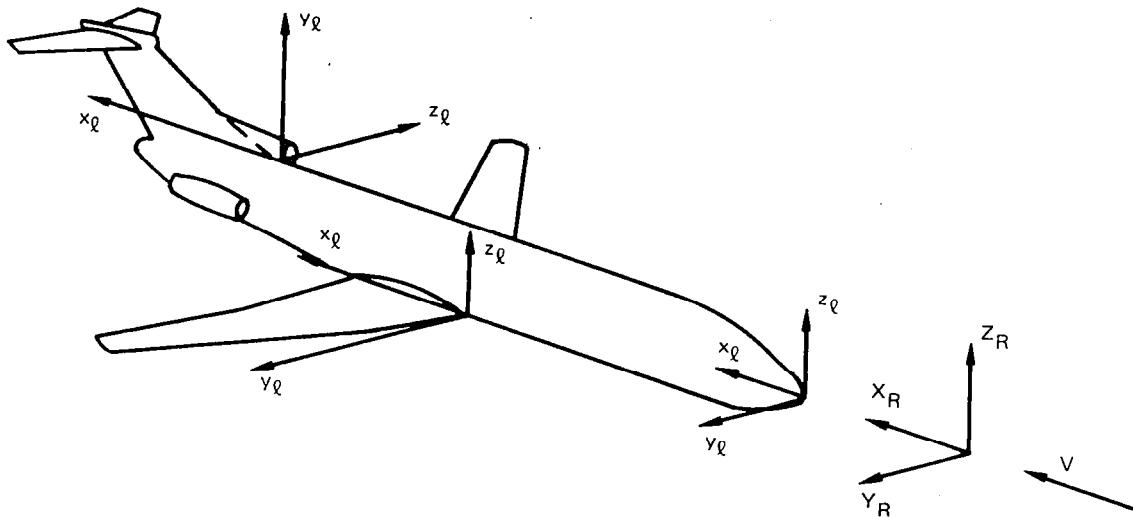


Figure 1.—Axis System Orientations

L215 (INTERP) assumes that for each interpolation surface the input modes used to formulate a surface's interpolation arrays are defined in the plane of the surface. For all interpolation methods, except motion axis, the input modes must be oriented in directions that are parallel and perpendicular to the freestream. The motion axis method can accept motion oriented perpendicular and parallel to local motion axis. The sign convention used by INTERP in forming the interpolation arrays is shown in figure 2. The ability does exist in INTERP to input modes defined in a sign convention different from that shown in figure 2.

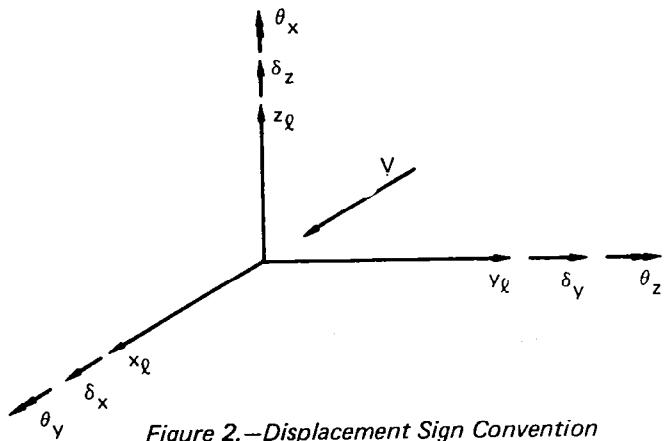


Figure 2.—Displacement Sign Convention

4.3 COORDINATE TRANSFORMATION

The location of any point can be expressed in reference or local axis coordinates. The transformation from one axis system to another is accomplished by applying the following transformation equation:

$$\begin{Bmatrix} x \\ y \\ z \end{Bmatrix}_L = [R] \begin{Bmatrix} X - XO \\ Y - YO \\ Z - ZO \end{Bmatrix}_R \quad (1)$$

where:

x_L, y_L, z_L = Local axis system coordinates of a point in space

X_R, Y_R, Z_R = Corresponding reference axis system coordinates

XO_R, YO_R, ZO_R = Reference axis system coordinates of the origin of the local axis system

$[R]$ = Euler rotation matrix which rotates the reference axis system into the local axis system

The transformation described by equation (1) consists of a translation that moves the reference axis system to the origin of the local axis system and a rotation that rotates the translated reference axis system into the local system (see fig. 3).

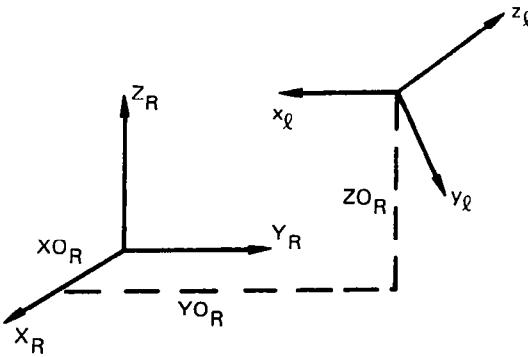


Figure 3.—Coordinate Transformation

The rotation matrix $[R]$ is defined by performing one to three order-dependent rotations and is written as:

$$[R] = [R_3][R_2][R_1] \quad (2)$$

where $[R_i]$ = the *i*th rotation matrix about an axis. The subscript *i* signifies the order of rotation. The rotational matrices that describe the rotational transformation about any one axis are:

about the x axis:

$$[R_\phi] = \begin{bmatrix} 1 & 0 & 0 \\ 0 & \cos \phi & \sin \phi \\ 0 & -\sin \phi & \cos \phi \end{bmatrix} \quad (3)$$

about the y axis:

$$[R_\theta] = \begin{bmatrix} \cos \theta & 0 & -\sin \theta \\ 0 & 1 & 0 \\ \sin \theta & 0 & \cos \theta \end{bmatrix} \quad (4)$$

about the z axis:

$$[R_\psi] = \begin{bmatrix} \cos \psi & \sin \psi & 0 \\ -\sin \psi & \cos \psi & 0 \\ 0 & 0 & 1 \end{bmatrix} \quad (5)$$

Thus the rotation matrix in equation (2) is built up from the proper combination of the matrixies given in equations (3) through (5). For example, for the rotation illustrated in figure 4 where the first rotation is about the y axis of the reference axis system, the second rotation is about the moved x axis, and the final rotation is about the z axis of the local axis system, the rotation matrix is given by:

$$[R] = [R_\psi][R_\phi][R_\theta] \quad (6)$$

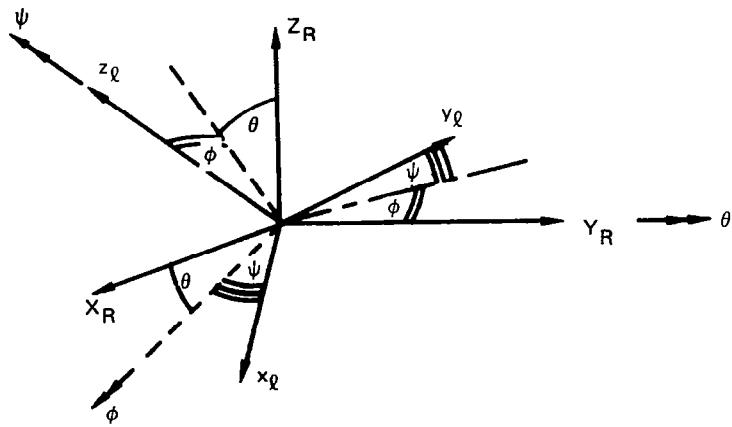


Figure 4.—Typical Rotational Transformation

A more detailed discussion of Euler angle definition can be found in reference 3.

The program places one restriction on the formation of equation (2). No two rotations may be about the same axis. One may not rotate first about the x axis, for example, then about the y axis, and finally about the x axis again. Rotations must take place about three different axes.

4.4 MODAL INTERPOLATION METHODS

The function of the interpolation program is to determine translations normal to an aerodynamic surface, and freestream slopes of the surface at points on the surface known as aerodynamic control points, from modal data generated by the user's vibrational analysis. The modal data consists of mode shapes and nodal coordinates.

The interpolation process is performed in two steps. First, nodal data, transformation data, and mode shape matrices [ϕ 's] for each surface are used to construct an array of interpolation coefficients called SA arrays. Second, the SA arrays for each surface are then used with the aerodynamic control-point locations for each surface to determine the translation normal to the surface, δ_z , the surface slopes parallel to the freestream, $d\delta_z/dx$, and the surface slopes perpendicular to the freestream, $d\delta_z/dy$.

Five interpolation methods are available for use. All methods except one require mode shapes defined in the local axis system of the surface. The type of method chosen for a surface is dependent upon the type of vibration analysis performed (i.e., beam vs. finite element) and the type of aerodynamic body to which it will apply.

Table 1 lists some typical uses of the different interpolation methods. The selection of any one method for interpolation on a surface is left completely to the discretion of the analyst. Since the quality of interpolated results is affected by such factors as smoothness of the modal input, distribution of the input nodes over the surface, the value of various parameters associated with each method, and the location of output nodes; it is only through the experience of using the different methods that an analyst can be assured of obtaining good interpolation results. When performing interpolation on a surface for the first time, it is recommended that the user examine the interpolated output to insure the proper results are being obtained. The following is a discussion of each method.

4.4.1 MOTION POINT

The motion point interpolation method uses modal displacements defined at a single node point to determine the motion at any set of output points (see fig. 5). For example, in a vibration analysis a nacelle may be modeled as a rigid body attached to a wing. In such a case, the motion of the nacelle is defined by the modal displacement of its center of gravity. Using the center of gravity as the input node, motion point can be used to determine the required displacements at the various control points of the slender body used to aerodynamically model the nacelle.

Table 1. — Typical Interpolation Method Uses

| Interpolation method | Source of modal data for a surface | Type of aerodynamic body surface represented |
|----------------------|------------------------------------|---|
| Motion point | Motion defined at a single node | Nacelle, fuselage, control surface |
| Motion axis | Motion defined on elastic axis | Wing, horizontal tail, vertical tail, fuselage, control surface |
| Surface spline | Finite element analysis | Wing, horizontal tail, vertical tail, control surface |
| Beam spline | Finite element analysis | Wing, horizontal tail, vertical tail, control surface |
| Polynomial | No modal input | All aerodynamic bodies |

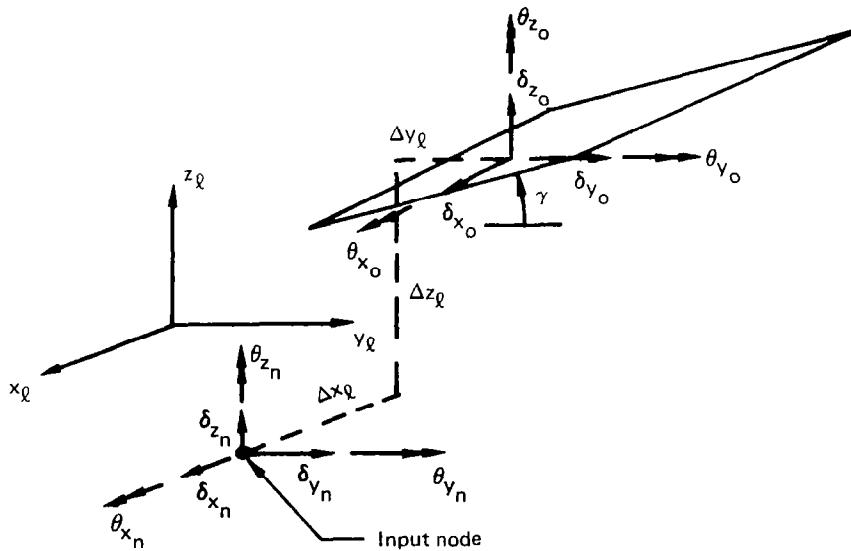


Figure 5.—Motion Point Interpolation

The determination of the output motion is made using the small angle rigid body displacement transformation, equation (7):

$$\begin{pmatrix} \delta_x \\ \delta_y \\ \delta_z \\ \theta_x \\ \theta_y \\ \theta_z \end{pmatrix}_o = \begin{bmatrix} 1 & 0 & 0 & 0 & \Delta z_\ell & -\Delta y_\ell \\ 0 & 1 & 0 & -\Delta z_\ell & 0 & \Delta x_\ell \\ 0 & 0 & 1 & \Delta y_\ell - \Delta x_\ell & 0 & 0 \\ 0 & 0 & 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 0 & 0 & 1 \end{bmatrix} \begin{pmatrix} \delta_x \\ \delta_y \\ \delta_z \\ \theta_x \\ \theta_y \\ \theta_z \end{pmatrix}_{node} \quad (7)$$

The quantities $\Delta x_\ell, \Delta y_\ell$, and Δz_ℓ represent the local axis system offsets between the input node and the output point. They are defined by:

$$\begin{aligned} \Delta x_\ell &= x_\ell_o - x_\ell_n \\ \Delta y_\ell &= y_\ell_o - y_\ell_n \\ \Delta z_\ell &= z_\ell_o - z_\ell_n \end{aligned} \quad (8)$$

The capability exists to orient the final motion to a surface that makes a dihedral angle, γ , with respect to the local x_ℓ, y_ℓ plane, equation (9):

$$\begin{aligned} \delta_z &= \delta_{z_o} (\cos \gamma) - \delta_{y_o} (\sin \gamma) \\ d\delta_z/dx &= -(\theta_{y_o} \cos \gamma + \theta_{z_o} \sin \gamma) \\ d\delta_z/dy &= \theta_{x_o} \end{aligned} \quad (9)$$

Though input motion for motion point may consist of all six displacements, when used with the DYLOFLEX system only three displacements, δ_z, θ_x and θ_y , should be used. This restriction is a result of the way other DYLOFLEX programs use the interpolated results. For bodies that experience both vertical and lateral motion (such as nacelles), this restriction will require the formation of two interpolation arrays; one with its local z-axis lying in the direction of vertical displacement and the second with its local z-axis lying in the direction of the lateral displacement.

4.4.2 MOTION AXIS

The motion axis interpolation method is most commonly used to determine the displacements and slopes on lifting surfaces and slender body axes when the mode shapes are generated from a lumped mass-beam model. In such cases, the modal displacements are associated with nodes that lie in a plane and define an axis composed

of straight line segments (e.g., the elastic axis of a high-aspect-ratio wing, or the hinge line of an aerodynamic control surface). The motion axis itself is defined by a series of definition points that have a reference line associated with them. The orientation of the reference lines is established by the user, and does not have to lie perpendicular to the motion axis (see fig. 6). The functions of the reference lines are to establish the interpolation regions over the surface and to determine attachment locations of the desired output points on the motion axis.

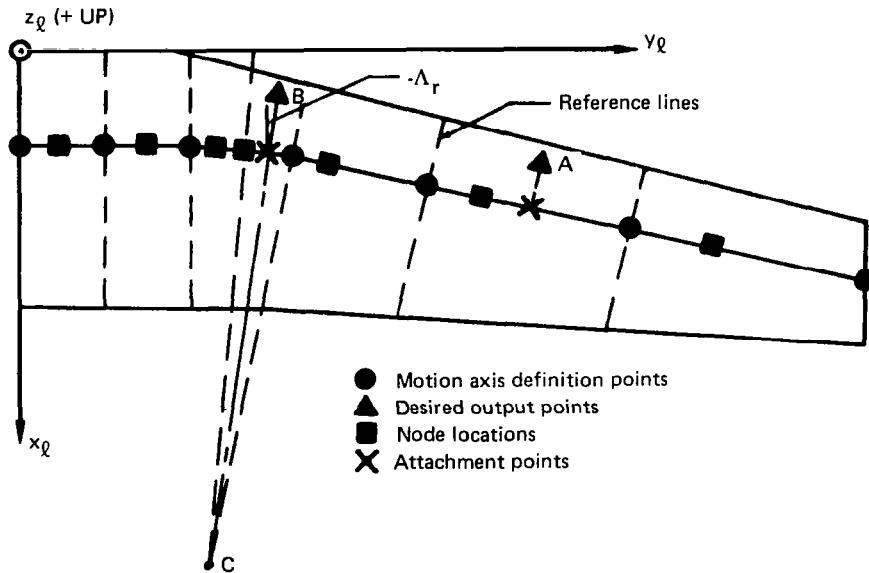


Figure 6.—Motion Axis Interpolation

Within each interpolation region, the motion axis is described by a cubic spline (eq. (10)); which is generated from the x-y coordinates of the motion axis definition points:

$$x = C_0 + C_1 y + C_2 y^2 + C_3 y^3 \quad y_i < y \leq y_{i+1} \quad (10)$$

where:

y_i, y_{i+1} = Inboard and outboard y locations of the ith interpolation region

C_0, C_1, C_2, C_3 = Cubic coefficients for the ith region

With the motion axis represented in this manner, the first and second derivatives will be continuous while maintaining a minimum of curvature over the interval (x_i, y_i) to (x_{i+1}, y_{i+1}) . It is important to note that in modeling an elastic axis that consists of straight line segments, care must be taken in choosing the proper location and number of motion axis definition points. Definition points should be placed as close to the axis

breakpoints as possible, and a sufficient number of points should be included in between breakpoints to keep the amount of curvature introduced by the cubic function to a minimum.

The closeness of the definition point spacings is a function of the associated reference line orientations. In order to obtain best results, it is advisable to have two adjacent reference lines intersect off the surface of interest (see point C of fig. 6). Thus, to meet this guideline, the spanwise spacing of motion axis definition points is a function of the relative difference between the respective reference line orientations and the size of the surface of interest.

The motion axis method uses only three of the six possible nodal displacements, vertical translation (δ_z) and the two rotations (θ_x and θ_y). The rotations may be oriented parallel and perpendicular to either the freestream or the motion axis. Again, when used for bodies that experience both vertical and lateral motion, two separate SA arrays must be formed; one with its local z axis lying in the vertical displacement direction and the second with its local z axis lying in the lateral displacement direction.

The motion at a desired output point is found by first determining into which region the output point falls. Use is then made of the orientations of the reference lines defining the region to determine the point of attachment of the output point on the motion axis. If the reference lines defining the region are parallel (as is the case with point A, fig. 6), then an attachment line is drawn from the output point to the motion axis with the same orientation as the two reference lines. If the reference lines are not parallel (as with point B, fig. 6), the determination of the attachment point becomes more involved. First, the intersection of the two reference lines is determined (point C of fig. 6). This point is known as the segment mapping point. Next a line is drawn from the mapping point to the output location. This line becomes the attachment line of the output point. The intersection of this attachment line with the motion axis defines the point of attachment of the output point. This point is known as the output point's associated reference point. Displacements at the reference point are then determined by using cubic spline functions in arc length, defined over each interpolation region, to interpolate from the nodal input points to the reference point.

Motions at the reference point are then transformed to the output locations along the rigid attachment link. The transform equations are:

$$\begin{aligned} \delta_{z_0} &= \delta_{z_r} + [\cos(\Lambda_r) * \theta_{y_r} - \sin(\Lambda_r) * \theta_{x_r}] \Delta r \\ d\delta_{z_0}/dx &= -\theta_{y_r} \\ d\delta_{z_0}/dy &= \theta_{x_r} \end{aligned} \quad (11)$$

where:

- $\delta_{z_r}, \theta_{x_r}, \theta_{y_r}$ = Vertical and rotational displacements at the reference point
- $\delta_{z_o}, d\delta_{z_o}/dx, d\delta_{z_o}/dy$ = Vertical displacements and slopes at output locations
- Λ_r = Orientation angle of the attachment line
- Δr = Distance along the attachment line from the attachment point to the output point (positive for output point forward of motion axis)

4.4.3 BEAM SPLINE

The beam spline interpolation method is an extension of the motion axis method. This method is ordinarily used to determine displacements and slopes on lifting surfaces using modal data determined by a finite element analysis. In the beam spline technique, motion is defined along two or more beams that lie in the x-y plane of the surface. This motion consists of translations normal to the surface (δ_z) and rotations (θ_x and θ_y) that must be defined parallel and perpendicular to the freestream. The relationship of the beams with respect to each other may vary from parallel to intersecting, with the only restriction being that any streamwise interpolation must be performed over a minimum of two beams (see fig. 7).

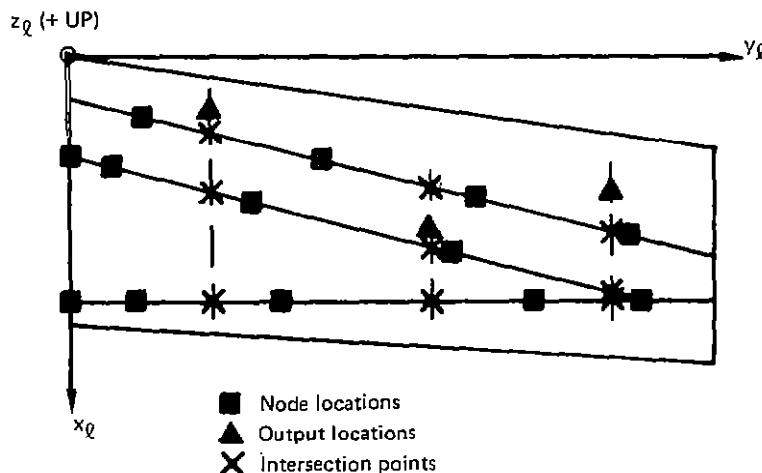


Figure 7.—Beam Spline Interpolation

Cubic spline functions of the form used in the motion axis method are determined for each beam, using the nodal locations assigned to each beam. These functions are combined with the nodal motions to generate a set of cubic functions in arc length (one for each beam) that are utilized to interpolate for motion at intersection points on the beams. The intersection points are determined by a streamwise cut made at the output point locations. The interpolated motion at the intersection points along any one streamwise cut form the set of data needed to generate a cubic function for each streamwise cut. The motion at the output points are then determined using the final set of streamwise cubic functions.

In some instances, beams may not extend the full span of the interpolation surface (see fig. 8). The user can extrapolate the input data of the shortened beams in the outboard and/or inboard direction. It is stated previously that to form the streamwise cubic functions used to interpolate to the desired output nodes, a minimum of two intersection points are required. This extrapolation capability allows the formation of the streamwise cubic function at locations on the surface where only one beam may be present. As is the case with all extrapolation processes, the results of the extrapolation should be examined by the user to insure their validity.

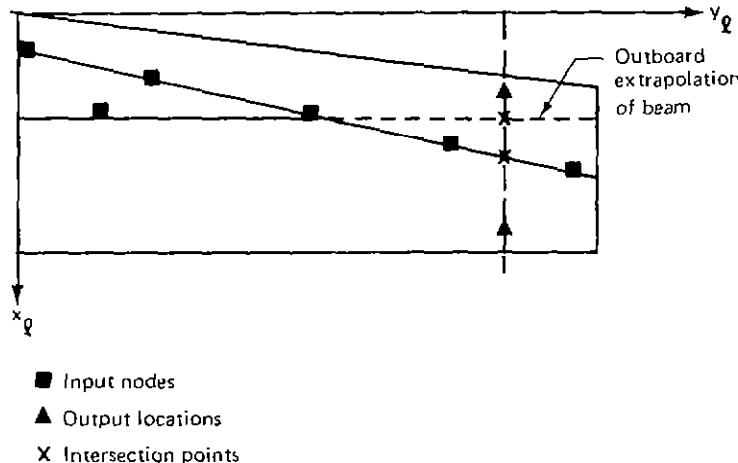


Figure 8. – Beam Spline Extrapolation

4.4.4 SURFACE SPLINE

The most general form of interpolation is the surface spline technique. This method uses the vertical deflections, δ_z , which are defined on a surface in a finite element analysis to develop a set of interpolation coefficients. The coefficients are determined by using

the solution to the differential equation of a circular isotropic plate of infinite radius subjected to point loads and pinned at the edges. The resulting expression for the deflection at any point is:

$$\delta_z(x,y) = \sum_{i=1}^N [\alpha_i r_i^2 \ln(r_i^2)] + \alpha_{N+1} + \alpha_{N+2}x + \alpha_{N+3}y \quad (12)$$

where:

$$r_i^2 = (x - x_i)^2 + (y - y_i)^2$$

N = Number of nodes on the surface

$\alpha_i, \alpha_{N+1}, \alpha_{N+2}, \alpha_{N+3}$ = Interpolation coefficients

The interpolation coefficients are solved for, by using equation (12) to generate a set of N equations:

$$\delta_z(x_i, y_i) = \sum_{j=1}^N [\alpha_j r_{ij}^2 \ln(r_{ij}^2)] + \alpha_{N+1} + \alpha_{N+2}x_i + \alpha_{N+3}y_i \quad (13)$$

$i = 1, N$

$$r_{ij}^2 = (x_i - x_j)^2 + (y_i - y_j)^2$$

along with the three additional equations:

$$\sum_{i=1}^N \alpha_i = \sum_{i=1}^N \alpha_i x_i = \sum_{i=1}^N \alpha_i y_i = 0 \quad (14)$$

which are derived from the plate boundary conditions. Equation (12) can be altered to include a smoothing factor, Sk_i that are used to affect the interpolated results:

$$\delta_z(x,y) = \sum_{i=1}^N [\alpha_i(r_i^2 \ln(r_i^2) + Sk_i)] + \alpha_{N+1} + \alpha_{N+2}x + \alpha_{N+3}y \quad (15)$$

A different smoothing factor may be applied to each node or one factor may be used for all the nodes on the surface. The choice of smoothing factors is completely arbitrary and is usually made after the analyst has examined the results of interpolation without employing any factors. It is important to note that if smoothing factors are used, interpolating back to the data input points will not give the exact input deflections because the effect of the smoothing factors is to relieve this constraint.

The surface slopes are given by:

$$d\delta_z(x,y)/dx = 2 \sum_{i=1}^N \alpha_i [1 + \ell n(r_i^2)] (x - x_i) + \alpha_{N+2}$$

and:

$$d\delta_z(x,y)/dy = 2 \sum_{i=1}^N \alpha_i [1 + \ell n(r_i^2)] (y - y_i) + \alpha_{N+3} \quad (16)$$

4.4.5 POLYNOMIAL

The last type of interpolation is the polynomial method. This method requires no modal input and can be used to define displacements on any type of aerodynamic surface. The user simply defines the order and the coefficients of a polynomial that describes the surface vertical deflection:

$$\delta_z(x,y) = \sum_{i=0}^n \sum_{j=0}^{n-i} C_{ij} x^i y^j$$

and:

$$d\delta_z/dx = \sum_{i=1}^n \sum_{j=0}^{n-i} i C_{ij} x^{i-1} y^j$$

$$d\delta_z/dy = \sum_{i=0}^n \sum_{j=1}^{n-i} j C_{ij} x^i y^{j-1} \quad (17)$$

4.5 PARENT SURFACE MODES

In defining the modal input for a surface, the capability exists to use the SA array of a previously defined surface to calculate the motion of another surface at a common point of attachment. The surface whose SA array is used is called the parent surface. The surface that uses the parent surface SA array is called the dependent surface. This option is most commonly used with the control surface rotation option described in the next section. If a control surface rotation is to be added to the basic set of modal freedoms, this option can be exercised to define the modal displacements along the control surface hinge line for the basic set of freedoms. In this way, the analyst may account for a moving control surface without having to rerun the basic vibration analysis. This option may also be used to define the motion at the attachment point of a rigid surface to a flexible surface. Then interpolating from the attachment point using the motion point method, the displacements over the rigid surface can be defined.

Nodal locations on the dependent surface are used as output points with the parent surface SA arrays to generate modal displacements at the dependent surface's nodal points. The surface vertical deflections and slopes obtained from the parent surface SA array then become the input motions for the dependent surface. Thus, the dependent surface input motions are given by:

$$\begin{aligned}\delta_{z_d} &= \delta_{z_p} \\ \theta_{x_d} &= d\delta_{z_p}/dy \\ \theta_{y_d} &= -d\delta_{z_p}/dx\end{aligned}\tag{18}$$

where the subscripts denote:

p = Parent surface

d = Dependent surface

The motions of the dependent surface can be used with any interpolation method that requires modal input. Proper use of the parent surface option requires that the parent and dependent surfaces have the same local axis system.

4.6 CONTROL SURFACE ROTATIONS

The interpolation program has the capability of adding a control surface rotational freedom to the basic set of modal freedoms. The user need only define the hinge line location and the amount of rotation about the hinge line (see fig. 9). The surface vertical deflection and slopes are calculated, assuming a rigid rotation of the control surface, and are given by the following equations:

(R is negative for points lying aft of the hinge line)

$$\begin{aligned}\delta_z &= R * \theta_H \\ \Lambda_H &= \tan^{-1} \frac{x_{H_O} - x_{H_I}}{y_{H_O} - y_{H_I}} \\ \theta_y &= \theta_H \cos \Lambda_H \\ \theta_x &= \theta_H \sin \Lambda_H\end{aligned}\tag{19}$$

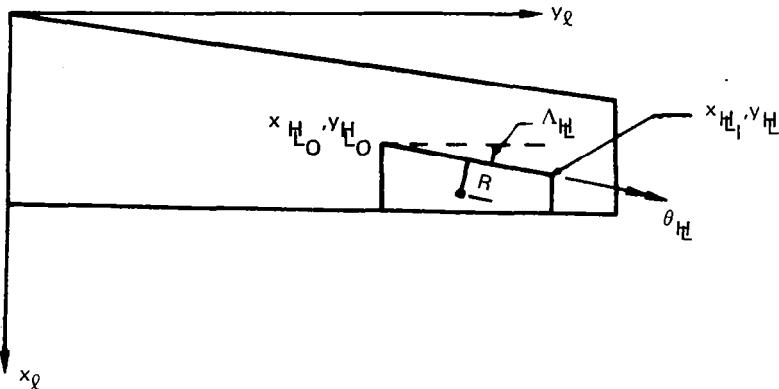


Figure 9. — Control Surface Rotation

4.7 AERODYNAMIC AXIS SHIFT

The formulation of the interpolation (SA) arrays is based on the local axis system that is defined with respect to the structural idealization. This local axis system will be denoted as the local structural axis system. The aerodynamic control points, however, are usually defined relative to a local axis system that is designated with respect to the aerodynamic idealization. This local axis will be called local aerodynamic axis system. It is often the case that the local structural axis system and its respective aerodynamic axis system become misaligned. Restrictions imposed by the aerodynamic idealization may place the local aerodynamic axis outboard or inboard, fore or aft, of the local structural axis. It is also a possibility that the simple calculation of the difference between the two origins will not yield the right amount of correction needed for proper spatial alignment (see fig. 10).

Therefore, the capability exists to adjust the coordinates of the aerodynamic control points in such a way as to bring them into the proper spatial alignment with the local structural axis. This adjustment is accomplished under the following two assumptions:

- The local aerodynamic axis x,y plane must lie in or parallel to the local structural axis x,y plane.
- The axes of the local aerodynamic system are parallel to their respective axes of the structural system.

Under these assumptions, the local structural axis system coordinates of the aerodynamic control points become:

$$\begin{Bmatrix} x \\ y \\ z \end{Bmatrix}_{l_s} = [R] \left\{ \begin{Bmatrix} X \\ Y \\ Z \end{Bmatrix}_R - \begin{Bmatrix} XO_s \\ YO_s \\ ZO_s \end{Bmatrix}_R \right\} - \begin{Bmatrix} \Delta x_{SH} \\ \Delta y_{SH} \\ O \end{Bmatrix}_{l_s} \quad (20)$$

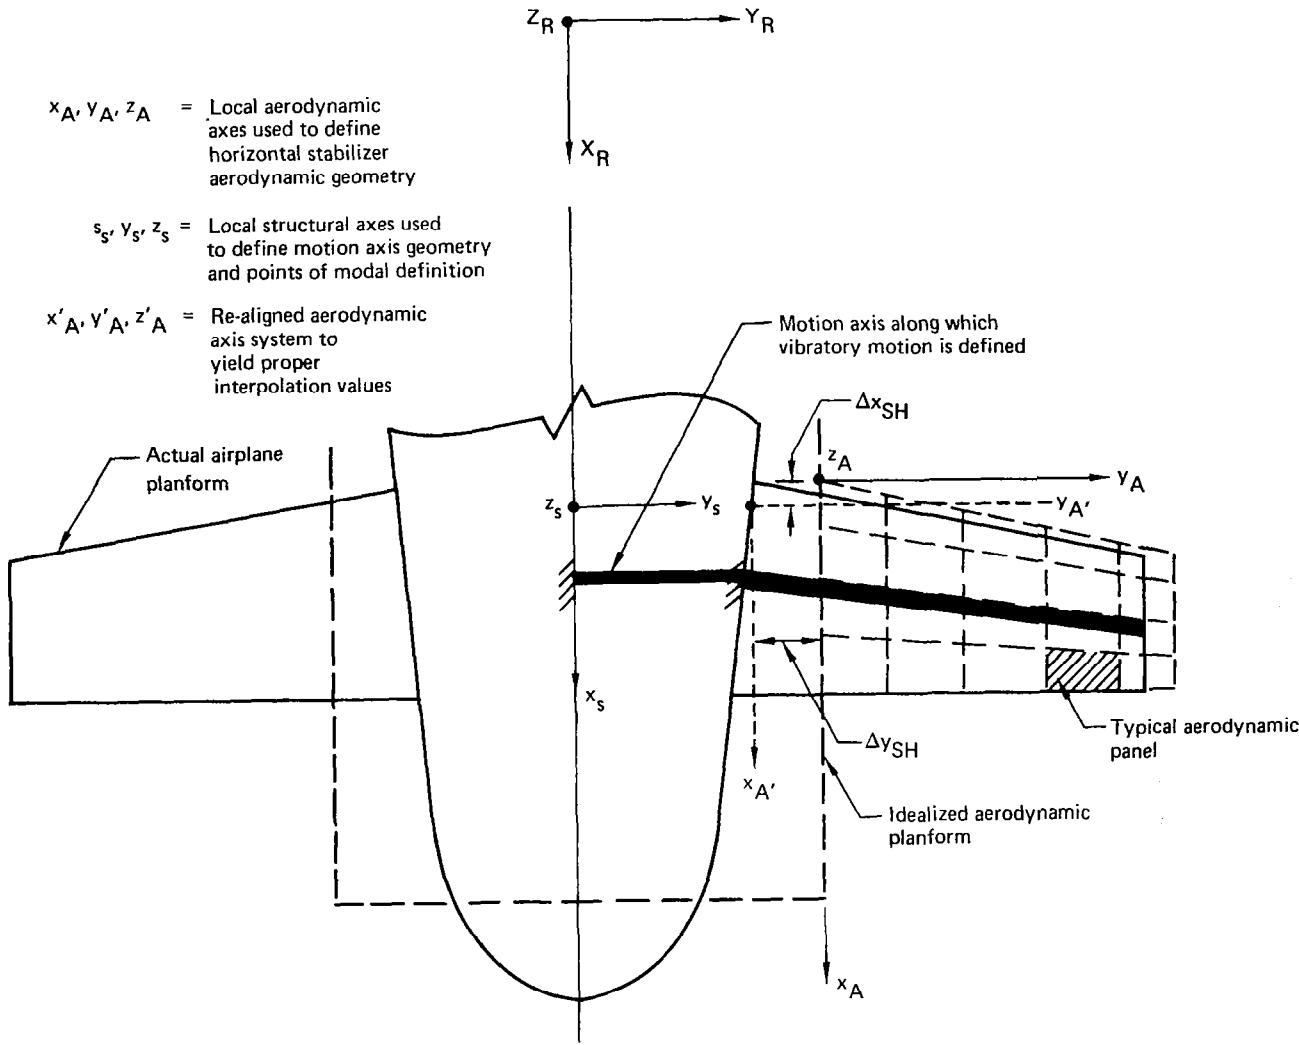


Figure 10. – Aerodynamic Axis Shift

where:

$$\begin{Bmatrix} x \\ y \\ z \end{Bmatrix}_{\ell_s} = \text{Coordinates of an aerodynamic control point defined in the local structural axis system}$$

$$[R] = \text{Euler rotation matrix}$$

$$\begin{Bmatrix} X \\ Y \\ Z \end{Bmatrix}_R = \text{Reference axis system coordinates of the aerodynamic control points}$$

$$\begin{Bmatrix} XO_s \\ YO_s \\ ZO_s \end{Bmatrix}_R = \text{Reference axis system coordinates of the origin of the local structural axis}$$

$$\begin{Bmatrix} \Delta x_{SH} \\ \Delta y_{SH} \\ 0 \end{Bmatrix}_{\ell_s} = \text{x and y shift values measured in the local structural axis and defined as the correction needed to place the local aerodynamic axis in the correct position with respect to the local structural axis}$$

5.0 PROGRAM DESIGN AND STRUCTURE

5.1 FORMATION OF THE SA ARRAYS

SA array formation is carried out for each individual surface in six steps:

- Defining the surface orientation
- Inputting and sorting the nodal coordinates
- Defining scale factors
- Inputting and sorting the mode shapes
- Adding rigid surface freedoms if required
- Selecting the sorted freedoms and the type of modal interpolation method

The input required for each step may vary from surface to surface, depending upon the type of modal input and the interpolation method chosen. One problem variable that is constant for all surfaces is the total number of modal freedoms that are to be used to form the SA arrays, NTMODE (card set 4.0).

The number of modal freedoms used may be greater than or less than the number of modes input from the vibrational data. This gives the user the capability to increase or decrease the number of modes used in the structural analysis. By setting NTMODE greater than the number of input modes, additional freedoms can be added to the basic set of modes. In the same respect, making NTMODE smaller than the input freedoms allows the user to select the freedoms that are to be retained for the interpolation problem.

Surface Orientation

The orientation of the surface with respect to the reference axis system is established by inputting the reference axis system coordinates of the origin of the surface's local axis system and the Euler triad and rotation order required to rotate the reference axis system into the local axis system (card set 6.0). This data defines the coordinate transformation described in section 4.3. The transformation is needed only if nodal locations are input in reference axis system coordinates, or if surface orientation information is needed by other programs using data output by this program L215 (INTERP).

Nodal Input

Nodal data may be input via cards or magnetic file (card set 7.0), and the nodal coordinates may be defined in either the reference axis system or the surface's local axis system. If the coordinates are input in terms of the reference axis system, the transformation discussed in the previous paragraph is applied to obtain the local axis system locations of the nodes. Local axis system coordinates are needed because all interpolation is carried out in the local axis system.

Included as part of the nodal input data is a set of node orientation angles. The motion associated with each node may have an orientation that is different from that of the surface local axis system. For example, motion defined along an elastic axis might be oriented parallel and perpendicular to the axis and not to the freestream. In such a case, the surface rotation matrix would not describe the proper orientation of the nodal displacement with respect to the reference axis system. Since the modal data can be used in other programs, it is important to insure that the proper orientation is transmitted to these other programs. Therefore, the capability exists to input a set of Euler triads for each node.

These angles are not used within the interpolation program itself, but are merely present for passing information on to other programs. It is important to note that the Euler triad specified for each node will be applied in the same order as the surface's Euler triad specified on card 6.2. Also, the surface orientation angles given on card 6.2 will be used for any nodal angles that are not input. Thus, if the nodal motions of a surface only vary from the surface orientation by a sweep angle, the user need only input the node sweep angles. The other two Euler angles will be taken from the surface's Euler triad.

Once the node locations and orientations have been established, the only remaining task is the sorting of the input nodes. This is accomplished by the use of the nodal mapping option provided in card set 8.0. The sorting or mapping process is accomplished by the filling in of a null matrix. The row size of the null matrix may be less than or equal to the row size of the input matrix. In this way the number of nodes the analyst wishes to use in forming the SA arrays for the surface may be reduced. Mapping is essentially a re-ordering of the rows of the input coordinate data (see fig.11). If the mapping option is not exercised, the nodes will be used in the order in which they are read.

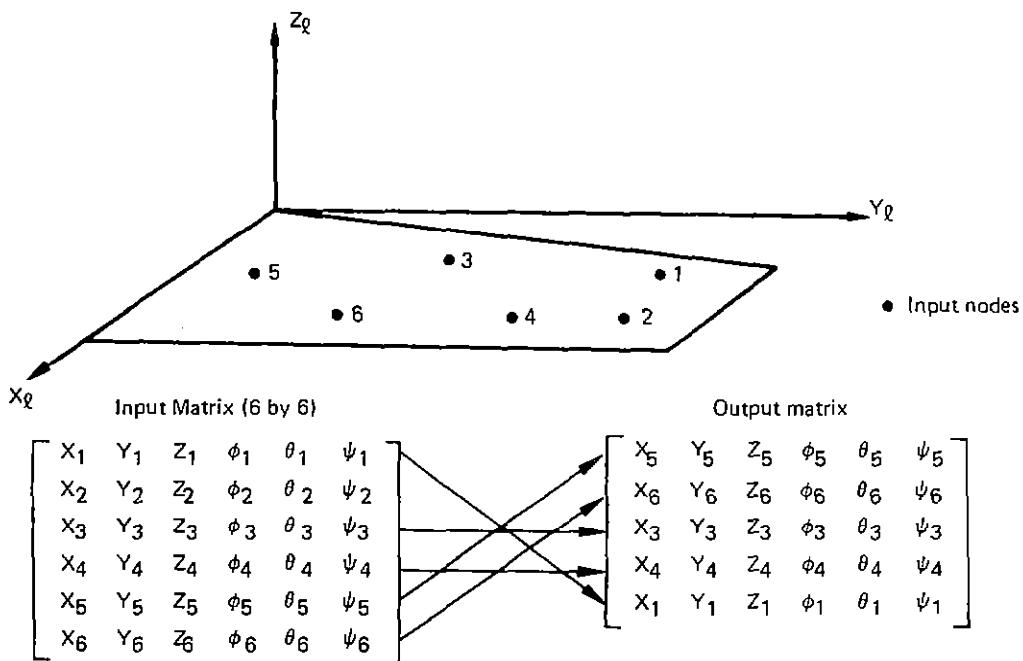


Figure 11. — Nodal Mapping

Scale Factors

The major function of the scale factors is to define the input motion which is used by the SA arrays in the sign convention shown in figure 2. Combining this capability with the modal sorting ability described next, the analyst can use vibration data defined in a different sign convention. The scale factors, though appearing before the sorting cards in the input data flow, are applied to the modal displacements after sorting has taken place. Thus, a scale factor on a δ_z motion refers to the sorted δ_z motion and not the δ_z as defined in the vibration analysis. The scale factors only affect the mode shapes as they are used by the SA array, and are not applied to the sorted modes output on the magnetic file SATAP. Thus, one is able to perform a sign change on the input modes to make the motion compatible with the interpolation sign convention, yet leave the modes in their original sign convention to be used by other programs.

The dependent surface's scalars must have the same values as the parent surface's scalars to maintain the sign convention consistency between surfaces. Parent surface modal displacements, obtained from the parent surface SA array for use as input motion for a dependent surface, are returned to their original values before being used by the dependant surface. This is done to maintain a consistent sign convention between the sorted parent input modes and the sorted dependent input modes. Any modes appended to the parent surface must be defined in the original sign convention of the parent surface. Any rigid surface modes that are defined in the local axis system of the surface are redefined to be consistent with the other input modes of the surface before being appended to other modes.

Mode Shape Input

The modal displacement data for a surface can be input from two sources:

- Internal, using a previously defined SA array
- External, using mode shapes input via cards and/or magnetic file

The capability exists to use either one or both of these sources to compile the mode shape data needed for the surface SA arrays (card sets 10.0, 11.0, and 12.0).

The internal generation of mode shapes is done using the parent surface concept discussed in section 4.5. The user need only specify which previously defined SA array shall be used to generate the nodal displacements.

Mode shapes coming from external sources may be input in one or both of the following forms:

- Combined freedoms – One large matrix containing all the allowed displacements for each node (card set 11.0)
- Single freedoms – A set of up to six individual matrices with each matrix containing one type of motion for each node (card set 12.0)

Modal mapping capability exists with both forms and is used to place the modal data in single freedom format.

The modal mapping process is similar to the nodal mapping discussed earlier. Here, however, six null matrices are generated. Each matrix will eventually contain the desired mode shapes for the surface, and each will describe one type of motion for all the nodes. The process of filling the null matrices is carried out as directed by the user (see figs. 12 and 13). Sorting of mode shapes in this manner allows the user the freedom to reorder and redefine the input motion. It is this sorted motion (single freedom format) that is used as input for the creation of the SA array.

Rigid Surface Modes

Though modal freedoms may be merged by using both the combined freedom and single freedom input formats with a single surface, the rigid surface option allows the user a simple method of adding a rigid surface rotation mode to the basic set of input data (card set 12.0). This option, when used with the parent surface options, provides a convenient way of generating modal displacement for a control surface. Given the hinge line location and the amount of rotation about the hinge line, the interpolation program calculates the vertical displacements and slopes of the control surface node points. This motion is then appended to the basic set of modal data, which was generated using the point combined freedom input, the single freedom input, or the parent surface option.

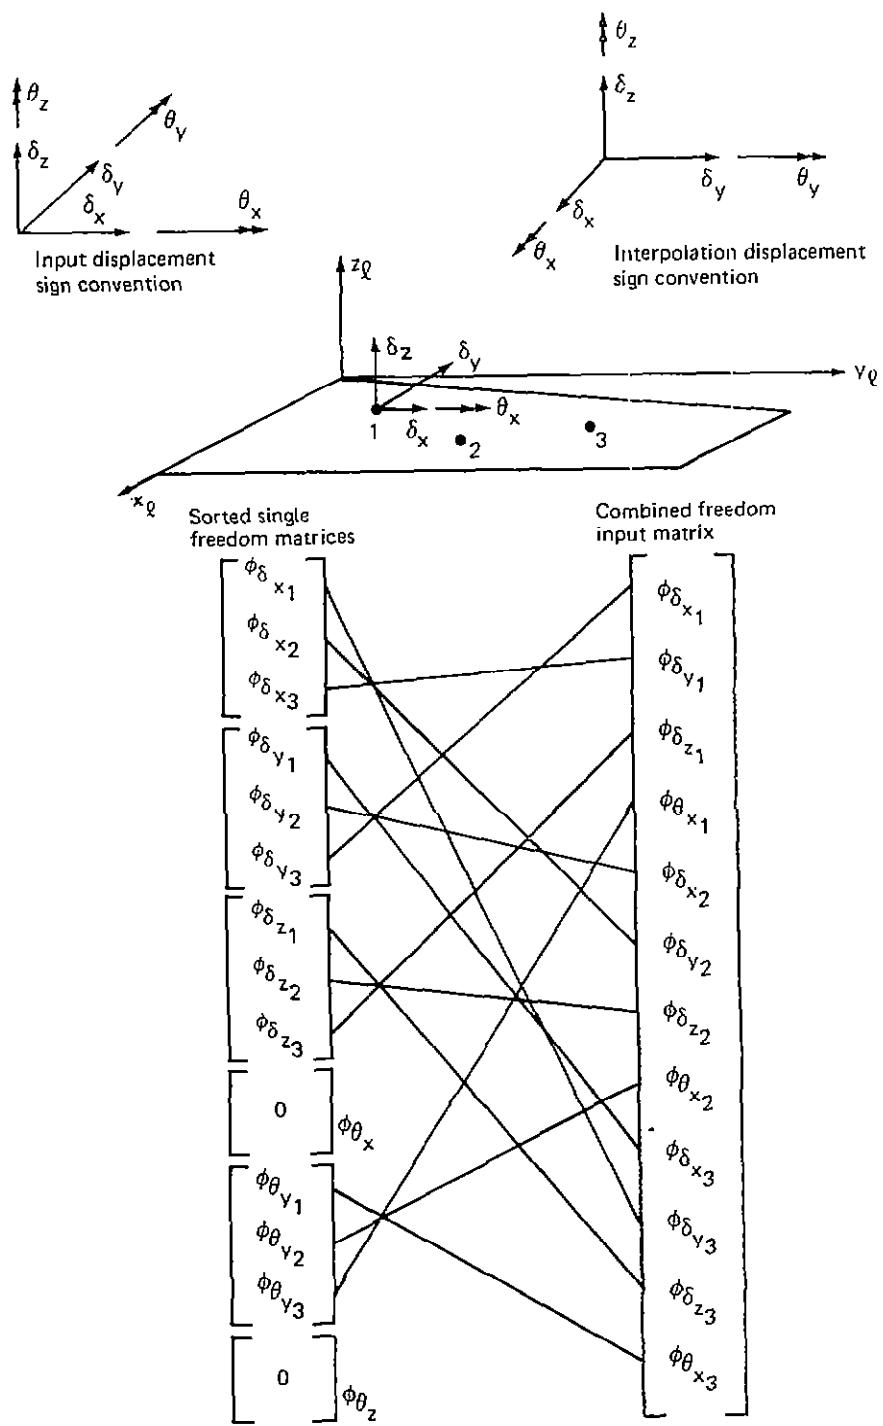


Figure 12. – Combined Freedom Mapping

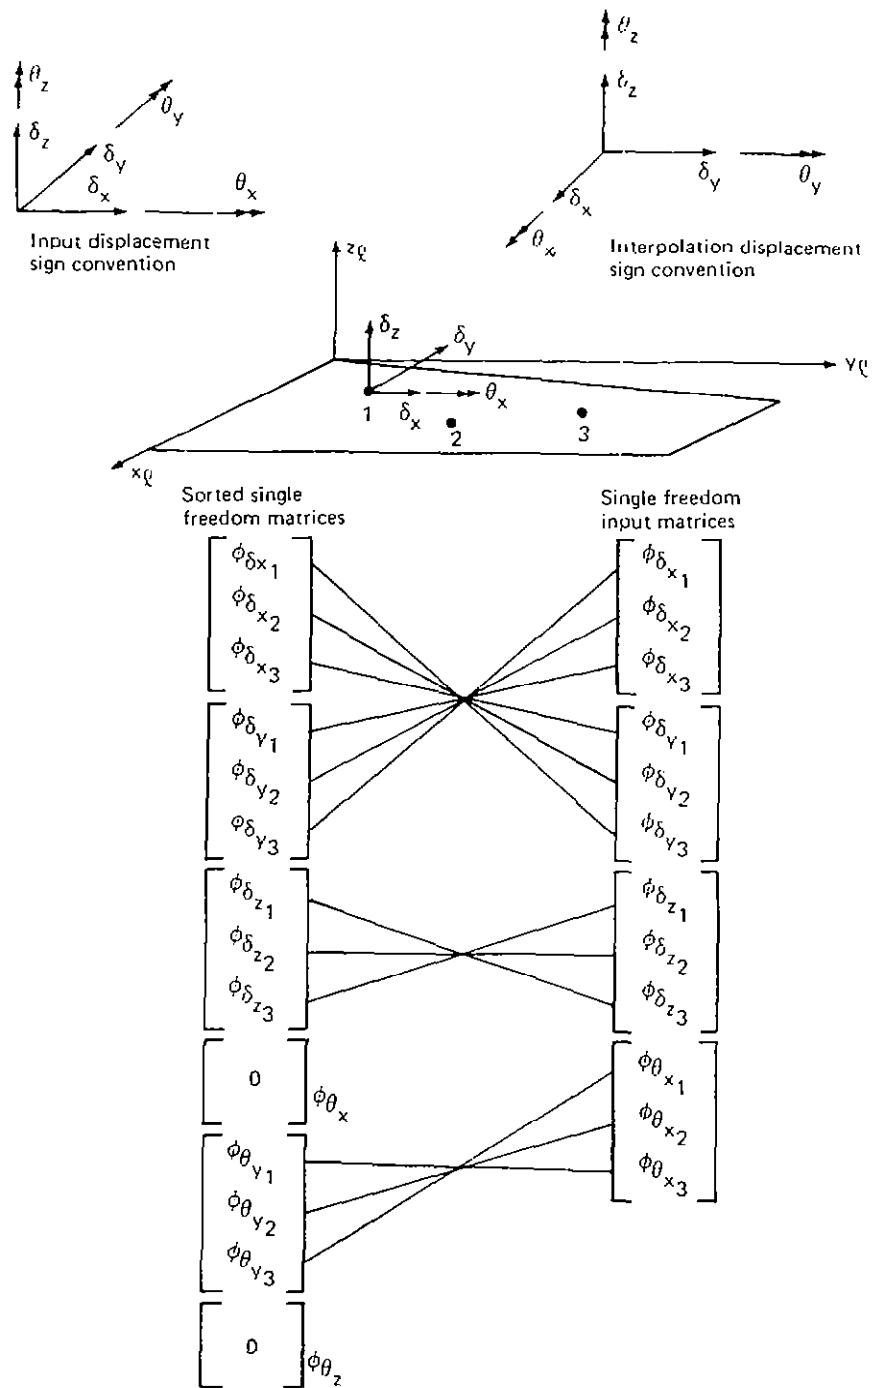


Figure 13. – Single Freedom Mapping

Selection of Interpolation Method

The last step in the SA array formation process is the selection of the sorted freedoms to be used (card set 14.0) and the selection of the interpolation method (card sets 15.0 through 19.0). The freedoms that one uses will depend upon the type of interpolation chosen. Table 2 lists the interpolation methods and the permitted modal input associated with each method. It is the user's responsibility to insure that the proper motion types are used with the selected method so that proper interpolation results are obtained. Multiple SA arrays (up to six) can be generated for any one surface by repeated use of card set 14.0 and the associated card set for the particular type of interpolation method.

Table 2. — Displacement Inputs, Need for the Different Interpolation Methods

| Interpolation Method | No. of input Displacements | Comments |
|----------------------|----------------------------|---|
| Motion point | 1 to 6 | Though all six modal displacements may be input for this method, DYLOFLEX users should only input the three displacements of δ_z , θ_x and θ_y . |
| Motion axis | 3 | The three displacement δ_z , θ_x and θ_y may be defined relative to the freestream or to the local motion axis. |
| Beam spline | 1 to 3 | There must be one translation, δ_z . The θ_y rotation is optional and is not needed for the $d\delta_z/dx$ derivative calculation. θ_x displacement is also optional, but is required if the $d\delta_z/dy$ derivative is desired. |
| Surface spline | 1 | The local δ_z displacement is the only input required |
| Polynomial | 0 | No modal data required |

5.2 DETERMINATION OF INTERPOLATED MOTION

The second phase of the interpolation program deals with the determination of local vertical translations and freestream slopes at specified output locations. This phase of the program may be executed by itself using SA arrays generated by a previous run, or it may be executed in conjunction with the first phase of the program as part of the same run. Since the downstream programs of the DYLOFLEX system only use the SA arrays from INTERP, the analyst has no means of judging the quality of the interpolation without executing some of the downstream programs. Thus the primary purpose of this phase is to provide the user with an easy means of examining the quality of the interpolation arrays that have been defined in the first phase of INTERP.

The determination of interpolated motion introduces another local axis system called the local aerodynamic axis system. This system may have its origin at a different location with respect to the local structural axis which was used to develop the SA arrays, but it is required that the Euler triad used to describe the orientation of the local structural axes must also apply to the local aerodynamic axes. The location of the local aerodynamic axis system is defined by inputting the reference axis system coordinates of the origin of the local aerodynamic axis system (card set 24.0). The capability exists to shift the aerodynamic axis system with respect to the local structural axes. Card set 24.0 contains the variables XSH and YSH. These variables are the amount of shift between the desired final aerodynamic axis location and the location of the aerodynamic axis used for input. The values are measured in the local structural axis system. Figure 14 illustrates the use of the shift capability.

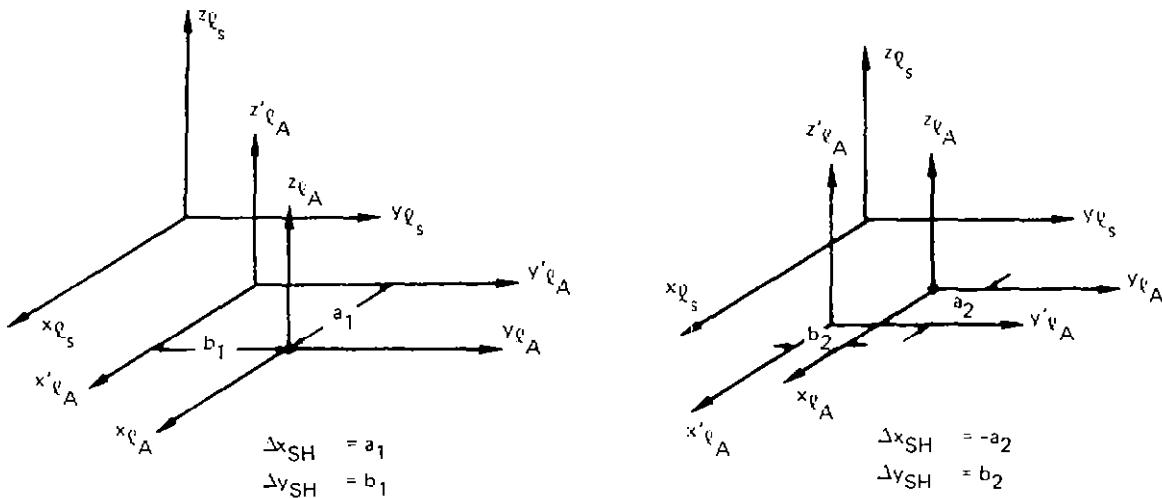


Figure 14. --Aerodynamic Axis Shifting

All output points that can be defined with the same local aerodynamic axis system may be considered as one set of data. The set grouping of output points can be independent of the surface grouping used in forming the SA arrays. Thus a set of output points may use more than one set of surface data. Take, for example, a wing having a moving control surface as shown in figure 15. The desired output points can be regarded as one set of data, yet two SA arrays may have been used to define the interpolation coefficients (see parent surface concept of section 4.5). The criterion for using SA arrays from different surface groupings for one set of output points is that the SA arrays must have been formed using the same structural axis system. For surfaces having more than one SA array, only the first SA array for the surface will be used. All others are ignored.

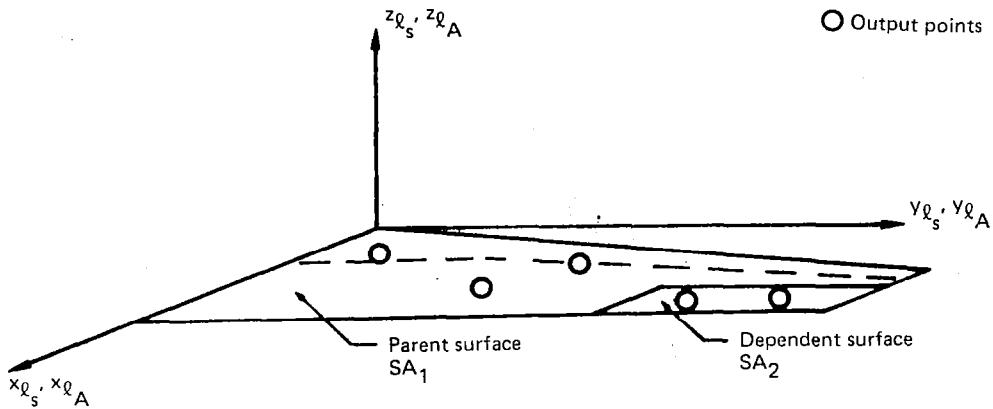


Figure 15. — Wing With Control Surface

The number of modes used for a set of output points may be less than or equal to the number used to form the SA arrays. If multiple SA arrays are used, the analyst can designate the number of modes to use, or elect the default option, in which case the total number of modes used will be taken from the first SA array encountered.

The user also has the option to rotate the interpolated motion to an orientation different from the surface orientation. The rotation is a simple dihedral rotation (fig. 16). This capability is useful when determining the normal motion on the panels of an interference body. The motion of the body, which is usually defined on the body's centerline, can be interpolated to the desired panel locations and then rotated into the normal of the panel. Each point in the output set may have a unique rotation, or one dihedral correction may be used for the entire set. This dihedral correction is given by equation (9), with the dihedral correction angle defined as

$$\gamma = \gamma_{\hat{n}} - \gamma_s$$

where:

γ_s = The local surface dihedral angle

$\gamma_{\hat{n}}$ = The unit normal orientation with respect to the z reference axis

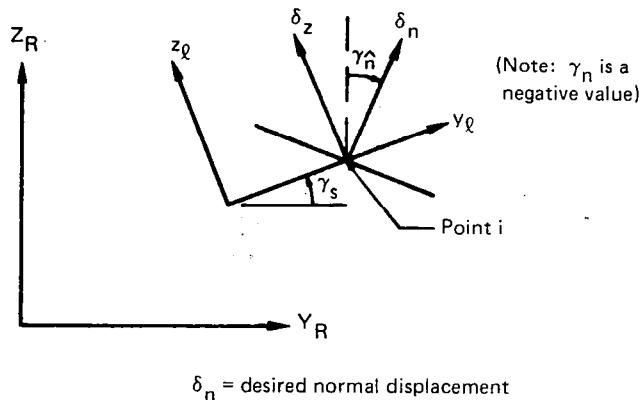


Figure 16. – Output Dihedral Correction

5.3 PROGRAM OVERLAY STRUCTURE

The L215 (INTERP) program is structured as an overlay system (see fig. 17), that carries out the execution in two phases. The (0,0) L215 and (1,0) INTERP overlays drive these two phases by calling into execution the secondary overlays requested by the user via card input data.

Phase I – Generate SA Arrays

| | |
|----------------------|-----------------------------|
| Overlay(1,1) RDEDIT | Read and edit input data |
| Overlay (1,2) BEAM | Beam spline SA generator |
| Overlay (1,3) MOTA | Motion axis SA generator |
| Overlay (1,4) MOTP | Motion point SA generator |
| Overlay (1,5) POLY | Polynomial SA generator |
| Overlay (1,6) SURF | Surface spline SA generator |
| Overlay (1,7) RESULT | Save SA on SATAP |

The (1,1) overlay RDEDIT reads and edits the card input data describing the formulation of SA arrays. Also, RDEDIT reads from user-specified files the nodal locations and modal displacements (translations and rotations). All of the edited input data is written onto the L215 (INTERP) scratch random file named SCRAND.

Next, the appropriate SA generation overlay is called. It reads the input data from SCRAND, generates the SA array, and writes it onto SCRAND.

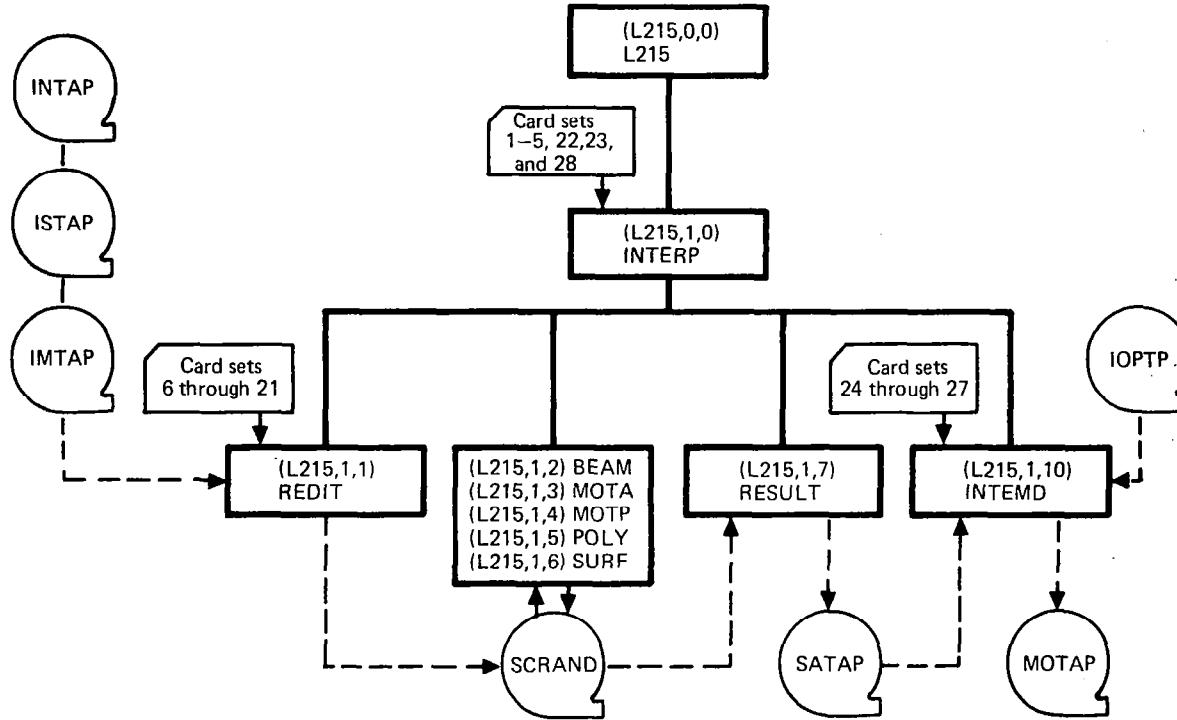


Figure 17. – Overlay Structure and Input/Output Files

Finally, the (1,7) overlay RESULT reads the single freedoms (ϕ 's), nodal locations, and SA array from SCRAND and writes them onto the file SATAP.

Phase II - Determine Modes at Control Points

The (1,10) overlay INTEMD is called only when the user requests that mode shapes be found for specified control points. INTEMD reads the control point locations (from cards or a user-specified file) and the proper SA array from SATAP. It performs the interpolation using the SA array and writes the final output mode shapes on the file MOTAP.

6.0 COMPUTER PROGRAM USAGE

6.1 MACHINE REQUIREMENTS

The machine requirements for an execution of the modal interpolation program L215 are:

| | |
|--------------|--|
| Card reader | To read control cards and card input data |
| Printer | To print the input data, standard output results, and diagnostic messages |
| Disk storage | All magnetic files not specifically defined as magnetic tapes are assumed to be disk files |
| Tape drive | For "permanent" storage of data on magnetic files, which are copied to and from magnetic tapes with control cards before and after program execution |

6.2 OPERATING SYSTEM

L215 is written in FORTRAN for CDC 6000 or CYBER equipment. It may be compiled with either RUN or FTN compilers. It will run under the KRONOS 2.1 or NOS operating systems.

6.3 CONTROL CARDS

The following control cards are used to retrieve the absolute binary file from a master tape and execute the L215 program.

Job card
Account card

Prepare any input magnetic files

```
REQUEST(MASTER,VSN=66****,LB=KL,F=I)
REWIND(MASTER)
SKIPF (MASTER)
COPYBF(MASTER,L215)
RETURN(MASTER)
L215
```

Save any required output file

EXIT.

DMP(0, maximum field length)

End-of-record

\$INTERpolation initialization card

Required data cards

\$QUIT terminating interpolation data

End-of-file

6.4 RESOURCES ESTIMATES

Field Length

The field length required by L215 is dependent upon the problem size and the method of interpolation used. Core size must be requested for the largest module to be run. For a crude estimate, table 3 shows the field length required to run a set of sample problems. A more accurate field length estimate can be calculated by the equation below:

$$\text{Field Length} = \text{Maximum of } \left\{ \begin{array}{l} \text{RDEDIT} \\ \text{METHOD} \\ \text{INTEMD} \\ (\text{Option for interpolated output}) \end{array} \right\}$$

RDEDIT has a value of:

$$\text{RDEDIT} = 75300g + \text{maximum of options used} \quad \left\{ \begin{array}{l} \text{Normal modes} \\ \text{Rigid surface} \\ \text{Parent surface} \end{array} \right\}$$

where:

$$\text{Normal modes} = \text{NNODES} * \text{NTMODE} + \text{NRPHI} * \text{NCPHI}$$

$$\text{Rigid surface} = 6 * (\text{NNODES} * \text{NMODRS}) + 12 * \text{NNODES} + \text{NNODES} * \text{NTMODE}$$

$$\text{Parent Surface} = 3 * (\text{NNODES} * \text{NTMODE}) + 12 * \text{NNODES} + \text{NSAE}$$

Table 3.—Sample Problem Size and Resources Used

| TEST CASE NUMBER | NUMBER OF NODES | NUMBER OF MODES | SIZE OF ROW | MODE SHAPE COLUMN | METHOD | FIELD LENGTH USED | CP SECONDS | RESIDENCE SECONDS |
|------------------|-----------------|-----------------|-------------|-------------------|----------------|--------------------|------------|-------------------|
| 1A | 4 | 3 | 4 | 3 | BEAM SPLINE | 75600 ₈ | 2 | .04 |
| 1B | 3 | 3 | 3 | 3 | MOTION AXIS | 75600 ₈ | 2 | .12 |
| 1C | 1 | 5 | 3 | 3 | MOTION POINT | 75600 ₈ | 2 | .06 |
| 1D | | 3 | | | POLYNOMIAL | 75600 ₈ | 2 | .06 |
| 1E | 4 | 4 | 4 | 3 | SURFACE SPLINE | 75600 ₈ | 2 | .12 |
| 3 | 34 | 11 | 102 | 8 | MOTION AXIS | 77600 ₈ | 12 | .42 |
| 4 | 34 | 5 | 102 | 3 | MOTION AXIS | 76300 ₈ | 6 | .20 |

and:

NNODES = Number of nodes
NTMODE = Number of modes
NRPHI = Number of rows in the input mode matrix
NCPHI = Number of columns in the input mode matrix
NMODRS = Number of rigid surface modes
NSAE = Number of element in the SA array (see below)

METHOD has a value that is a function of one of the five methods used: BEAM SPLINE, MOTIONAXIS, MOTIONPOINT, POLYNOMIAL, or SURFACE SPLINE. Values are given below:

BEAM SPLINE = $52600_8 + 3*(NNODES*NTMODE) + 6*NNODES + NSAE$
MOTIONAXIS = $54000_8 + 3*(NNODES*NTMODE) + 6*NNODES + NSAE$
MOTIONPOINT = $47500_8 + 6*(NNODES*NTMODE) + 3*NNODES + NSAE$
POLYNOMIAL = $47000_8 + ((IORD+1)*(IORD+2))/2 + 30 + NSAE$
SURFACE SPLINE = $51500_8 + (NNODES*NTMODE) + 3*NNODES + NSAE$

where NSAE, the number of element in the SA array, is given below for each method:

Beam spline

NSAE = $17 + 6*NNODES + MAXO(8*MAXPTS,13*NBEAM) + ((INDC + 3)/2)*2*NNODES*NTMODE$

For MAXO(A,B), use the larger of the two arguments.

Motion axis

NSAE = $9 + 10*NDEF + NNODES + 6*NNODES*NTMODE + 3*NTMODE$

Motion point

NSAE = $10 + 6*NTMODE$

Polynomial

NSAE = 8 = NTMODE*((IORD + 1)*(IORD + 2))/2

Surface spline

NSAE = MAXO (F1,F2)

with **F1** = 17 + 2*NNODES + (NNODES + 3)*(NTMODE + 2) and
F2 = (NNODES + 3)**2 + (NNODES + 3)

where:

NNODES = Number of nodes

NTMODE = Number of modes

MAXPTS = Maximum number of points per beam

NBEAM = Number of beams

INDC = Indicator for freedoms

= 0, TZ only

= 1, TZ and RX

= 2, TZ and RY

= 3, TZ, RX, and RY

NDEF = Number of definition points

IORD = Order (degree) of polynomial

INTEMD, used only when interpolated output is requested, has a value as follows:

INTEMD = 71400₈ + 5*NOUTL + 3*(NOUTL*NTMODE) + NSAE

where **NOUTL** = number of output locations.

Note: The numbers computed from the given equations must be converted to an octal base number before adding to the program field length to find the required field length

Time Estimate

The central processor time required to run the program is dependent upon the problem size. The total time estimate would be the sum of the estimates for all surfaces. For a

single surface, IS, the time estimate in seconds should be:

$$CP_{IS} = 2 + (NMODES * NNODES) / 100$$

where:

NMODES = Number of modes

NNODES = Number of nodes defining the surface

Printed Output

The printed output line limit is set to 40 000 lines at compilation time. This should be sufficient for any L215 program execution. The average line count is about 1200 lines.

6.5 INPUT DATA

The input data media used in the L215 program consist of cards and magnetic files. The card input data is described in section 6.5.1 and the magnetic file input data is described in section 6.5.3.

6.5.1 Card Input

All related blocks of card input data will be introduced, and in some cases terminated, with keywords located in the first ten characters of a card. In general, only the first five characters of the keyword will be checked to determine which block of data is to be read. The values of variables associated with the keyword will be read in fixed field formats either on the same card as the keyword or on the card(s) following. Unless otherwise noted, all variables appearing on optional cards will assume their default values if the card is omitted.

The special character "\$" is used to denote program directive cards that begin and end L215 data (\$INTE and \$QUIT) and bracket data for the two phases of this program (\$SURF-\$END and \$MODE-\$END).

Note: All underlined capital characters contained in the keyword or variable fields of the card descriptions must be left justified and punched in the card columns designated in the columns field of the card set.

Figure 18 provides the overall picture of the card input data flow. Following figure 18 is a detailed description of each card set.

Card Set 1.0 - Modal Interpolation Card

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|--|
| 1-10 | <u>\$INTE</u> rpola | A10 | The \$INTErpolation card indicates that the data following is for the modal interpolation program. This card must be the first card read by the modal interpolation program. |

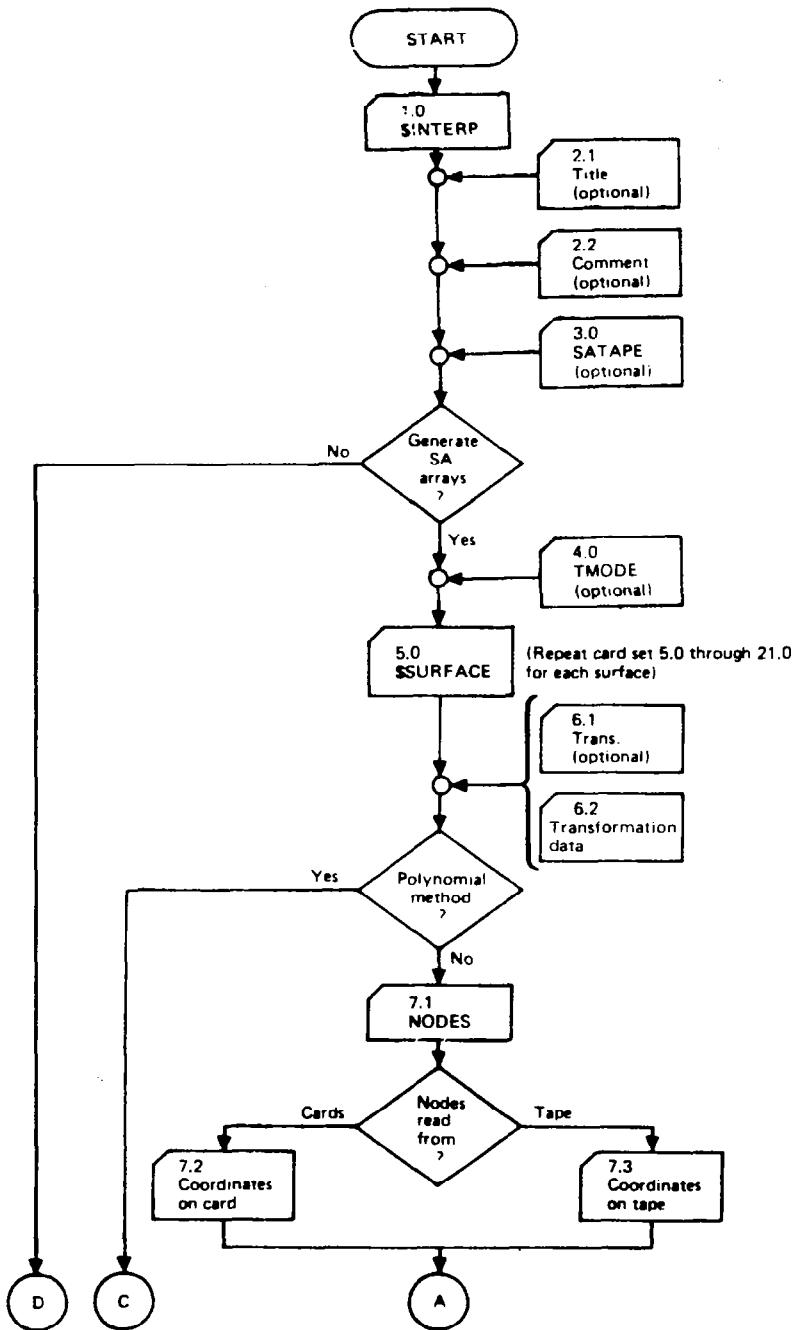


Figure 18. – Input Card Data Flow

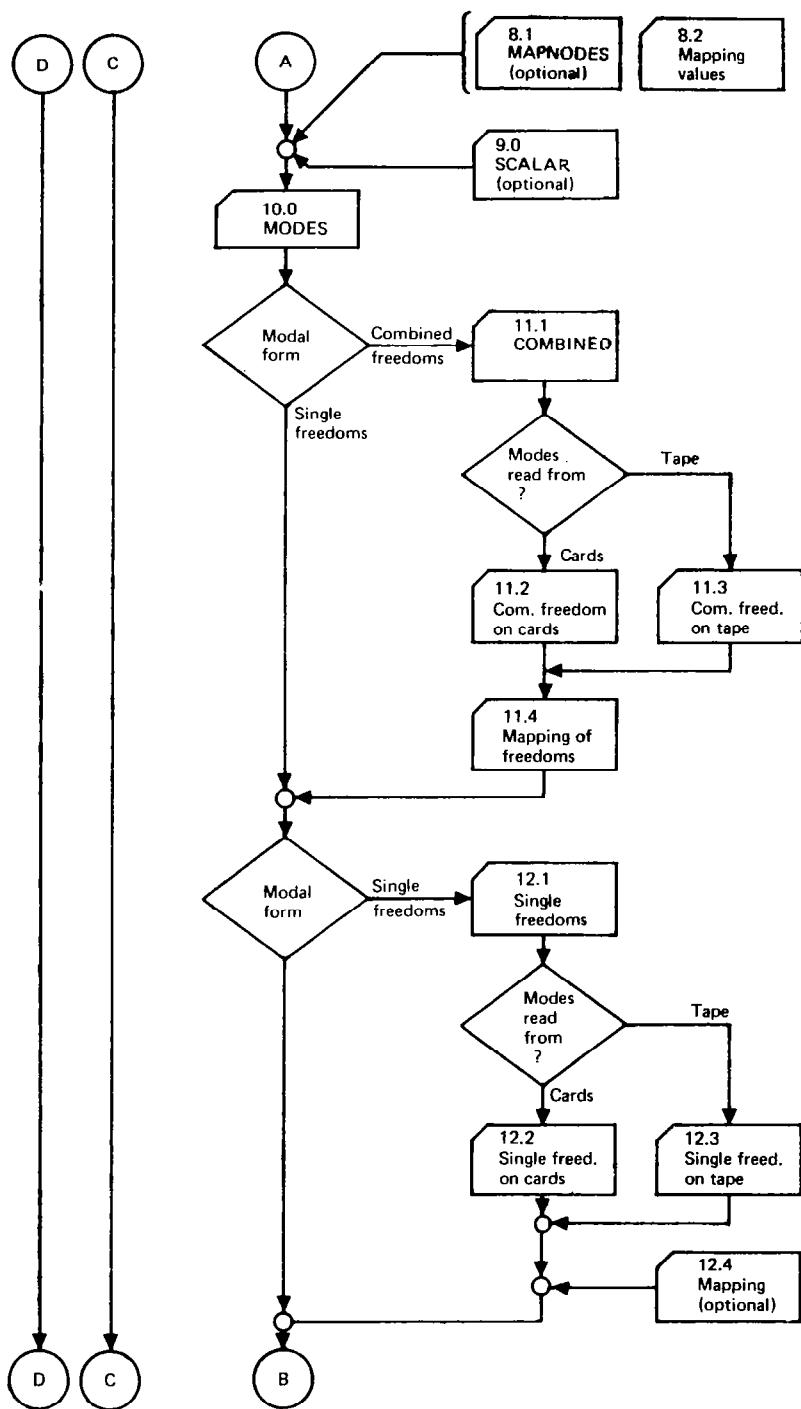


Figure 18. — (Continued)

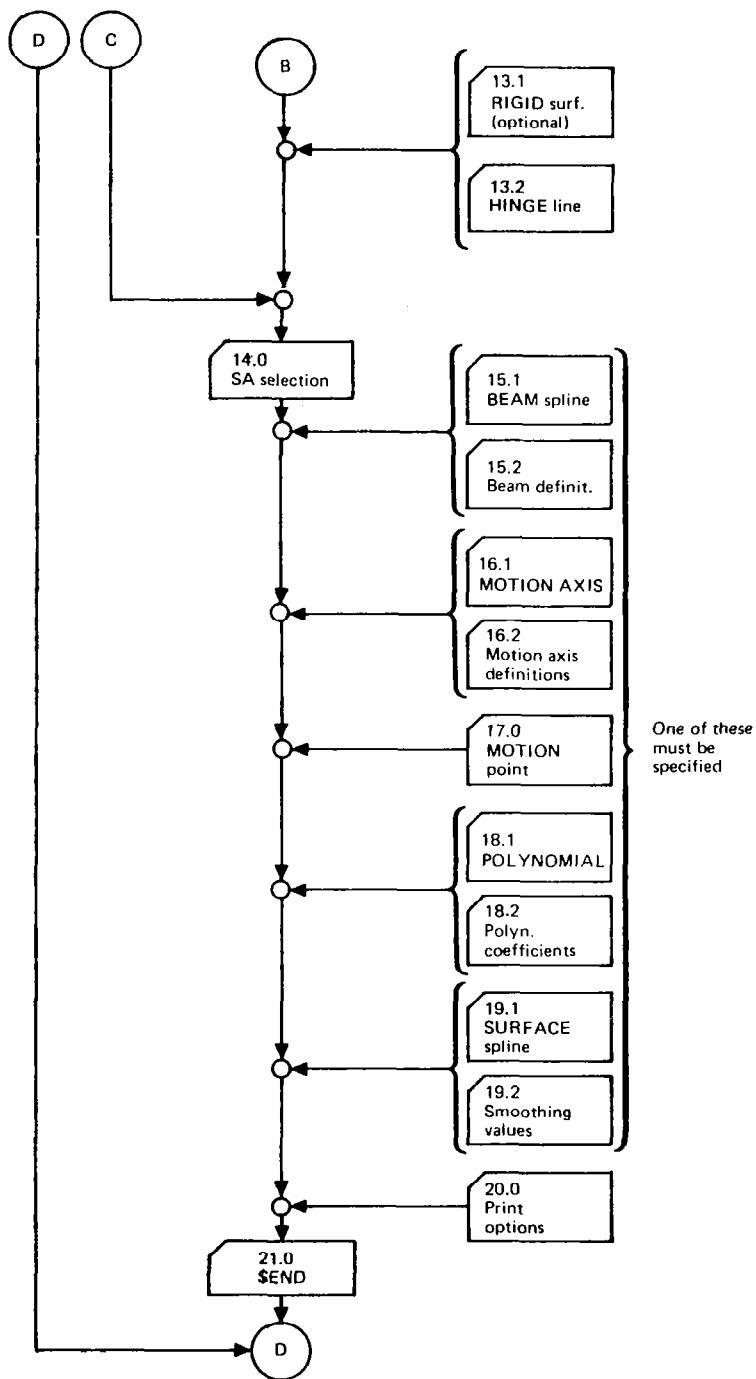


Figure 18. – (Continued)

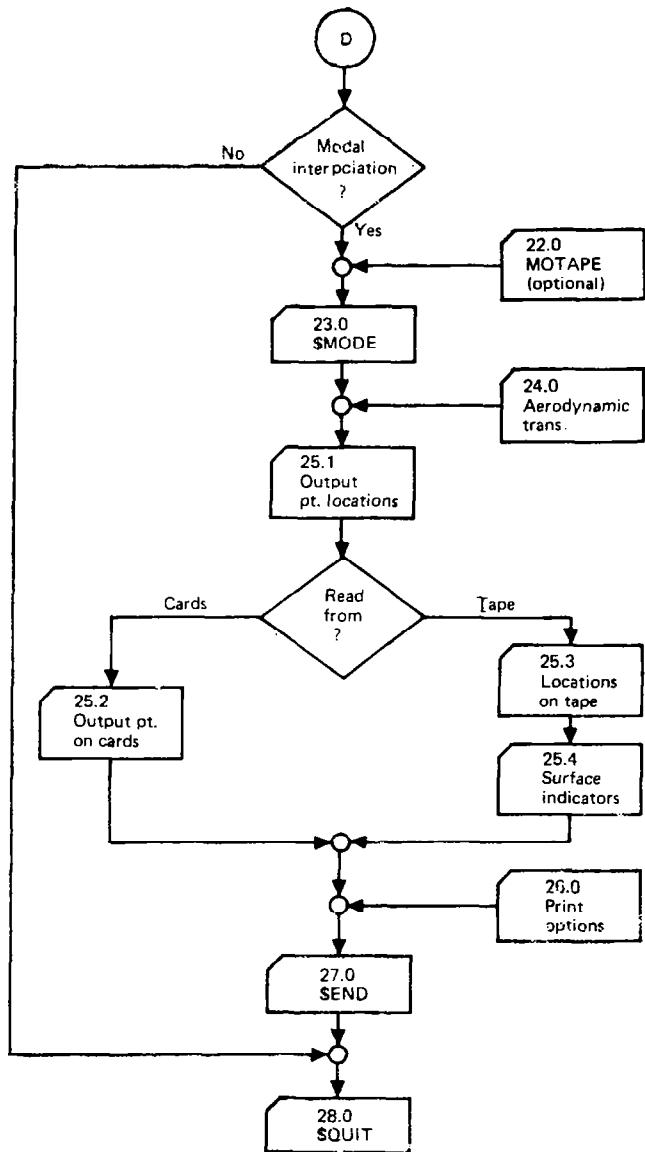


Figure 18. – (Concluded)

Card Set 2.0 – Data Case Labels

Card 2.1 – Job Title (Optional)

The title card may appear anywhere before a keyword. Up to four title cards appearing after the \$INTERp card will be stored in core for page headings on printouts.

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | <u>TITLE</u> | A10 | Keyword for job title card. |
| 11-80 | Title | 7A10 | Job title which can provide description of the job. |

Card 2.2 – Comment Card (Optional)

Comment cards may appear anywhere in the card input data stream except where data follows a keyword card.

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | <u>C</u> | A2,8X | Keyword for comment card. NOTE: A blank in column 2 must follow the C in column 1. |
| 11-80 | Comment | 7A10 | Comments will appear in the printed output as they are read. They are not treated as data. |

Card Set 3.0 – SA Array Tape Name (Optional)

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | SATAPe | A10 | Keyword indicating the SA array tape name. |
| 11-20 | ISATP | A7,3X | Name of the tape on which the SA arrays will be written, or on which they are already written. (Default = SATAP) NOTE: Input tape with SA arrays is needed when generating interpolated mode shapes for output points. |

If SA arrays are already generated and only output mode shapes are required, go to card set 22-0.

Card Set 4.0 – Total Number of Modes (Optional)

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | <u>TMODE</u> | A10 | Keyword specifying the number of output modes. |
| 11-15 | NTMODE | I5 | Total number of modes (columns) which will be used for generating the SA arrays. (Default: NTMODE = 1) |

Note: The maximum number of modes must be determined in conjunction with the number of nodes used on a surface NNODES (card 8.1) and the interpolation method chosen for the surface. The only size restriction is that the SA array for a surface cannot exceed 10,000 words. SA array size calculations are given in section 6.4.

Repeat card sets 5.0 through 21.0 for each surface.

Card Set 5.0 – Surface Definition

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|--|
| 1-10 | <u>\$_SURFACE</u> | A10 | Keyword introducing the block of data that defines a surface. |
| 11-15 | ISURF | I5 | The surface number. Also the actual file position of the SATAP where the results for this surface will be written. (no default) |
| 16-20 | blanks | 5X | |
| 21-30 | ID | A10 | Mnemonic identification of this surface.* |

*Used to aid in the identification of the surface (e.g. wing, vertical tail, fuselage, etc.)

Card Set 6.0 ~ Surface Transformation Data (Optional)

If the surface's local axis system coincides with the reference axis system, then this card set may be omitted. The default values for all variables on card 6.2 are zero.

Card 6.1 - Transformation Data

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|--|
| 1-10 | <u>TRANS</u> | A10 | Keyword indicating the transformation data for this surface follows, card 6.2. |

Card 6.2 ~ Rotation Angles and Translation Data

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | XR | E10.0 | Reference axis system coordinates of the origin of the |
| 11-20 | YR | E10.0 | surface's local axis system. |
| 21-30 | ZR | E10.0 | |
| 31-40 | XRANG | E10.0 | Euler rotation angles which define the rotation of the |
| 41-50 | YRANG | E10.0 | reference axis system <u>into</u> the local axis system. |
| 51-60 | ZRANG | E10.0 | (Degrees) |
| 61-70 | <u>ORDER</u> aaa | A10 | Keyword indicating specification of Euler rotation sequence where aaa specifies sequence such as: XYZ, YXZ, ZYX, etc. (Default: ORDER xyz)* NOTE: The two blanks after ORDER are part of keyword. |

*See the sample problem input data listed in section 7.0.

If POLYNOMIAL method selected (card set 18.0), skip to card set 14.0. If any of the other four methods are selected, continue with card set 7.0.

Card Set 7.0 - Nodal Data

Card 7.1 - Definition of Nodal Coordinate Data

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|--------------------------------------|--------|---|
| 1-10 | <u>NODES</u> | A10 | Keyword introducing nodal coordinate input data. |
| 11-20 | READ FROM | IUX | Descriptive words (optional) |
| 21-30 | (<u>CARD</u> <u>TAPE</u>) | A10 | Keywords indicating nodes input from <u>CARD</u> or <u>TAPE</u> |
| 31-40 | (<u>LOCAL</u> <u>REFERENCE</u>) | A10 | Keywords indicating nodal coordinates being input are defined in <u>LOCAL</u> axis system or <u>REFERENCE</u> axis system. |
| 41-45 | NNODEI | I5 | Number of nodes being input (row size of node coordinate matrix) (Default: 'NNODEI = 1') |
| 46-50 | blanks | 5X | |
| 51-60 | (<u>ENGLISH</u> <u>METRIC</u>) | A10 | Keyword indicating the nodal coordinates are defined in <u>ENGLISH</u> units or <u>METRIC</u> units. (Default: 'METRIC') |

Card 7.2 - Nodal Data on Cards

Read this card if columns 21 through 30 contain keyword CARD on card 7.1. Repeat this card NNODEI times, one card for each node.

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|--|
| 1-10 | XNI | E10.0 | The X, Y and Z coordinates of the Ith node. |
| 11-20 | YNI | E10.0 | I = 1, NNODEI |
| 21-30 | ZNI | E10.0 | |
| 31-40 | RXNI | E10.0 | X, Y and Z rotation angles which define the orientation |
| 41-50 | RYNI | E10.0 | of the node with respect to the reference axis system. |
| 51-60 | RZNI | E10.0 | (Degrees) NOTE. The order of rotation is that defined on card 6.2 If these variables are blank, rotation angles on card 6.2 will be used. The node rotation angles are written on output tape and are <u>not</u> used in the interpolation program. |

Card 7.3 - Nodal Data on Tape

Read this card if columns 21 through 30 contain keyword TAPE on card 7.1.

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | INTAP | A7,3X | The name of the tape containing the nodal coordinate input data. The tape name must begin with an alphabetic character and must contain no more than seven (7) characters. (no default) |
| 11-15 | INFP | I5 | The logical file position number on INTAP where nodal coordinate data is found. (Default: INFP = 1) |
| 16-20 | INMP | I5 | The matrix position number in INFP file where node coordinates are found. (Default: INMP = 1) |
| 21-25 | IROT | I5 | Rotation matrix indicator. Rotation matrix contains the ϕ, θ, ψ orientation angles for each node. = 0, no rotation matrix read = 1, read rotation matrix after coordinate matrix |

Card Set 8.0 - Input for Node Reordering (Optional)

Reordering may be used to change the order in which the nodes will be used in forming the SA array from the order in which they were used in calculating the modes shapes (e.g. change body node order from aft-to-nose to nose-to-aft or wing node order from tip-to-root to root-to-tip). Also, nodes may be eliminated with this option.

Card 8.1 - Mapping of Coordinates

If nodes are input in sorted form these cards are not needed.


| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | MAPNODE | A10 | Keyword indicating the reordering, selecting, or mapping of node coordinates. |
| 11-15 | NNODES | I5 | Number of nodes to be retained. (Default: NNODES = NNODEC1) |

Card 8.2 - Mapping Values

Repeat this card (at 14 entries per card) until all NNODES nodes have been reordered.

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-70 | IMAPNO _i | 1I15 | The number of the row of the input node matrix which is placed in the <i>i</i> th row of the sorted matrix. (Default: IMAPNO _i = 1) |

Example:

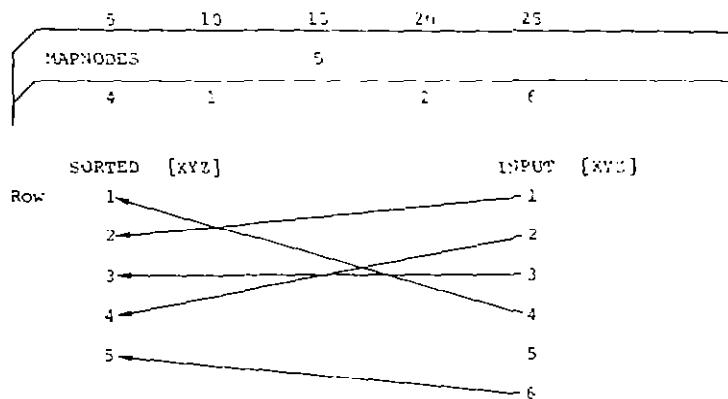

Card Set 9.0 - Scalars For Sorted Freedoms

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | <u>SCALAR</u> | A10 | Keyword indicating that scalars are to be used to multiply each single freedom. |
| 11-20 | SCALTY | 6D10.0 | Scalars to multiply the respective freedoms. |
| 21-30 | SCALTY | | (Default = 1.0) |
| 31-40 | SCALTZ | | |
| 41-50 | SCALRX | | |
| 51-60 | SCALRY | | |
| 61-70 | SCALRZ | | |

Note: This card is used to change the sign of the sorted freedoms that will be used to form the SA arrays. The sorted input data that is written on the SA array tape will not be changed. Dependent surface scalar values must be the same as parent surface scalar values.

Card Set 10.0 - Modal Input

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | <u>MODEs</u> | A10 | Keyword introducing the modal input. |
| 11-20 | <u>FROM</u> | A10 | <u>Optional</u> keyword indicating that mode 'shapes' are to be generated from a previous (parent) surface. If modal input is from external data, this field is left blank. |
| 21-25 | IISURF | I5 | The surface number of the parent surface from which modal data will be generated. NOTE: IISURF must be less than ISURF found on the \$SURFACE card for this surface. (Default: No parent surface) |

Note: Card set 10.0 is followed by card sets 11.0, 12.0, and 13.0. The user has the capability of inputting modes in any combination of the following three forms:

1. Card set 11.0 is the most general form. A single modes matrix contains all the local motions. It is sorted and grouped into single freedoms by the mapping cards.
2. Card set 12.0; each matrix is already in single freedom groupings and may be sorted by the mapping card.
3. Card set 13.0; the modes matrix is generated from the definition of a rigid surface.

Card Set 11.0 – Modal Data in Combined Freedom Form (Optional)

Card 11.1 – Combined Freedom Input Definition

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|--------------------------------|--------|--|
| 1-10 | <u>COMBIned</u> | A10 | Keyword indicating modal data being input in combined freedoms form. |
| 11-20 | FROM | I0X | Descriptive word (optional). |
| 21-30 | { <u>CARD</u> <u>TAPE</u> } | A10 | Keyword indicates modal data read from <u>CARD</u> or <u>TAPE</u> . |
| 31-35 | NROWCM | I5 | Row size of combined modes. |
| 36-40 | NCOLCM | I5 | Column size of combined modes. |
| 41-45 | ISICM | I5 | Starting column of input modal matrix from which modes will be picked up. |
| 46-50 | ISOBCM | I5 | Starting column of output single freedom matrices into which modes will be sorted. |
| 51-55 | NMODCM | I5 | Number of columns to use from the input modes starting at ISICM. |

Note: NROWCM will usually be equal to NNODEI (card 7.1), but it is not required to be the same. NCOLCM may be equal to, greater than, or less than NTMODE (card set 4.0). In this way, modal freedoms may be added or deleted.

Card 11.2 – Combined Freedoms From Cards

Read this card if columns 21 through 30 on card 11.1 contains the keyword CARD. Repeat this card NROWCM times.

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-70 | COM _{I,J} | 7E10.0 | Mode shapes read in by rows. Each row begins a new card. (COM _{I,J} , J = 1, NCOLCM) (I = 1, NROWCM) |

Card 11.3 – Combined Freedoms on Tape

Read this card if columns 21 through 30 on card 11.1 contain the keyword TAPE.

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | IMTAP | A7,3X | Name of tape containing the combined freedom modal matrix. The tape name must begin with an alphabetic character and must be no more than 7 characters. |
| 11-15 | IMFP | I5 | The logical file number on IMTAP where the combined freedom matrix resides. (Default: IMFP = 1) |
| 16-20 | IMMP | I5 | The matrix position no. in the IMFP file where the modal matrix is found. (Default: IMMP = 1) |

Repeat this case for all single freedoms desired.

Card 11.4 – Mapping of Combined Freedoms

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | <u>MAPaa</u> | A10 | Keyword indicating into which freedom (i.e., translation x, y or z; or rotation θ_x , θ_y , θ_z) the selected rows of the input modal data will be placed. |
| 11-70 | Jaa _I | 12I5 | Row number of the combined freedom matrix that shall be placed in the Ith row of the desired single freedom matrix (I = 1, NNODES) NOTE: If more cards are needed, the format for succeeding cards is 10X, 12I5. |

Note: The characters aa will be equal to one of the following pairs of characters, depending upon the freedom being sorted.

aa = TX, TY, TZ, RX, RY, or RZ

Card Set 12.0 – Modal Data in Single Freedom Form (Optional)

Cards 12.1 through 12.4 are repeated for each single freedom selected.

Card 12.1 – Single Freedom Input Definition

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|--------------------------------|--------|---|
| 1-10 | <u>aa</u> | A10 | Keyword indicating to which single freedom the modal data belongs. |
| 11-20 | FROM | A10 | Descriptive word (optional) |
| 21-30 | { <u>CARD</u> } <u>TAPE</u> | A10 | Keyword indicating modal data read from <u>CARD</u> or <u>TAPE</u> . |
| 31-35 | NROWaa* | I5 | Row size of single freedom matrix. |
| 36-40 | NCOLaa* | I5 | Column size of single freedom. |
| 41-45 | ISIaa* | I5 | Starting column of input single freedom matrix from which modes will be picked up. |
| 46-50 | ISOaa* | I5 | Starting column of output single freedom matrix into which modes will be placed. |
| 51-55 | NMODaa* | I5 | Number of columns to use from the input single freedom matrix starting with column ISIaa. |

*The characters aa are the same as those specified in keyword aa.

Card 12.2 - Single Freedoms on Cards

Read this card if columns 21 through 30 on card 12.1 contain the keyword CARD.
Repeat this card NROWaa times (I = 1, NROWaa)

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-70 | A _{I,J} | 7E10.0 | Single freedom mode shapes read in by row. Each row begins on a new card. (J = 1, NCOLaa) The freedom A being input must correspond to the keyword on card 12.1 -cols. 1 through 10 |

Card 12.3 - Single Freedoms on Tape

Read this card if columns 21 through 30 on card 12.1 contain the keyword TAPE.

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | ISTAP | A7,3X | The name of the tape which contains the single freedom modal data. The tape name must begin with an alphabetic character and contain no more than (7) characters. |
| 11-15 | ISFP | I5 | The logical file on ISTAP where the single freedom matrix will be found. |
| 16-20 | ISMP | I5 | The matrix position number in ISFP file of the single freedom matrix. |

The freedom being input must correspond to the freedom designated by the keyword aa on card 12.1.

Card 12.4 – Mapping of Single Freedoms (Optional)

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | <u>MAPPAA</u> | A10 | Keyword indicating the freedom into which the input single freedom will be mapped. |
| 11-70 | JAA _I | 12I5 | Row number of the input single freedom which is to be placed into the <i>I</i> th row of the output single freedom. <i>I</i> = 1, NNODES If more cards are needed the format for the cards will be 10N, 12I5. |

Note: The characters aa refer to the freedom being sorted and represent one of the pairs of letters TX, TY, TZ, RX, RY, or RZ. If mode shapes are input in single freedom format and this card is omitted, the modal data will be used in the order in which they are read.

Card Set 13.0 – Rigid Surface Mode (Optional)

Card 13.1 – Definition of Rigid Mode

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|--|
| 1-10 | <u>RIGID</u> | A10 | Keyword indicating rigid surface modes are to be added to the sorted freedoms. |
| 11-15 | ISORS | I5 | Starting column from which the rigid surface modes are to be added to the sorted freedom matrices. |
| 16-20 | NMODRS | I5 | Number of rigid surface modes (columns) to be added. |

Card 13.2 – Hinge Line Definition

Repeat this card NMODRS times.

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | <u>HINGE</u> | A10 | Keyword indicating the hinge line location and rotation definition follow. All data is in local axis system. |
| 11-20 | XIHL | E10.0 | X and Y coordinates of inboard end point of hinge line. |
| 21-30 | YIHL | E10.0 | (Local axis) |
| 31-40 | XOHL | E10.0 | X and Y coordinates of outboard end point of hinge line. |
| 41-50 | YOHL | E10.0 | (Local axis) |
| 51-60 | THETA | E10.0 | Rotation angle of the control surface (Radians). |
| 61-65 | IROT | I5 | Rotation indicator = 0 rotation along hinge line = 1 rotation is perpendicular to freestream direction. |

Card Set 14.0 – Selection of Freedoms for SA Array

Repeat this card for each SA array for this surface.

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|--|
| 1-10 | <u>SA</u> | A10 | Keyword specifying the freedoms to be used for forming the interpolation arrays. |
| 11-15 | ITX | I5 | Translation indicator = 0, no translation |
| 16-20 | ITY | I5 | = 1, translation requested |
| 21-25 | ITZ | I5 | |
| 26-30 | IRX | I5 | Rotation indicator = 0, no rotation |
| 31-35 | IRY | I5 | = 1, rotation requested |
| 36-40 | IRZ | I5 | |

Note: Beam spline – 1 to 3 freedoms may be specified; there must be one translation and zero, one, or two rotations.

Motion axis – 3 freedoms must be specified; one translation and two rotations.

Motion point – 1 to 6 freedoms; (note: for DYLOFLEX users, only 3 freedoms may be used, one translation and 2 rotations.)

Surface spline – 1 freedom; one translation which is normal to the surface.

Polynomial – no modal input required.

Only one of the card sets 15.0 through 19.0 may be specified.

Card Set 15.0 – Beam Spline Method

Card 15.1 – Beam Spline Interpolation Scheme

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | <u>BEAMSpline</u> | A10 | Keyword indicating Beam Spline interpolation scheme to be used. |
| 11-15 | NBEAM | I5 | Number of beams. (NBEAM ≥ 2) |

Card 15.2 – Beam Node Selection

Repeat this card NBEAM times. (I = 1, NBEAM)

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|--|
| 1-5 | NPB _I | I5 | Number of nodes on the Ith beam. |
| 6-10 | IEXTRP _I | I5 | Extrapolation indicator (See sec. 4.4.3) = 0, no extrapolation = 1, outboard extrapolation = 2, inboard extrapolation = 3, both inboard and outboard extrapolation |
| 11-70 | IP _{I,J} | 12I5 | Node location (row number) of the sorted coordinates and modal data which will be associated with the Jth node of the Ith beam. $J = 1, NPB_I$ If more cards are required, their format is (10X, 12I5) |

Card Set 16.0 – Motion Axis Method

Card 16.1 – Motion Axis Interpolation Scheme

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | <u>MOTIONAxis</u> | A10 | Keyword indicating the Motion Axis interpolation scheme to be used. |
| 11-15 | NDEF | I5 | Number of motion axis definition points ($NDEF \geq 2$) |
| 16-20 | IORIEN | I5 | Indicator for rotation Rx orientation = 0, freestream = 1, perpendicular to local straight line motion axis |

Card 16.2 – Definition Point Data

Repeat this card NDEF times. (I = 1, NDEF)

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | XRL _I | E10.0 | X and Y coordinates (local axis system) of the motion axis definition points. |
| 11-20 | YRL _I | E10.0 | |
| 21-30 | DYDXRL _I | E10.0 | Slope of the reference line associated with the Ith definition point |

The diagram illustrates the relationship between a motion axis and a reference line in a 2D coordinate system. The x-axis is horizontal and the y-axis is vertical. A solid line segment, labeled 'motion axis', connects two points. A dashed line segment, labeled 'reference line', also connects two points. The angle of the reference line relative to the x-axis is indicated by a right-angled triangle with the hypotenuse labeled $\frac{dy}{dx}$.

Card Set 17.0 – Motion Point Method

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|--|
| 1-10 | <u>MOTIONpt</u> | A10 | Keyword indicating the Motion Point interpolation scheme to be used. |

Card Set 18.0 - Polynomial Interpolation Method

Card 18.1 - Polynomial Interpolation Scheme

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | POLYNomial | A10 | Keyword indicating that the Polynomial scheme to be used. |
| 11-15 | IORD | I5 | Order of the polynomial (IORD \geq 0) |

Card 18.2 - Polynomial Coefficients

Repeat this card NTMODE times (card 4.0).

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-70 | C _I | 7E10.0 | Polynomial Coefficients where (I = 1, NPcoef) NPcoef = $\frac{(IORD+1)*(IORD+2)}{2}$ |

Example:

```

IORD = 0    coef read      C00
            for          δz(x,y) = C00

IORD = 1            C00, C10, C01
            δz(x,y) = C00 + C10x + C01y

IORD = 2            C00, C10, C01, C20, C11, C02
            δz(x,y) = C00 + C10x + C01y + C20x2 + C11xy + C02y2

IORD = 3            C00, C10, C01, C20, C11, C02, C30, C21, C12, C03
            δz(x,y) = C00 + C10x + C01y + C20x2 + C11xy + C02y2
                        + C30x3 + C21x2y + C12xy2 + C03y3

```

Card Set 19.0 - Surface Spline Method

Card 19.1 - Surface Spline Interpolation Scheme

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | <u>SURFACE</u> | A10 | Keyword indicating that the surface spline interpolation scheme to be used. |
| 11-15 | NSMTH | I5 | Smoothing Indicator (See sec. 4.4.4) = 0, no smoothing = 1, a smoothing value applies to all points = n, n = the number of smoothing values to use (one for each node on planform) |

Card 19.2 - Smoothing Values

Read this card only if NSMTH > 0.

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---------------------------------------|
| 1-70 | SMTH _I | 7E10.0 | Smoothing values where (I = 1, NSMTH) |

Card Set 20.0 - Print Option Selection

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION | | | | | | | | |
|---------|--|--------|--|---------|--------------|----|----------|-----|---|-----|--|
| 1-10 | PRINT | A10 | Keyword indicating print option is chosen. | | | | | | | | |
| 11-40 | $\left\{ \begin{array}{l} \text{SA} \quad * \\ \text{LOCations} \\ \text{MODe} \end{array} \right\}$ | 3A10 | List of keywords indicating the matrices to be printed. <table> <thead> <tr> <th>Keyword</th> <th>Matrix Print</th> </tr> </thead> <tbody> <tr> <td>SA</td> <td>SA array</td> </tr> <tr> <td>LOC</td> <td>Sorted nodal locations [X,Y,Z]_R</td> </tr> <tr> <td>MOD</td> <td>Sorted single freedom matrices [TX],[TY],[TZ],[RX],[RY],[RZ]</td> </tr> </tbody> </table> | Keyword | Matrix Print | SA | SA array | LOC | Sorted nodal locations [X,Y,Z] _R | MOD | Sorted single freedom matrices [TX],[TY],[TZ],[RX],[RY],[RZ] |
| Keyword | Matrix Print | | | | | | | | | | |
| SA | SA array | | | | | | | | | | |
| LOC | Sorted nodal locations [X,Y,Z] _R | | | | | | | | | | |
| MOD | Sorted single freedom matrices [TX],[TY],[TZ],[RX],[RY],[RZ] | | | | | | | | | | |

*These keywords may be used in any combination.

Card Set 21.0 – End Surface

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | <u>\$END</u> | A10 | Keyword indicating the end of the Ith surface interpolation data. |

Repeat \$SURFACE (card set 5.0) through \$END (card set 21.0) for each surface.

This begins the second phase of the Interpolation Program. Displacements and slopes are generated at given aerodynamic control points. Skip to card set 28.0 if second phase is not desired.

Card Set 22.0 – Modal Output Tape Option (Optional)

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|--|
| 1-10 | <u>MOTAPe</u> | A10 | Keyword indicating the output will be saved in tape. |
| 11-20 | IMOTP | A7,3X | Tape name where the interpolated motion ($[\delta_z]$, $[d\delta_z/dx]$, $[d\delta_z/dy]$) will be saved. (Default: IMOTP = 'MODE0') Name must begin with an alphabetic character and must not be greater than 7 characters. |

Card Set 23.0 – Interpolation

Repeat card sets 23.0 through 27.0 for each set of output points for which interpolated motion is desired.

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|--|
| 1-10 | <u>\$MODE</u> | A10 | Keyword indicating the block of input data required for calculating interpolated motion. |
| 11-20 | IDM | A10 | Mnemonic identification of this set of interpolation data. |
| 21-25 | NTMODE | I5 | Number of modes to pick up from the SA arrays which will be used for determining the motion at the aerodynamic control points. (Default: Total modes as read from first SA array used.) |

Note: A set of output points may use more than one SA array. It is only required that all output points in a set have the same local aerodynamic axes. (See section 5.2.)

Card Set 24.0 – Aerodynamic Surface Transformation

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | <u>AEROT</u> | A5,5X | Keyword indicating the aerodynamic transformation data. |
| 11-20 | AEROX | E10.0 | $\begin{Bmatrix} X \\ Y \end{Bmatrix}$ Coordinates of the origin of the aerodynamic surface (in the reference axis system). |
| 21-30 | AEROY | E10.0 | $\begin{Bmatrix} Z \end{Bmatrix}$ |
| 31-40 | AEROZ | E10.0 | |
| 41-50 | XSH | E10.0 | $\begin{Bmatrix} X \\ Y \end{Bmatrix}$ Offset of the aerodynamic surface in the local (structural) surface axis. |
| 51-60 | YSH | E10.0 | |

Card Set 25.0 – Definition of Output Locations


Card 25.1 – Output Locations

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------------------|--------|--|
| 1-10 | <u>OUTLO</u> | A10 | Keyword indicating output locations are input from cards or tape. |
| 11-20 | READ FROM | A10 | Descriptive word (optional) |
| 21-30 | <u>CARD</u> <u>TAPE</u> | A10 | Keyword indicating locations are read from <u>CARD</u> or <u>TAPE</u> . |
| 31-40 | <u>LOCAL</u> <u>REFERENCE</u> | A10 | Keyword indicating output locations defined in <u>LOCAL</u> or <u>REFERENCE</u> axis systems. |
| 41-45 | NOUTLO | I5 | Number of output points. |
| 46-50 | INDD | I5 | Indicator for generating slopes = 0, no slopes = 1, dz/dx = 2, dz/dy = 3, dz/dx and dz/dy |
| 51-55 | INDG | I5 | Indicator for local dihedral correction option (see sec. 5.2) = 0 skip this option = 1 first dihedral angle will be used for all output points = 2 a dihedral angle will be read for each output point. |

Card 25.2 – Output Locations on Cards

Read this card if columns 21 through 30 on card 25.1 contain keyword CARD. Repeat this card NOUTLO times, one card for each node. (I = 1, NOUTLO)

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|--|
| 1-10 | XO _I | E10.0 | X, Y, and Z coordinates for the Ith output point. |
| 11-20 | YO _I | E10.0 | |
| 21-30 | ZO _I | E10.0 | |
| 31-35 | IS _I | I5 | Surface number (SA array) where output point is located. |
| 36-40 | blank | 5X | |
| 41-50 | GAMMA _I | E10.0 | Local orientation of normal component in radians. (Measured from reference axis system) |

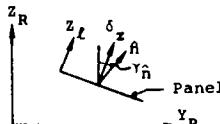

Card 25.3 – Output Locations on Tape

Read if columns 21 through 30 on card 25.1 contain the keyword TAPE

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | IOPTP | A7,3X | Name of the tape containing the output point locations. Tape name must begin with an alphabetic character and must contain no more than 7 characters. |
| 11-15 | IOPFP | I5 | The file position number on IOPTP where output point data is found. (Default: 1) |
| 16-20 | IOPMP | I5 | Matrix position number in the IOPFP file where output point data is found. (Default: 1) |
| 21-25 | IGAM | I5 | Dihedral matrix indicator = 0, no matrix at dihedral angles will be read = 1, matrix of dihedral angles will be read following matrix of output locations |

Card 25.4 - Surface Indicators

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|------------------------|--------|---|
| 1-70 | <u>IS</u> _I | 14I5 | Surface number (SA array) which will be used to interpolate for this output point. (I = 1, NOUTLO) |

Card Set 26.0 - Print Option

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|-------------------------------|--------|---|
| 1-10 | <u>PRINT</u> | A5,5X | Keyword indicating matrices to be printed. |
| 11-40 | { <u>SA</u> * } <u>MOD</u> | 3A10 | List of keywords in any order indicating the matrices to be printed. |
| | | | <u>Keyword</u> <u>Matrix printed</u> <u>SA</u> SA array(s) used to generate output mode shapes. <u>MOD</u> Interpolated output mode shape matrix with output locations. |

*These keywords may be used in any combination

Card Set 27.0 - End Output Set

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|--|
| 1-10 | <u>\$END</u> | A10 | Keyword indicates the end of the Ith set of output points. |

Repeat \$MODE (card set 23.0) through \$END (card set 27.0) for each set of output points desired.

Card Set 28.0 - Program Terminator

| COLS. | KEYWORD/ VARIABLE | FORMAT | DESCRIPTION |
|-------|----------------------|--------|---|
| 1-10 | <u>\$QUIT</u> | A10 | Keyword indicating the last data for the interpolation program has been read. |

6.5.2 SUMMARY OF CARD INPUT DATA

| Requirements or Function | Keywords and/ or Variables | Card Format | Reference Card Set(s) |
|--|---|----------------------------|-----------------------|
| | <u>\$INTERpolation</u> | A10 | 1.0 |
| Job title (optional) | <u>TITLE</u> | A10,7A10 | 2.1 |
| Comment Card (optional) | <u>C</u> | A2,8X,7A10 | 2.2 |
| Definition of magnetic file on which SA arrays will be written or read. (Optional) | <u>SATAPe ISATP</u> | A10,A7,3X | 3.0 |
| | If SA arrays have already been generated, and only output shapes are required, go to card set 22.0. | | |
| Total number of modes to use for interpolation (optional) | <u>TMODE NTMODE</u> | A10,I5 | 4.0 |
| | Repeat card sets 5.0 through 21.0 for each surface. | | |
| Surface definition | <u>\$SURFace ISURF blanks ID</u> | A10,I5 5X,A10 | 5.0 |
| Surface transformation data (Optional) | <u>TRANSformation data</u> | A10 | 6.1 |
| Transformation data (required if card 6.1 is used) | XR YR ZR XRANG YRANG ZRANG ORDER aaa | 6E10.0,A10 | 6.2 |
| | If POLYNOMIAL method is selected, skip to card set 14.0 | | |
| Definition of nodal coordinate data | <u>NODEs read from {CARD} {TAPE} {LOCAL REFERENCE} NNODEI blanks {ENGLISH METRIC}</u> | A10,10X,2A10, 15,5X,A10 | 7.1 |
| | Repeat card 7.2 NNODEI times, one node per card. (I=1, NNODEI) | | |
| Required if nodal coordinates read from CARD (card 7.1) | XN _I YN _I ZN _I RXN _I RYN _I RZN _I | 6E10.0 | 7.2 |
| Required if nodal coordinates read from TAPE (card 7.1) | INTAP INFP INMP IROT | A7,3X,3I5 | 7.3 |

| Requirements or Function | Keywords and/or Variables | Card Format | Reference Card set(s) |
|--|--|-------------|-----------------------|
| Input for nodal mapping (Optional) | <u>MAPNode</u> NNODES | A10,I5 | 8.1 |
| Mapping values (required if card 8.1 is used) | IMAPNO _I (I = 1, NNODES) | 14I5 | 8.2 |
| Scalars for sorted freedoms (Optional) | <u>SCALar</u> SCALTX SCALTY SCALTZ SCALRX SCALRY SCALRZ | A10,6E10.0 | 9.0 |
| Modal input | <u>MODEs</u> FROM (Optional) IISURF | 2A10,I5 | 10.0 |
| Input of modes in combined freedom form (Optional) | <u>COMBined from</u> { <u>CARD</u> <u>TAPE</u> } NROWCM NCOLCM ISICM ISOCH NMODCM | 3A10,5I5 | 11.1 |
| Repeat card NROWCM times (I = 1, NROWCM) | | | |
| Required if mode shapes read from <u>CARD</u> (card 11.1) | <u>COM</u> _{IJ} (J = 1, NCOLCM) | 7E10.0 | 11.2 |
| Required if mode shapes read from <u>TAPE</u> (card 11.1) | IMTAP IMFP IMMP | A7,3X,2I5 | 11.3 |
| Note: The characters aa are used to refer to the particular freedom of interest. aa = TX, TY, TZ, RX, RY, or RZ | | | |
| Mapping of combined freedoms. Required if modes are input in combined freedom form | <u>MAPaa</u> Jaa _I (I = 1, NNODES) | A10,12I5 | 11.4 |
| Note: If additional cards are needed for the row designation variables Jaa _I , the format for succeeding cards is 10X,12I5. Card 11.4 is repeated for each type of freedom that is selected from the combined modes. | | | |

| Requirements of Function | Keywords and/or Variables | Card Format | Reference Card Set(s) |
|--|--|---------------|-----------------------|
| Cards 12.1 through 12.4 are repeated for each single freedom selected. | | | |
| Input modes in single freedom form (Optional) | <u>aa</u> from { <u>CARD</u> } <u>TAPE</u> } NROWaa NCOLaa ISIaa ISOaa NMODaa | 3A10,5I5 | 12.1 |
| Repeat card 12.2 NROWaa times (I = 1,NROWaa) | | | |
| Required of mode shapes read from <u>CARD</u> (card 12.1) | <u>A_{I,J}</u> (J = 1,NCOLaa) | 7E10.0 | 12.2 |
| Required of mode shapes read from <u>TAPE</u> (card 12.1) | ISTAP ISFP ISMP | A7,3X,2I5 | 12.3 |
| Mapping of single freedom (Optional) | <u>MAPaa</u> Jaa _I (I = 1,NNODES) | A10,12I5 | 12.4 |
| Rigid surface mode (Optional) | <u>RIGID</u> ISORS NMODRS | A10,2I5 | 13.1 |
| Repeat card 13.2 NMODRS times | | | |
| Hinge line definitions (required if card 13.1 is used) | <u>HINGE</u> XIHL YIHL XOHL YOHL THETA IROT | A10,5E10.0,I5 | 13.2 |
| Repeat card set 14.0 for each SA array desired for this surface | | | |
| Selection of freedoms for SA array | <u>SA</u> ITX ITY ITZ IRX IRY IRZ | A10,6I5 | 14.0 |
| Only <u>one</u> of the card sets 15 through 19 may be specified | | | |
| Selection of BEAM SPLINE method | <u>BEAMSpline</u> NBEAM | A10,I5 | 15.1 |
| Repeat card 15.2 NBEAM times (I = 1,NBEAM) | | | |
| Selection of beam nodes | <u>NPB_I</u> IEXTRP _I IP _{I,J} (J = 1,NPB _I) | 2I5,12I5 | 15.2 |
| Note: If more cards are required for IP _{I,J} variables, the format is 10X,12I5 | | | |
| Selection of MOTION AXIS method | <u>MOTIONAxis</u> NDEF IORIEN | A10,2I5 | 16.1 |

| Requirements or Function | Keyword and/or Variables | Card Format | Reference Card Set(s) |
|--|--|-------------|-----------------------|
| Repeat card 16.2 NDEF times (I = 1,NDEF) | | | |
| Axis definition point data | XRL _I YRL _I DYDXRL _I | 3E10.0 | 16.2 |
| Selection of MOTION POINT method | <u>MOTIONpt</u> | A10 | 17.0 |
| Selection of POLYNOMIAL method | <u>POLYNomial</u> IORD | A10,I5 | 18.1 |
| Repeat card 18.2 NTMODE times (card set 4.0) | | | |
| Polynomial coefficients | C _I (I = 1,NPCOEF) where NPCOEF = [(IORD+1)*(ICRD+2)/2] | 7E10.0 | 18.2 |
| Selection of SURFACE SPLINE method | <u>SURFace</u> NSMTH | A10,I5 | 19.1 |
| Smoothing values (Only if NSMTH > 0) | SMTH _I (I = 1,NSMTH) | 7E10.0 | 19.2 |
| Print options may appear in any order on card set 20.0 | | | |
| Print option selection | <u>PRINT</u> { <u>SA</u> <u>LOCation</u> <u>MODE</u> } | A10,3A10 | 20.0 |
| End of surface data | <u>\$END</u> | A10 | 21.0 |

| Requirements or Function | Keyword and/or Variables | Card Format | Reference Card Set(s) |
|--|---|------------------------|-----------------------|
| Omit card sets 22.0 through 27.0 if interpolated mode shapes are <u>not</u> desired. | | | |
| <u>Output motion to be saved on magnetic file (optional)</u> | <u>MOTAPe</u> IMOTP | A10,A7,3X | 22.0 |
| Repeat card sets 23.0 through 27.0 for each set of output points | | | |
| Keyword indicating set of input data for calculating interpolated motion | <u>\$MODE</u> IDM NTMODE | 2A10,I5 | 23.0 |
| Aerodynamic Surface transformation | <u>AEROT</u> AEROX AEROY AEROZ XSH YSH | A5,5X,5E10.0 | 24.0 |
| Definition of output locations | <u>OUTLO</u> read from $\{ \begin{matrix} \text{CARD} \\ \text{TAPE} \end{matrix} \}$ $\{ \begin{matrix} \text{LOCal} \\ \text{REFerence} \end{matrix} \}$ NOUTLO INDD INDG | 4A10,3I5 | 25.1 |
| Repeat card 25.2 NOUTLO times, one card for each output node (I = 1,NOUTLO) | | | |
| Required if output locations read from <u>CARD</u> (card 25.1) | XO _I YO _I ZO _I IS _I blanks GAMMA _I | 3E10.0,I5,5X, E10.0 | 25.2 |
| Required if output locations read from <u>TAPE</u> (card 25.1) | IOPTP IOPFP IOPMP IGAM | A7,3X,3I5 | 25.3 |
| Required if output locations read from <u>TAPE</u> (card 25.1) | IS _I (I = 1,NOUTLO) | 14I5 | 25.4 |
| Print options may appear in any order on card set 26.0. | | | |
| Print Options | <u>PRINT</u> $\{ \begin{matrix} \text{SA} \\ \text{MODE} \end{matrix} \}$ | A5,5X,3A10 | 26.0 |
| End of output set | <u>SEND</u> | A10 | 27.0 |
| Program terminator | <u>\$QUIT</u> | A10 | 28.0 |

6.5.3 MAGNETIC FILE INPUT

The matrices on magnetic files must be written in the READTP/WRTETP format (ref. 1). There are six types of matrices the user may input from magnetic file: combined freedoms, single freedoms, input node locations, nodal orientation angles, output locations of aerodynamic control points, and unit normal orientations. The use of magnetic files for input depends upon how the six types of matrices are specified in card input data (cards 7.1, 11.1, 12.1, 25.1) of keywords, NODEs, COMBIned, TX, TY, TZ, RX, RY, RZ, and OUTLOCations. A keyword TAPE on these cards indicates input is from magnetic files. If this is the case, the magnetic file name, the file position number, and the matrix position number in the specified file position must be specified. Each input matrix may be read from a magnetic file having the same or different name. The L215 program will rewind the magnetic file before reading each matrix specified. Figure 19 describes the input files.

6.6 OUTPUT DATA

6.6.1 PRINTED OUTPUT

The input data for the L215 program will be echo printed. Other printed output, all of which is optional, is discussed below:

- The input mode shapes in sorted single freedoms
- The input node coordinates and rotation angles
- The interpolation functional coefficient matrix array
- The output aerodynamic control point coordinates
- The interpolated mode shapes at the aerodynamic control points

6.6.2 MAGNETIC FILES OUTPUT

L215 will write on as many as three magnetic files, SATAP, MOTAP, and SCRAND. The latter is a scratch random file. The matrices contained on magnetic files SATAP and MOTAP are written by the WRTETP subroutine, and the matrices contained on file SCRAND are written by WRITMS subroutine.

SATAP

The magnetic file name SATAP is the default name and may be changed by input card 3.0. The matrices written on SATAP are described in figure 20.

MOTAP

The name MOTAP is the default name for the magnetic file produced when mode shapes are generated at output aerodynamic control points. The name MOTAP may be changed by input card 24.0. The matrices written on MOTAP are described in figure 21.

File Structure For INTAP

[x, y]

or

[x, y, z]

[ϕ , θ , ψ]

A NNODEI x 2 matrix if local axis coordinates are used (card 7.1)

A NNODEI x 3 matrix if reference axis coordinates are used (card 7.1)

A NNODEI x 3 matrix of node orientation angles; read if IROT \neq 0 (card 7.3)

File Structure For IMTAP

[ϕ]

A NROWCM x NCOLCM matrix of modal data which contains unsorted freedoms (card 12.1)

File Structure of IOPTP

[xo, yo]

or

[xo, yo, zo]

[γ]

A NOUTLO x 2 matrix of local axis system coordinates of the output points

A NOUTLO x 3 matrix of reference axis system coordinates of the output points

A NOUTLO x 1 matrix of γ angles (radians)

File Structure For ISTAP

[ϕ_{δ_x}]

[ϕ_{δ_y}]

[ϕ_{δ_z}]

[ϕ_{θ_x}]

[ϕ_{θ_y}]

[ϕ_{θ_z}]

A NROWTX x NCOLTX matrix of modal data representing the δ_x freedoms

A NROWTY x NCOLTY matrix of modal data representing the δ_y freedoms

A NROWTZ x NCOLTZ matrix of modal data representing the δ_z freedoms

A NROWRX x NCOLRX matrix of modal data representing the θ_x freedoms

A NROWRY x NCOLRY matrix of modal data representing the θ_y freedoms

A NROWRZ x NCOLRZ matrix of modal data representing the θ_z freedoms

The above matrices may appear in any order (see cards 12.1 through 12.3).

Figure 19. — Input File Structures

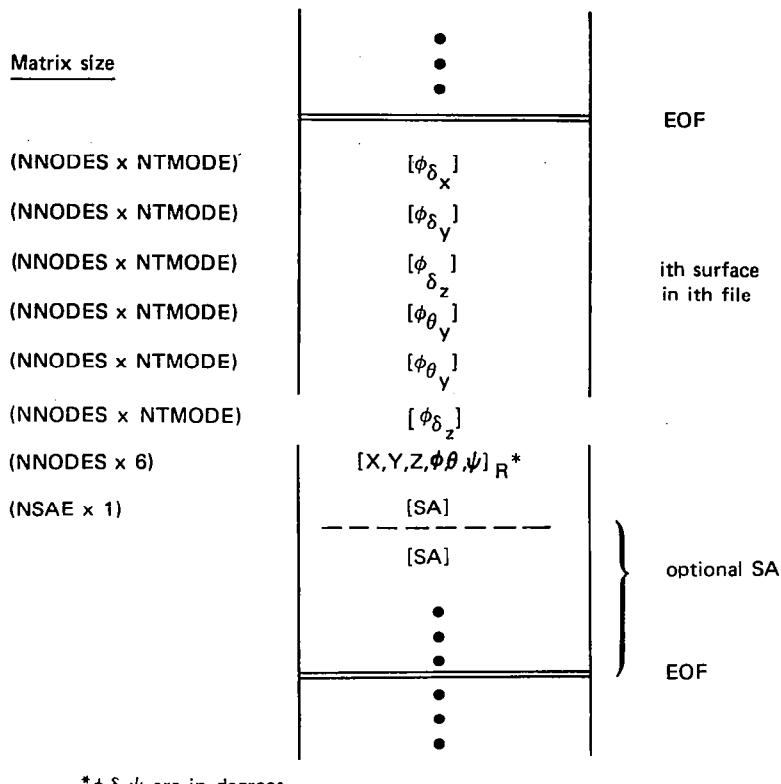


Figure 20. — Magnetic File Map of SATAP

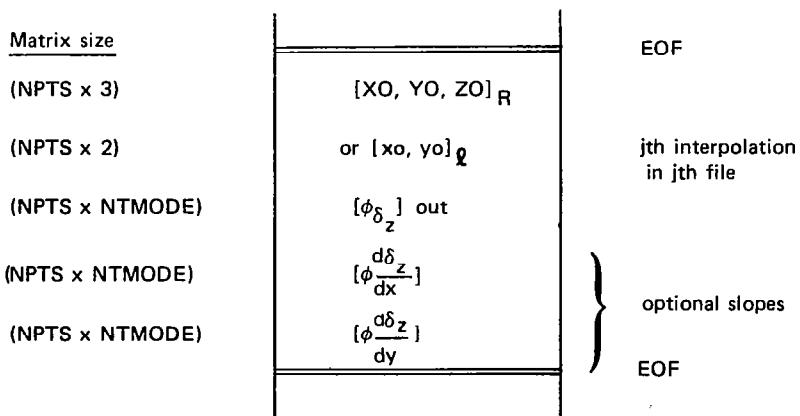


Figure 21. — Magnetic File Map of MOTAP

6.7 RESTRICTIONS

The primary program restrictions are listed below:

- For the beam spline method, output slopes $d\delta_z/dy$ in the y-axis direction will be generated only if RX motions were specified in the SA array generation.
- Streamwise interpolation using the beam spline method must take place over a minimum of two beams.
- The problem size limitation is governed by the maximum size restriction of the SA array, which is 10 000 words. The size of the SA array is a function of interpolation method, number of nodes, and number of modes (see section 6.4). A guide to the selection of allowable input variable sizes for three methods is shown in figure 22. The size limitation is applied to each individual surface.

6.8 DIAGNOSTICS

6.8.1 FATAL ERRORS

All fatal errors detected by the program will result in the printing of a diagnostic error message. These messages are self-explanatory and are of the following format.

```
***** FATAL ERROR nnnnn  
DIAGNOSED WHILE EXECUTING ROUTINE name  
any additional error messages
```

where "nnnnn" is the diagnostic error number and 'name' is the name of the routine in execution when the error was detected. Additional explanatory messages will be appended to the two standard error message lines.

The following list is a brief description of each diagnostic error number:

1. End-of-record card was encountered before \$END card.
2. Keyword (aaaaaaaaaa) with code number (nnnnn) is not recognized.
3. FETAD error number (nnnnn) returned.

Error number = 1, illegal tape name/number

= 2, buffer too small
= 3, maximum number of files have already been defined, 49 allowed

4. Method of interpolation not specified.

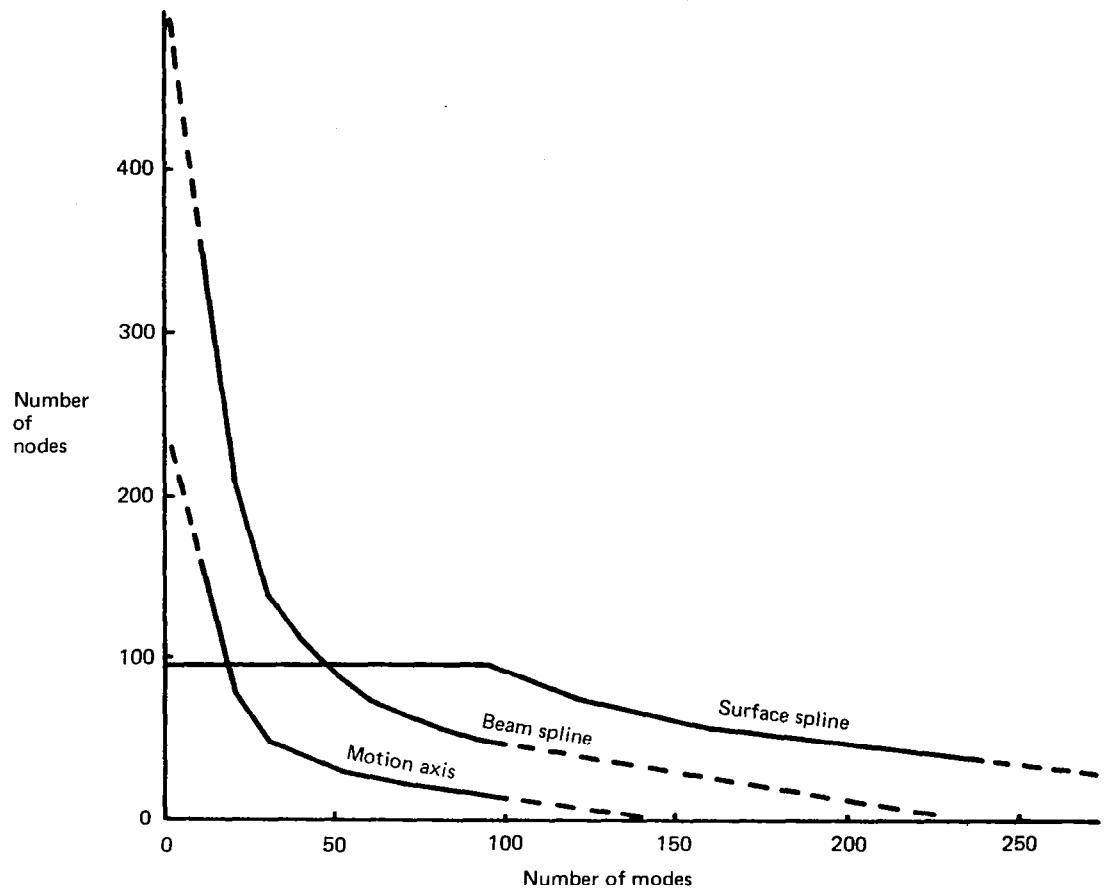


Figure 22. — Size Limitations

5. Number of available field length is **xxxxx** octal.
Number of required field length is **xxxxxx** octal.
Therefore, add the difference **xxxxxx** octal to your current field.
6. Input volume (aaaa) does not equal keyword CARD or TAPE.
7. WRTETP error number (nnnnn) returned.

| | |
|-----------------|--|
| Error code = 0, | No errors are detected during writing. |
| = 1000+I, | A forward space file error occurred, where I is the number of file marks remaining to be skipped when an end-of-information was encountered. |
| = 2, | The number of matrices or files to be skipped before writing starts is less than zero. |
| = 3, | The dimensioned number of rows in the matrix is less than or equal to zero. |
| = 3000+I, | A forward space record error occurred, where I is the number of records remaining to be skipped when either an end-of-file or an end-of-information was encountered. |
| = 4, | The actual number of rows is greater than the dimensioned number of rows in the matrix. |
| = 6, | The number of rows (M) in the matrix times the number of columns (N) is greater than the buffer size. |

8. READTP error number (nnnnn) returned.

| | |
|-----------------|---|
| Error code = 0, | No errors are detected during reading. |
| = 1000+I, | A forward space file error occurred, where I is the number of file marks remaining to be skipped when an end-of-information was encountered. |
| = 2, | The number of matrices or files to be skipped before reading starts is less than zero. |
| = 3, | The dimensioned number of rows in the matrix is less than zero. |
| = 3000+I, | A forward space record error occurred, where I is the number of records remaining to be skipped when either an end-of-file or end-of-information was encountered. |

- = 4, Number of rows in the matrix is greater than the dimensioned row size in the program.
- = 5, The name check failed.
- = 6, The number of rows (M) in the matrix times the number of columns (N) is greater than the buffer size, or M or N ≤ 0 .
- = 7, An end-of-file was read. If it occurs while reading the matrix ID, no information is stored in the user's area. If it occurs while reading the matrix, the ID information will be stored. Note that the records will always be in pairs, and an end-of-file should always be encountered with the ID RECORD.
9. Input matrix for (aaaaaaaaaa) row or column size (nnnnn x nnnnn) is larger than row or column size specified (nnnnn x nnnnn).
10. Parent surface (nnnnn) SA array does not have degree of freedom (TX, TY, TZ, RX, RY, or RZ) specified.
11. AINTL error code (aaaaaaaaaa) returned:
 Error code ≥ 0 , No error
 < 0, Error of the form 10H*nnnnnnnnxx, nnnnnnnn=routine name, xx=error no.
 = 10H*AINTL 1, Interpolation coefficient array type not recognizable
12. AINTG error code (aaaaaaaaaa) retuned:
 Error code ≥ 0 , No error
 < 0, Error of the form 10H*nnnnnnnnxx, nnnnnnnn=routine name, xx=error no.
 = 10H*AINTL 1, Interpolation coefficient array type not recognizable
13. Translation X and rotation X specified. Not legal.
14. Translation Y and rotation Y specified. Not legal.
15. Translation Z and rotation Z specified. Not legal.
16. Translation X not allowed.
17. More than one (nnnnn) translation freedom specified.

18. More than two rotation freedoms specified.
19. No coordinates to work on. Coordinates not input.
20. More than one (nnnnn) freedom specified.
21. No freedom specified.
22. INODFR error number (nnnnn) returned.

Error number = 1, Input volume not specified
= 2, FETAD error detected
= 3, READTP error detected
= 4, Input matrix size not valid

23. PARENT error number (nnnnn) returned:

Error number = 1, READTP error detected
= 2, degree of freedom not specified
= 3, AINTL error detected

26. BEAMI error code (aaaaaaaaaa) returned; for error code, see BEAMI listing.
27. MOTAXI error code (aaaaaaa) returned; for error code, see MOTAXI listing.
28. MOTPTI error code (aaaaaaaaaa) returned; for error code, see MOTPTI listing.
29. POLYI error code (aaaaaaaaaa) returned; for error code, see POLYI listing.
30. PLATEI error code (aaaaaaaaaa) returned; for error code, see PLATEI listing.
31. Number of SA arrays for this surface is greater than six.
32. Number of beams (nnnnn) is less than two.
33. Order of polynomial is less than zero.
34. Translation freedom not specified.
35. Rotation-translation order indicators not X, Y, or Z.

36. GENMOD error number (nnnnn) returned:

- Error number = 1, READTP error while reading SA array
- = 2, AINTL error
- = 3, AINTG error
- = 4, WRTETP error while writing geometry
- = 5, WRTETP error while writing Z
- = 6, WRTETP error while writing DZ1
- = 7, WRTETP error while writing DZ2

37. Rotation order X,Y,Z not specified correctly (aaaaaaaaaa)

6.8.2 WARNING MESSAGES

All warning messages will be self-explanatory and printed in the following format:

```
***** WARNING MESSAGE nn
DIAGNOSED WHILE EXECUTING ROUTINE name
any additional warning messages
```

where "nn" is the warning message number and "name" is the name of the routine in execution when the warning was detected. Additional explanatory messages will be appended to the two standard warning message lines.

The following list is a brief description of each warning message number:

1. End-of-record card encountered before \$END card. The \$END card is assumed.
2. The maximum number of TITLE cards has already been read. The above card is treated as a comment.
3. Parent surface number (nnnnn) is greater than or equal to current surface number (nnnnn). Parent surface modes are not calculated.
4. Input matrix for (aaaaaaaaaa) row or column size (nnnnn x nnnnn) does not equal row or column size specified (nnnnn x nnnnn).

7.0 SAMPLE PROBLEM

7.1 DESCRIPTION OF SAMPLE PROBLEM

The sample problem used here consists of a high aspect ratio wing that has three movable control surfaces (fig. 23). Eight vibrational mode shapes were calculated using an elastic axis idealization. To the basic set of freedoms, three control surface rotation freedoms were added. The motion axis interpolation method was used for all surfaces.

The mode shapes were defined at 34 node points where coordinates were input in the reference axis system. Nodal locations were on tape and were in a tip to root order. Mode shapes for the parent surface (main wing surface) were on tape in a combined freedom format. Three freedoms per node were generated (δ_z , θ_x , θ_y). Input modes were defined parallel and perpendicular to the motion axis.

The parent surface motion axis was defined with eleven motion axis definition points. The hinge lines were used for the motion axes of each control surface.

A total of 36 output points were read from cards in the local axis system coordinates. The local aerodynamic and local structural axes are the same. Output motions requested were surface vertical translations (δ_z), slope parallel to the freestream ($d\delta_z/dx$), and slope perpendicular to the freestream ($d\delta_z/dy$).

Boeing Commercial Airplane Company
P.O. Box 3707
Seattle, Washington 98124
May, 1977

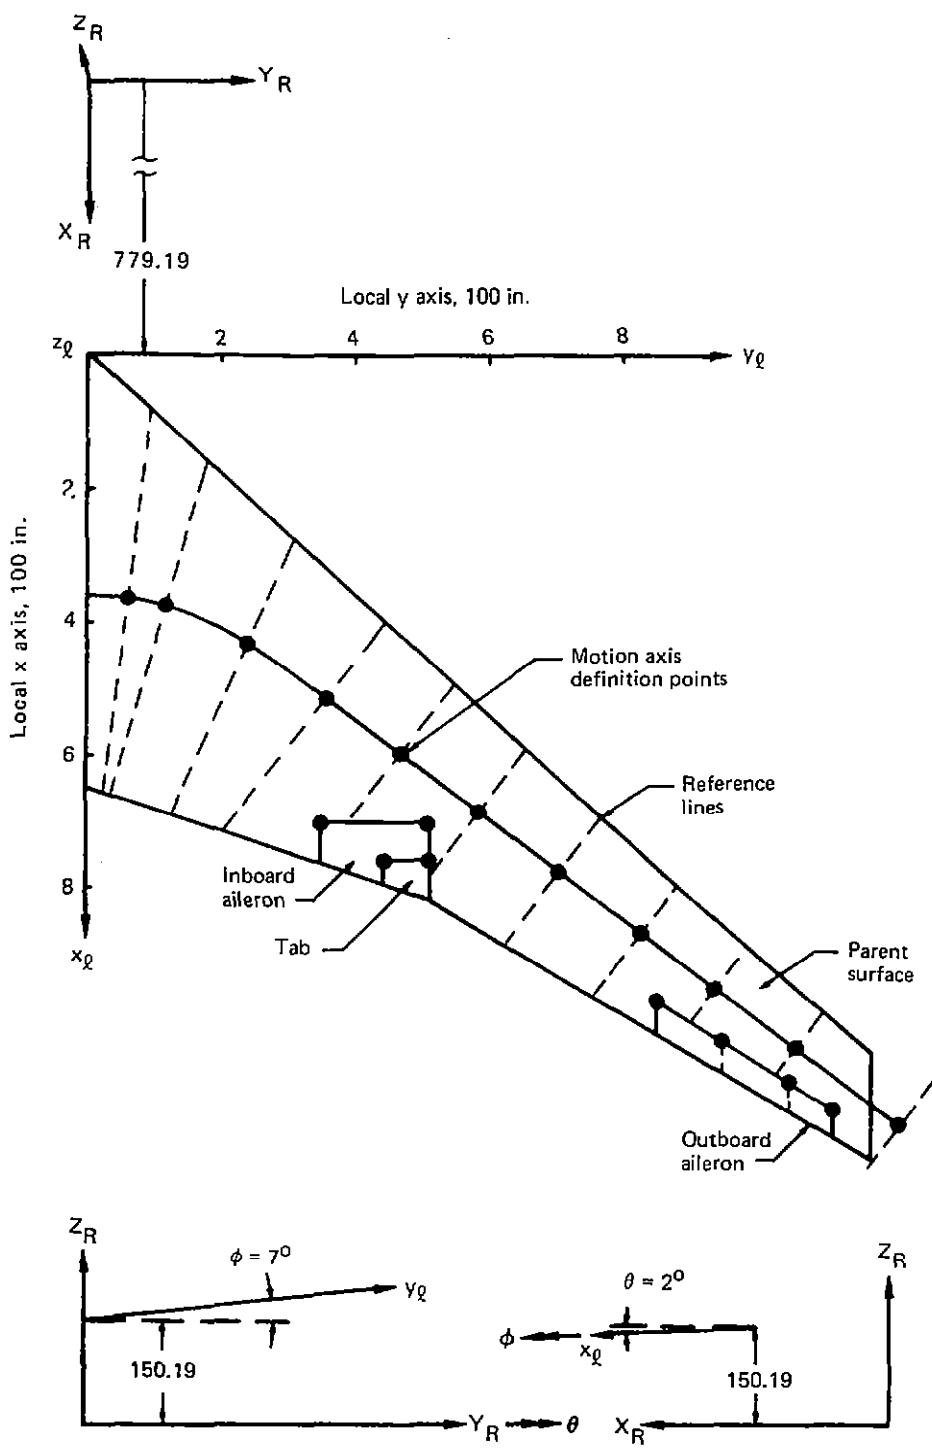


Figure 23. — Sample Problem

7.2 SAMPLE PROBLEM INPUT AND OUTPUT

Sample Problem Card Input

```

$INTERPOLATION PROGRAM
TITLE      HIGH ASPECT RATIO WING WITH 11 MODAL FREEDOMS
C          DEFINE SA TAPE FOR OUTPUT
SAFILE    SATAP
C          DEFINE TOTAL NUMBER OF MODES
C          9 STRUCTURAL MODES + 3 CONTROL SURFACE FREEDOMS
TMODE     11
$SURFACE   1      MAIN WING
TRANSFORM
779.19  0.0      150.09  7.      2.      0.0      ORDER YXZ
NODES   FROM      TAPE      REFERENCE 34      ENGLISH
NODETP   1      1
C          CHANGE NODE ORDERING FROM TIP TO ROOT TO ROOT TO TIP
MAPNODES
  34  33  32  31  30  29  28  27  26  25  24  23  22  21
  20  19  18  17  16  15  14  13  12  11  10  9   8   7
  6   5   4   3   2   1
NODES
CUMMIFIED FROM      TAPE      102      8      1      1      8
NODETP   1      7
MAPT2
  1   2   3   4   5   6   7   8   9   10  11  12
  13  14  15  16  17  18  19  20  21  22  23  24
  25  26  27  28  29  30  31  32  33  34
MAPRX
  35  36  37  38  39  40  41  42  43  44  45  46
  47  48  49  50  51  52  53  54  55  56  57  58
  59  60  61  62  63  64  65  66  67  68
MAPRY
  69  70  71  72  73  74  75  76  77  78  79  80
  81  82  83  84  85  86  87  88  89  90  91  92
  93  94  95  96  97  98  99 100 101 102
SA
MOTIONAXIS 11      1
343.77  58.7   -.1444
376.5   117.4   -.2888
427.36  234.8   -.5776
512.14  352.2   -.75041
597.44  469.6   -.75041
685.54  587.0   -.75041
773.63  704.4   -.75041
861.51  821.8   -.7433
940.78  939.2   -.7433
1036.34 1056.6   -.7433
1159.0   1211.0   -.7433
PRINT LOCATIONS
PRINT  NODE
SEND
$SURFACE   2      INBO. AIL.
TRANSFORM
779.19  0.0      150.09  7.      2.      0.0      ORDER YXZ
C          NODES ON HINGE LINE
NODES   FROM      CARD      LOCAL      2
700.    350.    0.0
700.    515.    0.0
C          PARENT SURFACE IS MAIN WING SURFACE
NODES   FROM      1
RIGID   9       1
HINGE   700.    350.    700.    515.    1.0

```

```

SA          1   1   1
MOTIONAXIS 2   0
700.      350.  0.
700.      515.  0.
PRINT     SA
PRINT     LOCATIONS
PRINT     MODE
$END
$SURFACE  3   I.A. TAB
TRANSFORM
779.19  0.0    150.09  7.+    2.    0.0    ORDER YXZ
C       NODES ON HINGE LINE
NODES   FROM    CARD   LOCAL    2
750.5   445.0  0.0
750.5   515.0  0.0
C       PARENT SURFACE IS INBOARD ATL.
MODES   FROM    2
RIGID   11    1
HINGE   750.5  445.0    750.5  515.  1.0
SA          1   1   1
MOTIONAXIS 2   0
750.5   445.0  0.
750.5   515.0  0.
PRINT     LOCATIONS
PRINT     MODE
$END
$SURFACE  4   OUTBD. ATL
TRANSFORM
779.19  0.0    150.09  7.     2.    0.0    ORDER YXZ
C       NODES ON HINGE LINE
NODES   FROM    CARD   LOCAL    4
965.0   850.0  0.0
1027.264 950.0  0.0
1089.528 1050.0 0.0
1130.0   1115.0 0.0
C       PARENT SURFACE IS MAIN WING SURFACE
MODES   FROM    1
RIGID   10    1
HINGE   965.0  850.0    1130.0  1115.0  1.
SA          1   1   1
MOTIONAXIS 2   0
965.   850.  0.
1130.  1115. 0.
PRINT     LOCATION
PRINT     MODE
$END
$OTAPE   MODEOUT
$HODE    747 WING
AEROT   779.19  0.0    150.09
OUTLO   REAU FROM CARD   LOCAL    36    3
157.8   96.9  0.0    1
334.0   96.5  0.0    1
534.3   96.9  0.0    1
665.1   96.9  0.0    1
318.6   288.2 0.0    1
461.4   288.2 0.0    1

```

| | | | |
|--------|--------|-----|---|
| 623.8 | 288.2 | 0.0 | 1 |
| 729.6 | 248.2 | 0.0 | 1 |
| 472.8 | 471.6 | 0.0 | 1 |
| 583.6 | 471.6 | 0.0 | 1 |
| 709.6 | 471.6 | 0.0 | 2 |
| 791.8 | 471.6 | 0.0 | 3 |
| 620.1 | 642.1 | 0.0 | 1 |
| 711.0 | 642.1 | 0.0 | 1 |
| 614.3 | 642.1 | 0.0 | 1 |
| 801.8 | 642.1 | 0.0 | 1 |
| 753.5 | 795.1 | 0.0 | 1 |
| 829.5 | 795.1 | 0.0 | 1 |
| 915.9 | 795.1 | 0.0 | 1 |
| 972.4 | 795.1 | 0.0 | 1 |
| 861.3 | 926.5 | 0.0 | 1 |
| 926.8 | 926.5 | 0.0 | 1 |
| 1001.3 | 926.5 | 0.0 | 1 |
| 1049.9 | 926.5 | 0.0 | 4 |
| 946.2 | 1032.5 | 0.0 | 1 |
| 1003.9 | 1032.5 | 0.0 | 1 |
| 1069.6 | 1032.5 | 0.0 | 1 |
| 1112.6 | 1032.5 | 0.0 | 4 |
| 1008.5 | 1110.4 | 0.0 | 1 |
| 1060.6 | 1110.4 | 0.0 | 1 |
| 1119.7 | 1110.4 | 0.0 | 1 |
| 1158.4 | 1110.4 | 0.0 | 4 |
| 1046.6 | 1158.0 | 0.0 | 1 |
| 1095.2 | 1158.0 | 0.0 | 1 |
| 1150.4 | 1158.0 | 0.0 | 1 |
| 1186.4 | 1158.0 | 0.0 | 1 |
| PRINT | MODE | | |
| \$END | | | |
| \$QUIT | | | |

Sample Problem Output

```
*****  
* PROGRAM INTERPA VERSION 11/27/75  
* BEGINNING EXECUTION ON THE BCS 6600.  
* DATE OF RUN IS 76/10/14.  
* TIME OF RUN IS 20. 4.31  
*  
*****  
(*INTERPOLATION PROGRAM  
(TITLE      HIGH ASPECT RATIO WING WITH 11 MODAL FREEDOMS  
(C          DEFINE SA TAPE FOR OUTPUT  
(SATAPE    SATAP  
  
TAPE NAME (SATAP ) WHERE SA ARRAYS ARE STORED.  
  
(C          DEFINE TOTAL NUMBER OF MODES  
(C          8 STRUCTURAL MODES + 3 CONTROL SURFACE FREEDOMS  
(THODE     11  
  
TOTAL NUMBER OF MODES IS 11  
  
(*SURFACE 1 MAIN WING  
SURFACE NUMBER ( 1) MNEMONIC IDENTIFICATION IS (MAIN WING )  
  
(*TRANSFORM  
           TRANSLATION                      ROTATION (DEGREES)  
           X       Y       Z   PHIX   PHIY   PHIZ  
7.792E+02  .0     1.501E+02  7.000E+00  2.000E+00  .0  
----- ROTATION -----  TRANSLATION  
9.993998E-01  .0     -3.489950E-02  7.791900E+02  
4.253179E-03  9.925462E-01  1.217951E-01  .0  
3.463936E-02 -1.218693E-01  9.919415E-01  1.500900E+02  
  
(NODES   FROM      TAPE      REFERENCE  34      ENGLISH  
NODE COORDINATES ARE INPUT FROM (TAPE  1 IN (REFERENCE ) AXIS FRAME IN THE (ENGLISH  1 UNIT SYSTEM.  
NUMBER OF NODES TO BE READ IS ( 34)  
  
TAPE NAME = MODETP  
FILE POSITION = 1  
MATRIX POSITION = 1  
ROTATION MATRIX INDICATOR = -0
```

{C CHANGE NODE ORDERING FROM TIP TO ROOT TO ROOT TO TIP
IMAPNODS }

NUMBER OF NODES SELECTING 34 }

| | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 34 | 33 | 32 | 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 |
| 20 | 19 | 18 | 17 | 16 | 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 |
| 6 | 5 | 4 | 3 | 2 | 1 | | | | | | | | |

IMODES }

{COMBINFO FROM TAPE TAPE 102 8 1 1 8 }
TAPE NAME = MODETP
FILE POSITION = 1
MATRIX POSITION = 7
ROTATION MATRIX INDICATOR = -0 }

IMAPTZ }

| | | | | | | | | | | | |
|----|----|----|----|----|----|----|-----|-----|-----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 |
| 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
| 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | | |
| 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 |
| 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 |
| 59 | 60 | 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | | |
| 69 | 70 | 71 | 72 | 73 | 74 | 75 | 76 | 77 | 78 | 79 | 80 |
| 81 | 82 | 83 | 84 | 85 | 86 | 87 | 88 | 89 | 90 | 91 | 92 |
| 93 | 94 | 95 | 96 | 97 | 98 | 99 | 100 | 101 | 102 | | |
| 2 | 1 | | | | | | | | | | |

SALL SELECTED FREEDOMS ARE 0 0 1 1 1 0 }

IMOTIONAXIS 11 1
MOTION AXES SCHEMF }

NUMBER OF DEFINITION POINTS = 11
INDICATOR FOR ROTATION AX ORIENTATION / 1
EQUAL 0, FREESTREAM / 1
NOT EQUAL 0, PERPENDICULAR TO LOCAL STRAIGHT LINE MOTION AXIS }

| X-LOC | Y-LOC | SLOPE |
|-------|-----------|-----------|
| 1 | 3.638E+02 | 5.470E+01 |
| 2 | 3.765E+02 | 1.174E+02 |
| 3 | 4.274E+02 | 2.348E+02 |
| 4 | 5.122E+02 | 3.522E+02 |
| 5 | 5.974E+02 | 4.696E+02 |
| 6 | 6.855E+02 | 5.870E+02 |
| 7 | 7.736E+02 | 7.044E+02 |
| 8 | 8.615E+02 | 8.218E+02 |
| 9 | 9.488E+02 | 9.392E+02 |
| 10 | 1.036E+03 | 1.057E+03 |
| 11 | 1.150E+03 | 1.211E+03 |

IPRINT LOCATIONS

PRINT OPTION IS 2 (L0) 11 10 1 }

IPRINT MODE PRINT OPTION IS 6 (M0) 11 10 5 }

ISEND }

***** TITLE *****

TITLE HIGH ASPECT RATIO WING WITH 11 MODAL FREEDOMS

INPUT MODE SHAPES TRANSLATION - Z

| ROW | 1MODE 11MODE | 2MODE | 3MODE | 4MODE | 5MODE | 6MODE | 7MODE | 8MODE | 9MODE | 10MODE |
|-----|-----------------|------------|------------|------------|------------|------------|------------|------------|-------|--------|
| 1 | 1.000E+00 .0 | 1.555E+02 | -5.815E-02 | 2.275E-02 | 2.972E-02 | -1.130E-01 | -1.737E-02 | 2.030E-02 | .0 | .0 |
| 2 | 1.000E+00 .0 | 1.555E+02 | -5.788E-02 | 2.251E-02 | 2.924E-02 | -1.101E-01 | -1.668E-02 | 1.911E-02 | .0 | .0 |
| 3 | 1.000E+00 .0 | 1.555E+02 | -5.687E-02 | 2.159E-02 | 2.743E-02 | -9.930E-02 | -1.413E-02 | 1.478E-02 | .0 | .0 |
| 4 | 1.000E+00 .0 | 1.555E+02 | -5.501E-02 | 1.991E-02 | 2.420E-02 | -7.991E-02 | -9.663E-03 | 7.285E-03 | .0 | .0 |
| 5 | 1.000E+00 .0 | 1.478E+02 | -5.482E-02 | 1.899E-02 | 2.272E-02 | -7.100E-02 | -7.444E-03 | 3.671E-03 | .0 | .0 |
| 6 | 1.000E+00 .0 | 1.190E+02 | -5.253E-02 | 1.479E-02 | 1.448E-02 | -2.725E-02 | 4.326E-03 | -1.460E-02 | .0 | .0 |
| 7 | 1.000E+00 .0 | 1.091E+02 | -5.118E-02 | 1.310E-02 | 1.076E-02 | -9.103E-03 | 9.374E-03 | -2.206E-02 | .0 | .0 |
| 8 | 1.000E+00 .0 | 9.350E+01 | -4.842E-02 | 1.030E-02 | 3.947E-03 | 2.166E-02 | 1.835E-02 | -3.476E-02 | .0 | .0 |
| 9 | 1.000E+00 .0 | 6.350E+01 | -4.010E-02 | 3.860E-03 | -1.313E-02 | 9.215E-02 | 3.892E-02 | -6.125E-02 | .0 | .0 |
| 10 | 1.000E+00 .0 | 2.940E+01 | -2.921E-02 | -1.331E-03 | -3.430E-02 | 1.541E-01 | 6.281E-02 | -8.710E-02 | .0 | .0 |
| 11 | 1.000E+00 .0 | 2.300E+01 | -2.752E-02 | -2.044E-03 | -3.757E-02 | 1.623E-01 | 6.627E-02 | -9.036E-02 | .0 | .0 |
| 12 | 1.000E+00 .0 | -2.280E+01 | -4.021E-03 | -8.193E-03 | -7.384E-02 | 2.296E-01 | 9.825E-02 | -1.104E-01 | .0 | .0 |
| 13 | 1.000E+00 .0 | -5.050E+01 | 1.418E-02 | -1.072E-02 | -9.779E-02 | 2.502E-01 | 1.151E-01 | -1.122E-01 | .0 | .0 |
| 14 | 1.000E+00 .0 | -6.350E+01 | 2.398E-02 | -1.159E-02 | -1.093E-01 | 2.527E-01 | 1.218E-01 | -1.096E-01 | .0 | .0 |
| 15 | 1.000E+00 .0 | -6.720E+01 | 2.694E-02 | -1.166E-02 | -1.128E-01 | 2.510E-01 | 1.235E-01 | -1.083E-01 | .0 | .0 |
| 16 | 1.000E+00 | -8.550E+01 | 4.338E-02 | -1.222E-02 | -1.291E-01 | 2.417E-01 | 1.294E-01 | -9.761E-02 | .0 | .0 |

\

6

| INPUT MODE SHAPES ROTATION - X | | | | | | | | | | |
|--------------------------------|----------|------------|-----------|------------|------------|------------|------------|------------|-------|--------|
| ROW | 1MODE | 2MODE | 3MODE | 4MODE | 5MODE | 6MODE | 7MODE | 8MODE | 9MODE | 10MODE |
| 1 | .0 .0 | .0 | 1.781E-05 | -1.616E-05 | -3.229E-05 | 1.933E-04 | 4.675E-05 | -8.034E-05 | .0 | .0 |
| 2 | .0 .0 | .0 | 3.124E-05 | -2.833E-05 | -5.578E-05 | 3.342E-04 | 7.936E-05 | -1.352E-04 | .0 | .0 |
| 3 | .0 .0 | .0 | 4.104E-05 | -3.716E-05 | -7.248E-05 | 4.344E-04 | 1.018E-04 | -1.723E-04 | .0 | .0 |
| 4 | .0 .0 | .0 | 5.681E-05 | -5.123E-05 | -9.810E-05 | 5.876E-04 | 1.340E-04 | -2.234E-04 | .0 | .0 |
| 5 | .0 .0 | -4.880E-01 | 2.005E-05 | -6.325E-05 | -1.078E-04 | 6.287E-04 | 1.592E-04 | -2.567E-04 | .0 | .0 |
| 6 | .0 .0 | -4.880E-01 | 5.916E-05 | -7.892E-05 | -1.724E-04 | 8.488E-04 | 2.362E-04 | -3.561E-04 | .0 | .0 |
| 7 | .0 .0 | -4.880E-01 | 7.517E-05 | -8.474E-05 | -1.970E-04 | 9.248E-04 | 2.653E-04 | -3.854E-04 | .0 | .0 |
| 8 | .0 .0 | -4.880E-01 | 1.012E-04 | -9.345E-05 | -2.347E-04 | 1.031E-03 | 3.011E-04 | -4.149E-04 | .0 | .0 |
| 9 | .0 .0 | -4.880E-01 | 1.605E-04 | -1.097E-04 | -3.103E-04 | 1.195E-03 | 3.561E-04 | -4.294E-04 | .0 | .0 |
| 10 | .0 .0 | -6.008E-01 | 2.159E-04 | -8.281E-05 | -3.953E-04 | 1.003E-03 | 4.252E-04 | -4.166E-04 | .0 | .0 |
| 11 | .0 .0 | -6.008E-01 | 2.399E-04 | -8.241E-05 | -4.172E-04 | 9.766E-04 | 4.238E-04 | -3.740E-04 | .0 | .0 |
| 12 | .0 .0 | -6.008E-01 | 3.554E-04 | -6.853E-05 | -4.992E-04 | 6.576E-04 | 3.839E-04 | -1.281E-04 | .0 | .0 |
| 13 | .0 .0 | -6.008E-01 | 4.313E-04 | -4.590E-05 | -5.289E-04 | 2.404E-04 | 3.298E-04 | 6.336E-05 | .0 | .0 |
| 14 | .0 .0 | -6.008E-01 | 4.709E-04 | -2.940E-05 | -5.361E-04 | -4.836E-05 | 2.933E-04 | 1.703E-04 | .0 | .0 |
| 15 | .0 .0 | -6.008E-01 | 5.025E-04 | -1.483E-05 | -5.386E-04 | -2.977E-04 | 2.592E-04 | 2.595E-04 | .0 | .0 |
| 16 | .0 .0 | -6.008E-01 | 5.573E-04 | 2.153E-06 | -5.275E-04 | -4.390E-04 | 1.359E-04 | 4.182E-04 | .0 | .0 |
| 17 | .0 .0 | -6.009E-01 | 6.479E-04 | 3.840E-05 | -4.852E-04 | -6.766E-04 | -9.259E-05 | 6.568E-04 | .0 | .0 |
| 18 | .0 | -6.008E-01 | 7.375E-04 | 8.887E-05 | -4.025E-04 | -9.062E-04 | -3.524E-04 | 8.392E-04 | .0 | .0 |

| 19 | .0 .0 | -6.009E-01 -6.008E-01 | 8.198E-04 9.287E-04 | 1.452E-04 2.483E-04 | -2.915E-04 -9.550E-05 | -1.095E-03 -1.265E-03 | -6.249E-04 -9.440E-04 | 9.635E-04 9.416E-04 | .0 .0 | .0 .0 | |
|----|----------|--------------------------|------------------------|------------------------|--------------------------|--------------------------|--------------------------|--------------------------|----------|----------|--|
| 20 | .0 .0 | -6.008E-01 -6.008E-01 | 1.021E-03 1.095E-03 | 3.772E-04 5.071E-04 | 1.360E-04 3.656E-04 | -1.300E-03 -1.236E-03 | -1.167E-03 -1.289E-03 | 6.944E-04 3.329E-04 | .0 .0 | .0 .0 | |
| 21 | .0 .0 | -6.008E-01 -6.008E-01 | 1.205E-03 1.231E-03 | 8.293E-04 9.445E-04 | 8.321E-04 9.766E-04 | -7.552E-04 -5.302E-04 | -1.244E-03 -1.173E-03 | -7.139E-04 -1.097E-03 | .0 .0 | .0 .0 | |
| 22 | .0 .0 | -6.008E-01 -6.008E-01 | 1.273E-03 1.306E-03 | 1.155E-03 1.511E-03 | 1.253E-03 1.590E-03 | -2.147E-05 8.609E-04 | -9.613E-04 -5.758E-04 | -1.868E-03 -2.983E-03 | .0 .0 | .0 .0 | |
| 23 | .0 .0 | -5.964E-01 -5.964E-01 | 1.340E-03 1.366E-03 | 1.646E-03 1.752E-03 | 1.811E-03 1.991E-03 | 1.221E-03 1.526E-03 | -4.459E-05 4.512E-04 | -2.340E-03 -1.690E-03 | .0 .0 | .0 .0 | |
| 24 | .0 .0 | -5.964E-01 -5.964E-01 | 1.394E-03 1.366E-03 | 1.864E-03 1.752E-03 | 2.198E-03 1.991E-03 | 1.880E-03 1.526E-03 | 1.075E-03 4.512E-04 | -8.230E-04 -1.690E-03 | .0 .0 | .0 .0 | |
| 25 | .0 .0 | -5.964E-01 -5.964E-01 | 1.462E-03 1.495E-03 | 2.165E-03 2.312E-03 | 2.740E-03 3.021E-03 | 2.849E-03 3.366E-03 | 2.913E-03 3.971E-03 | 2.031E-03 3.817E-03 | .0 .0 | .0 .0 | |
| 26 | .0 .0 | -5.964E-01 -5.964E-01 | 1.534E-03 1.553E-03 | 2.505E-03 2.603E-03 | 3.378E-03 3.556E-03 | 4.060E-03 4.428E-03 | 5.434E-03 6.237E-03 | 6.557E-03 8.247E-03 | .0 .0 | .0 .0 | |
| 27 | .0 .0 | -5.964E-01 -5.964E-01 | 1.602E-03 1.636E-03 | 2.804E-03 3.054E-03 | 3.800E-03 4.154E-03 | 4.800E-03 5.214E-03 | 6.800E-03 7.314E-03 | 8.800E-03 9.414E-03 | .0 .0 | .0 .0 | |
| 28 | .0 .0 | -5.964E-01 -5.964E-01 | 1.670E-03 1.704E-03 | 3.102E-03 3.354E-03 | 4.100E-03 4.454E-03 | 5.100E-03 5.514E-03 | 6.100E-03 6.514E-03 | 7.100E-03 7.914E-03 | .0 .0 | .0 .0 | |
| 29 | .0 .0 | -5.964E-01 -5.964E-01 | 1.738E-03 1.772E-03 | 3.400E-03 3.654E-03 | 4.400E-03 4.754E-03 | 5.400E-03 5.854E-03 | 6.400E-03 6.954E-03 | 7.400E-03 8.054E-03 | .0 .0 | .0 .0 | |
| 30 | .0 .0 | -5.964E-01 -5.964E-01 | 1.806E-03 1.840E-03 | 3.700E-03 3.954E-03 | 4.700E-03 5.154E-03 | 5.700E-03 6.254E-03 | 6.700E-03 7.254E-03 | 7.700E-03 8.354E-03 | .0 .0 | .0 .0 | |
| 31 | .0 .0 | -5.964E-01 -5.964E-01 | 1.874E-03 1.908E-03 | 4.000E-03 4.254E-03 | 5.000E-03 5.454E-03 | 6.000E-03 6.554E-03 | 7.000E-03 7.254E-03 | 8.000E-03 8.354E-03 | .0 .0 | .0 .0 | |
| 32 | .0 .0 | -5.964E-01 -5.964E-01 | 1.942E-03 1.976E-03 | 4.300E-03 4.554E-03 | 5.300E-03 5.854E-03 | 6.300E-03 6.554E-03 | 7.300E-03 7.254E-03 | 8.300E-03 8.354E-03 | .0 .0 | .0 .0 | |
| 33 | .0 .0 | -5.964E-01 -5.964E-01 | 2.010E-03 2.044E-03 | 4.600E-03 4.854E-03 | 5.600E-03 5.854E-03 | 6.600E-03 6.554E-03 | 7.600E-03 7.254E-03 | 8.600E-03 8.354E-03 | .0 .0 | .0 .0 | |
| 34 | .0 .0 | -5.964E-01 -5.964E-01 | 2.078E-03 2.112E-03 | 4.900E-03 5.154E-03 | 5.900E-03 6.254E-03 | 6.900E-03 6.554E-03 | 7.900E-03 7.254E-03 | 8.900E-03 8.354E-03 | .0 .0 | .0 .0 | |

| ROW | INPUT MODE SHAPES ROTATION - Y | | | | | | | | | |
|-----|--------------------------------|-----------|-----------|------------|------------|------------|------------|------------|-------|--------|
| | 1MODE 11MODE | 2MODE | 3MODE | 4MODE | 5MODE | 6MODE | 7MODE | 8MODE | 9MODE | 10MODE |
| 1 | .0 .0 | 1.000E+00 | 9.212E-05 | 2.837E-05 | -1.278E-05 | -5.438E-05 | -4.739E-06 | 1.326E-05 | .0 | .0 |
| 2 | .0 .0 | 1.000E+00 | 9.046E-05 | 2.715E-05 | -8.669E-06 | -5.449E-05 | -1.186E-05 | 2.274E-05 | .0 | .0 |
| 3 | .0 .0 | 1.000E+00 | 8.929E-05 | 2.624E-05 | -5.839E-06 | -5.384E-05 | -1.667E-05 | 2.893E-05 | .0 | .0 |
| 4 | .0 .0 | 1.000E+00 | 8.736E-05 | 2.473E-05 | -1.181E-06 | -5.264E-05 | -2.457E-05 | 3.905E-05 | .0 | .0 |
| 5 | .0 .0 | 8.728E-01 | 1.046E-04 | -7.105E-06 | -4.829E-05 | 2.653E-04 | 4.083E-05 | -7.206E-05 | .0 | .0 |
| 6 | .0 .0 | 8.728E-01 | 1.013E-04 | -5.199E-05 | -1.911E-05 | 5.188E-04 | -2.974E-05 | 9.778E-06 | .0 | .0 |
| 7 | .0 .0 | 8.728E-01 | 9.947E-05 | -7.629E-05 | -3.269E-06 | 6.559E-04 | -6.806E-05 | 5.428E-05 | .0 | .0 |
| 8 | .0 .0 | 8.728E-01 | 9.633E-05 | -1.165E-04 | 2.269E-05 | 8.814E-04 | -1.26E-04 | 1.157E-04 | .0 | .0 |
| 9 | .0 .0 | 8.728E-01 | 8.904E-05 | -2.111E-04 | 8.360E-05 | 1.401E-03 | -2.634E-04 | 2.630E-04 | .0 | .0 |
| 10 | .0 .0 | 7.994E-01 | 1.160E-04 | -3.418E-04 | 9.858E-05 | 2.200E-03 | -3.719E-04 | 3.906E-04 | .0 | .0 |
| 11 | .0 .0 | 7.994E-01 | 1.187E-04 | -3.841E-04 | 1.176E-04 | 2.431E-03 | -4.193E-04 | 4.392E-04 | .0 | .0 |
| 12 | .0 .0 | 7.994E-01 | 1.317E-04 | -5.938E-04 | 2.112E-04 | 3.552E-03 | -6.371E-04 | 6.427E-04 | .0 | .0 |
| 13 | .0 .0 | 7.994E-01 | 1.412E-04 | -7.469E-04 | 2.795E-04 | 4.370E-03 | -7.961E-04 | 7.912E-04 | .0 | .0 |
| 14 | .0 .0 | 7.994E-01 | 1.465E-04 | -8.316E-04 | 3.161E-04 | 4.821E-03 | -8.767E-04 | 8.602E-04 | .0 | .0 |
| 15 | .0 .0 | 7.994E-01 | 1.509E-04 | -9.003E-04 | 3.448E-04 | 5.177E-03 | -9.342E-04 | 9.052E-04 | .0 | .0 |
| 16 | .0 .0 | 7.994E-01 | 1.591E-04 | -9.957E-04 | 3.852E-04 | 5.057E-03 | -8.908E-04 | 8.526E-04 | .0 | .0 |
| 17 | .0 .0 | 7.994E-01 | 1.735E-04 | -1.165E-03 | 4.600E-04 | 4.810E-03 | -8.174E-04 | 7.613E-04 | .0 | .0 |
| 18 | .0 .0 | 7.994E-01 | 1.901E-04 | -1.358E-03 | 5.446E-04 | 4.529E-03 | -7.342E-04 | 6.582E-04 | .0 | .0 |

| | | | | | | | | | | |
|----|----------|-----------|-----------|------------|-----------|------------|------------|------------|----|----|
| 19 | .0 .0 | 7.994E-01 | 2.073E-04 | -1.550E-03 | 6.236E-04 | 4.149E-03 | -6.292E-04 | 5.429E-04 | .0 | .0 |
| 20 | .0 .0 | 7.994E-01 | 2.347E-04 | -1.852E-03 | 7.444E-04 | 3.632E-03 | -4.467E-04 | 3.377E-04 | .0 | .0 |
| 21 | .0 .0 | 7.994E-01 | 2.646E-04 | -2.180E-03 | 8.762E-04 | 3.013E-03 | -2.482E-04 | 1.147E-04 | .0 | .0 |
| 22 | .0 .0 | 7.994E-01 | 2.935E-04 | -2.489E-03 | 9.979E-04 | 2.392E-03 | -6.550E-05 | -8.674E-05 | .0 | .0 |
| 23 | .0 .0 | 7.994E-01 | 3.568E-04 | -3.153E-03 | 1.251E-03 | 1.004E-03 | 3.345E-04 | -5.039E-04 | .0 | .0 |
| 24 | .0 .0 | 7.994E-01 | 3.775E-04 | -3.371E-03 | 1.334E-03 | 5.491E-04 | 4.654E-04 | -6.404E-04 | .0 | .0 |
| 25 | .0 .0 | 8.026E-01 | 4.118E-04 | -3.785E-03 | 1.478E-03 | -3.414E-04 | 6.859E-04 | -8.712E-04 | .0 | .0 |
| 26 | .0 .0 | 8.026E-01 | 4.686E-04 | -4.343E-03 | 1.679E-03 | -1.575E-03 | 9.617E-04 | -1.179E-03 | .0 | .0 |
| 27 | .0 .0 | 8.026E-01 | 4.698E-04 | -4.361E-03 | 1.690E-03 | -1.611E-03 | 9.636E-04 | -1.374E-03 | .0 | .0 |
| 28 | .0 .0 | 8.026E-01 | 4.703E-04 | -4.377E-03 | 1.699E-03 | -1.640E-03 | 9.713E-04 | -1.536E-03 | .0 | .0 |
| 29 | .0 .0 | 8.026E-01 | 4.707E-04 | -4.388E-03 | 1.708E-03 | -1.661E-03 | 9.732E-04 | -1.719E-03 | .0 | .0 |
| 30 | .0 .0 | 8.026E-01 | 4.740E-04 | -4.422E-03 | 1.738E-03 | -1.736E-03 | 9.465E-04 | -2.439E-03 | .0 | .0 |
| 31 | .0 .0 | 8.026E-01 | 4.762E-04 | -4.435E-03 | 1.759E-03 | -1.763E-03 | 9.447E-04 | -2.854E-03 | .0 | .0 |
| 32 | .0 .0 | 8.026E-01 | 4.815E-04 | -4.465E-03 | 1.806E-03 | -1.826E-03 | 9.274E-04 | -3.820E-03 | .0 | .0 |
| 33 | .0 .0 | 8.026E-01 | 4.852E-04 | -4.487E-03 | 1.843E-03 | -1.869E-03 | 9.335E-04 | -4.583E-03 | .0 | .0 |
| 34 | .0 .0 | 8.026E-01 | 4.885E-04 | -4.506E-03 | 1.876E-03 | -1.907E-03 | 9.391E-04 | -5.272E-03 | .0 | .0 |

| INPUT POINT LOCATIONS (REFERENCE AXIS) | | | | | | |
|--|-----------|-----------|-----------|-----------|-----------|---------|
| ROW | X | Y | Z | THETA-X | THETA-Y | THETA-Z |
| 1 | 1.154E+03 | 5.171E+01 | 1.433E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 2 | 1.154E+03 | 6.352E+01 | 1.448E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 3 | 1.154E+03 | 9.131E+01 | 1.482E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 4 | 1.155E+03 | 1.275E+02 | 1.527E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 5 | 1.162E+03 | 1.404E+02 | 1.540E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 6 | 1.192E+03 | 1.923E+02 | 1.593E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 7 | 1.201E+03 | 2.099E+02 | 1.611E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 8 | 1.217E+03 | 2.372E+02 | 1.639E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 9 | 1.247E+03 | 2.913E+02 | 1.695E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 10 | 1.281E+03 | 3.390E+02 | 1.742E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 11 | 1.286E+03 | 3.454E+02 | 1.748E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 12 | 1.334E+03 | 4.078E+02 | 1.808E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 13 | 1.362E+03 | 4.445E+02 | 1.844E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 14 | 1.375E+03 | 4.617E+02 | 1.860E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 15 | 1.379E+03 | 4.665E+02 | 1.865E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 16 | 1.397E+03 | 4.913E+02 | 1.889E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 17 | 1.422E+03 | 5.244E+02 | 1.921E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 18 | 1.460E+03 | 5.738E+02 | 1.968E+02 | 7.000E+00 | 2.000E+00 | .0 |

| | | | | | | |
|----|-----------|-----------|-----------|-----------|-----------|----|
| 19 | 1.464E+03 | 5.796E+02 | 1.974E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 20 | 1.511E+03 | 6.409E+02 | 2.033E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 21 | 1.536E+03 | 6.739E+02 | 2.064E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 22 | 1.552E+03 | 6.943E+02 | 2.084E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 23 | 1.600E+03 | 7.574E+02 | 2.145E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 24 | 1.607E+03 | 7.662E+02 | 2.153E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 25 | 1.623E+03 | 7.881E+02 | 2.174E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 26 | 1.653E+03 | 8.278E+02 | 2.213E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 27 | 1.670E+03 | 8.506E+02 | 2.235E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 28 | 1.687E+03 | 8.734E+02 | 2.257E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 29 | 1.701E+03 | 8.923E+02 | 2.275E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 30 | 1.757E+03 | 9.657E+02 | 2.346E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 31 | 1.776E+03 | 9.905E+02 | 2.370E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 32 | 1.819E+03 | 1.048E+03 | 2.426E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 33 | 1.863E+03 | 1.107E+03 | 2.483E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 34 | 1.876E+03 | 1.124E+03 | 2.499E+02 | 7.000E+00 | 2.000E+00 | .0 |

INPUT POINT LOCATIONS (LOCAL AXIS)

| ROW | X | Y | Z | THETA-X | THETA-Y | THETA-Z |
|-----|-----------|-----------|------------|---------|---------|---------|
| 1 | 3.750E+02 | 5.210E+01 | -1.376E-06 | | | |
| 2 | 3.750E+02 | 6.400E+01 | -1.420E-06 | | | |
| 3 | 3.750E+02 | 9.200E+01 | -1.521E-06 | | | |
| 4 | 3.750E+02 | 1.285E+02 | -1.653E-06 | | | |
| 5 | 3.827E+02 | 1.415E+02 | -1.724E-06 | | | |
| 6 | 4.120E+02 | 1.937E+02 | -2.006E-06 | | | |
| 7 | 4.214E+02 | 2.115E+02 | -2.100E-06 | | | |
| 8 | 4.370E+02 | 2.390E+02 | -2.249E-06 | | | |
| 9 | 4.670E+02 | 2.935E+02 | -2.542E-06 | | | |
| 10 | 5.011E+02 | 3.415E+02 | -2.823E-06 | | | |
| 11 | 5.060E+02 | 3.480E+02 | -2.862E-06 | | | |
| 12 | 5.53CE+02 | 4.109E+02 | -3.239E-06 | | | |
| 13 | 5.810E+02 | 4.478E+02 | -3.461E-06 | | | |
| 14 | 5.940E+02 | 4.652E+02 | -3.565E-06 | | | |
| 15 | 5.977E+02 | 4.700E+02 | -3.594E-06 | | | |
| 16 | 6.160E+02 | 4.950E+02 | -3.743E-06 | | | |
| 17 | 6.410E+02 | 5.283E+02 | -3.942E-06 | | | |
| 18 | 6.790E+02 | 5.781E+02 | -4.243E-06 | | | |
| 19 | 6.830E+02 | 5.840E+02 | -4.277E-06 | | | |
| 20 | 7.300E+02 | 6.457E+02 | -4.649E-06 | | | |
| 21 | 7.548E+02 | 6.790E+02 | -4.848E-06 | | | |
| 22 | 7.707E+02 | 6.995E+02 | -4.973E-06 | | | |
| 23 | 8.180E+02 | 7.631E+02 | -5.353E-06 | | | |
| 24 | 8.247E+02 | 7.720E+02 | -5.406E-06 | | | |

| | | | |
|----|-----------|-----------|------------|
| 25 | 8.410E+02 | 7.940E+02 | -5.538E-06 |
| 26 | 8.7C9E+02 | 8.340E+02 | -5.777E-06 |
| 27 | 8.880F+02 | 8.570E+02 | -5.915E-06 |
| 28 | 9.051E+02 | 8.800E+02 | -6.052E-06 |
| 29 | 9.190E+02 | 8.990E+02 | -6.165E-06 |
| 30 | 9.742E+02 | 9.730E+02 | -6.607E-06 |
| 31 | 9.928E+02 | 9.979E+02 | -6.756E-06 |
| 32 | 1.036E+03 | 1.056E+03 | -7.104E-06 |
| 33 | 1.080E+03 | 1.115E+03 | -7.456E-06 |
| 34 | 1.093E+03 | 1.132E+03 | -7.560E-06 |

(\$\$SURFACE 2 INBD. AIL.
 SURFACE NUMBER (2) MNEMONIC IDENTIFICATION IS (INBD. AIL.)
 (TRANSFORM
 TRANSLATION ROTATION (DEGREES)
 X Y Z PHI_X PHI_Y PHI_Z
 7.792E+02 .0 1.501E+02 7.000E+00 2.000E+00 .0
 ----- ROTATION ----- TRANSLATION
 9.993908E-01 .0 -3.489950E-02 7.791900E+02
 4.253179E-03 9.925462E-01 1.217951E-01 .0
 3.463936E-02 -1.218693E-01 9.919415E-01 1.500900E+02
 (C NODES ON HINGE LINE
 (NODES FROM CARD LOCAL 2
 NODE COORDINATES ARE INPUT FROM (CARD 1 IN (LOCAL 2 AXIS FRAME IN THE (METRIC 3 UNIT SYSTEM.
 NUMBER OF NODES TO BE READ IS (2)
 7.0000E+02 3.5000E+02 .0 -.0 -.0 -.0
 7.0000E+02 5.1500E+02 .0 -.0 -.0 -.0
 (C PARENT SURFACE IS MAIN WING SURFACE
 (MNODES FROM 1
 (RIGID 9 1
 (HINGE 700. 350. 700. 515. 1.0
 (SA 1 1 1
 SA(1) SELECTED FREEDOMS ARE 0 0 1 1 1 0
 (MOTIONAXES 2 0
 MOTION AXES SCHEME
 NUMBER OF DEFINITION POINTS = 2
 INDICATOR FOR ROTATION AX ORIENTATION (0)
 EQUAL 0, FREESTREAM
 NOT EQUAL 0, PERPENDICULAR TO LOCAL STRAIGHT LINE MOTION AXIS
 X-LOC Y-LOC SLOPE
 1 7.000F+02 3.500E+02 .0
 2 7.000E+02 5.150E+02 .0
 (PRINT SA
 PRINT OPTION IS 1 (SA) () ()
 (PRINT LOCATIONS
 PRINT OPTION IS 3 (LC) () ()
 (PRINT MODE
 PRINT OPTION IS 7 (MO) () ()
 (SEND

***** TITLE *****

TITLE HIGH ASPECT RATIO WING WITH 11 MODAL FREEDOMS

INPUT MODE SHAPES TRANSLATION - X

| ROW | 1MODE 11MODE | 2MODE | 3MODE | 4MODE | 5MODE | 6MODE | 7MODE | 8MODE | 9MODE | 10MODE |
|-----|-----------------|-------|-------|-------|-------|-------|-------|-------|-------|--------|
| 1 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |
| 2 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |

INPUT MODE SHAPES TRANSLATION - Y

| ROW | 1MODE 11MODE | 2MODE | 3MODE | 4MODE | 5MODE | 6MODE | 7MODE | 8MODE | 9MODE | 10MODE |
|-----|-----------------|-------|-------|-------|-------|-------|-------|-------|-------|--------|
| 1 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |
| 2 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |

INPUT MODE SHAPES TRANSLATION - Z

| ROW | 1MODE 11MODE | 2MODE | 3MODE | 4MODE | 5MODE | 6MODE | 7MODE | 8MODE | 9MODE | 10MODE |
|-----|-----------------|------------|------------|-----------|------------|------------|-----------|------------|-------|--------|
| 1 | 1.000E+00 .0 | -1.683E+02 | -1.098E-02 | 1.025E-01 | -1.353E-01 | -4.134E-01 | 2.322E-01 | -2.317E-01 | .0 | .0 |
| 2 | 1.000E+00 .0 | -1.695E+02 | 7.546E-02 | 4.908E-02 | -1.862E-01 | -7.645E-02 | 1.773E-01 | -1.043E-01 | .0 | .0 |

INPUT MODE SHAPES ROTATION - X

| ROW | 1MODE 11MODE | 2MODE | 3MODE | 4MODE | 5MODE | 6MODE | 7MODE | 8MODE | 9MODE | 10MODE |
|-----|-----------------|-----------|-----------|------------|------------|-----------|------------|-----------|-------|--------|
| 1 | .0 .0 | 1.941E-02 | 3.777E-04 | -1.663E-04 | -3.727E-04 | 1.143E-03 | 1.345E-04 | 1.469E-04 | .0 | .0 |
| 2 | .0 .0 | 1.884E-03 | 6.070E-04 | -8.047E-04 | -1.256E-04 | 2.226E-03 | -3.994E-04 | 9.134E-04 | .0 | .0 |

INPUT MODE SHAPES ROTATION - Y

| ROW | 1MODE 11MODE | 2MODE | 3MODE | 4MODE | 5MODE | 6MODE | 7MODE | 8MODE | 9MODE | 10MODE |
|-----|-----------------|-----------|------------|------------|-----------|-----------|------------|-----------|-----------|--------|
| 1 | -0 -0 | 9.762E-01 | -1.023E-04 | -7.924E-04 | 6.136E-04 | 4.517E-03 | -1.071E-03 | 8.587E-04 | 1.000E+00 | -0 |
| 2 | -0 -0 | 9.996E-01 | -2.500E-04 | -7.465E-04 | 6.312E-04 | 4.632E-03 | -8.107E-04 | 3.514E-04 | 1.000E+00 | -0 |

INPUT MODE SHAPES ROTATION - Z

| ROW | 1MODE 11MODE | 2MODE | 3MODE | 4MODE | 5MODE | 6MODE | 7MODE | 8MODE | 9MODE | 10MODE |
|-----|-----------------|-------|-------|-------|-------|-------|-------|-------|-------|--------|
| 1 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |
| 2 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |

INPUT POINT LOCATIONS (REFERENCE AXIS)

| ROW | X | Y | Z | THETA-X | THETA-Y | THETA-Z |
|-----|-----------|-----------|-----------|-----------|-----------|---------|
| 1 | 1.480E+03 | 3.474E+02 | 1.683E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 2 | 1.481E+03 | 5.112E+02 | 1.884E+02 | 7.000E+00 | 2.000E+00 | .0 |

INPUT POINT LOCATIONS (LOCAL AXIS 1)

| ROW | X | Y | Z | THETA-X | THETA-Y | THETA-Z |
|-----|-----------|-----------|----|---------|---------|---------|
| 1 | 7.000E+02 | 3.500E+02 | .0 | | | |
| 2 | 7.000E+02 | 5.150E+02 | .0 | | | |

SA ARRAY (FUNCTIONAL COEFFICIENTS)

| | | | |
|-----|----|------------|---|
| ROW | 1 | 202 | POINTER TO LAST ELEMENT |
| | 2 | MOTIONAXIS | METHOD OF INTERPOLATION |
| | 3 | 190 | POINTER TO TRANSFORMATION |
| | 4 | 11 | MCOLS, TOTAL NUMBER OF MODES |
| | 5 | 1 | MCOL1, MODES 1 THRU MCOL1 WILL BE ZEROS |
| | 6 | 11 | MCOLN, MODES MCOLN+1 THRU MCOLS WILL BE ZEROS |
| | 7 | 2.000E+00 | 2.000E+00 |
| | 11 | 3.500E+02 | 5.150E+02 |
| | 21 | .0 | .0 |
| | 31 | 1.025E-01 | 4.908E-02 |
| | | | 7.000E+02 |
| | | | .0 |
| | | | 1.650E+02 |
| | | | .0 |
| | | | -1.683E+02 |
| | | | -1.695E+02 |
| | | | -1.098E-02 |
| | | | 7.546E-02 |
| | | | -2.317E-01 |
| | | | -1.043E-01 |

| | | | | | | | | | | |
|-----|------------|-------------------------|------------|------------|------------|------------|------------|------------|------------|------------|
| 41 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | 1.941E-02 | 1.884E-03 |
| 51 | 3.777E-04 | 6.070E-04 | -1.663E-04 | -8.047E-04 | -3.727E-04 | -1.256E-04 | 1.143E-03 | 2.226E-03 | 1.345E-04 | -3.994E-04 |
| 61 | 1.469E-04 | 9.134E-04 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |
| 71 | 9.762E-01 | 9.996E-01 | -1.023E-04 | -2.500E-04 | -7.924E-04 | -7.465E-04 | 6.136E-04 | 6.312E-04 | 4.517E-03 | 4.632E-03 |
| 81 | -1.071E-03 | -8.107E-04 | 8.587E-04 | 3.514E-04 | 1.000E+00 | 1.000E+00 | .0 | .0 | .0 | .0 |
| 91 | 2.153E-17 | 2.153E-17 | -7.439E-03 | -7.439E-03 | 5.239E-04 | 5.239E-04 | -3.237E-04 | -3.237E-04 | -3.084E-04 | -3.084E-04 |
| 101 | 2.042E-03 | 2.042E-03 | -3.325E-04 | -3.325E-04 | 7.724E-04 | 7.724E-04 | .0 | .0 | .0 | .0 |
| 111 | .0 | .0 | .0 | .0 | -1.062E-04 | -1.062E-04 | 1.390E-06 | 1.390E-06 | -3.869E-06 | -3.869E-06 |
| 121 | 1.498E-06 | 1.498E-06 | 6.562E-06 | 6.562E-06 | -3.236E-06 | -3.236E-06 | 4.645E-06 | 4.645E-06 | .0 | .0 |
| 131 | .0 | .0 | .0 | .0 | .0 | .0 | 1.417E-04 | 1.417E-04 | -8.952E-07 | -8.952E-07 |
| 141 | 2.779E-07 | 2.779E-07 | 1.068E-07 | 1.068E-07 | 6.916E-07 | 6.916E-07 | 1.578E-06 | 1.578E-06 | -3.075E-06 | -3.075E-06 |
| 151 | .0 | .0 | .0 | .0 | .0 | .0 | | | | |
| 161 | | | | | | | | | | |
| 171 | | | | | | | | | | |
| 181 | | | | | | | | | | 9.994E-01 |
| 191 | 4.253E-03 | 3.464E-02 | .0 | 9.925E-01 | -1.219E-01 | -3.490E-02 | 1.218E-01 | 9.919E-01 | 7.792E+02 | .0 |
| 201 | 1.501E+02 | | | | | | | | | |
| 202 | MOTIONAXIS | METHOD OF INTERPOLATION | LAST WORD | | | | | | | |

```

($SURFACE 3 I.A. TAB
  SURFACE NUMBER ( 3 ) MNEMONIC IDENTIFICATION IS (I.A. TAB )

(TRANSFORM
  TRANSLATION           ROTATION (DEGREES)
    X      Y      Z      PHIX     PHIY     PHIZ
  7.792E+02   .0   1.501E+02   7.000E+00   2.000E+00   .0
  -----
  ----- ROTATION -----  TRANSLATION
  9.993908E-01   .0   -3.489950E-02   7.791900E+02
  4.253179E-03   9.925462E-01   1.217951E-01   .0
  3.463936E-02  -1.218693E-01   9.919415E-01   1.500900E+02

(C NODES ON HINGE LINE
(NODES FROM CARDS LOCAL 2
  NODE COORDINATES ARE INPUT FROM ICARDS 1 IN (LOCAL 1 AXIS FRAME IN THE (METRIC 1 UNIT SYSTEM.
  NUMBER OF NODES TO BE READ IS ( 2 )
  7.5050E+02 4.4500E+02   .0      -.0      -.0      -.0
  7.5050E+02 5.1500E+02   .0      -.0      -.0      -.0
(C PARENT SURFACE IS INBOARD AIL.
(MODES FROM 2
(RIGID 11 1
(HINGE 750.5 445.0 750.5 515. 1.0
(SA 1 1 1
  SAI(1) SELECTED FREEDOMS ARE 0 0 1 1 1 0

(MOTIONAXIS 2 0
  MOTION AXIS SCHEME
  NUMBER OF DEFINITION POINTS = 2
  INDICATOR FOR ROTATION RX ORIENTATION ( 0 )
  EQUAL 0, FREESTREAM
  NOT EQUAL 0, PERPENDICULAR TO LOCAL STRAIGHT LINE MOTION AXIS

    X-LOC      Y-LOC      SLOPE
  1  7.505E+02  4.450E+02   .0
  2  7.505E+02  5.150E+02   .0
(PRINT LOCATIONS
  PRINT OPTION IS 2 (LC 11 10 1
(IPRINT MODE
  PRINT OPTION IS 6 (MO 11 10 1
($END

```

***** TITLE *****

TITLE HIGH ASPECT RATIO WING WITH 11 MODAL FREEDOMS

INPUT MODE SHAPES TRANSLATION - X

| ROW | 1MODE 11MODE | 2MODE | 3MODE | 4MODE | 5MODE | 6MODE | 7MODE | 8MODE | 9MODE | 10MODE |
|-----|-----------------|-------|-------|-------|-------|-------|-------|-------|-------|--------|
| 1 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |
| 2 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |

INPUT MODE SHAPES TRANSLATION - Y

| ROW | 1MODE 11MODE | 2MODE | 3MODE | 4MODE | 5MODE | 6MODE | 7MODE | 8MODE | 9MODE | 10MODE |
|-----|-----------------|-------|-------|-------|-------|-------|-------|-------|-------|--------|
| 1 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |
| 2 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |

INPUT MODE SHAPES TRANSLATION - Z

| ROW | 1MODE 11MODE | 2MODE | 3MODE | 4MODE | 5MODE | 6MODE | 7MODE | 8MODE | 9MODE | 10MODE |
|-----|-----------------|------------|-----------|-----------|------------|------------|-----------|------------|------------|--------|
| 1 | 1.000E+00 .0 | -2.190E+02 | 4.825E-02 | 1.104E-01 | -1.961E-01 | -4.508E-01 | 2.471E-01 | -1.870E-01 | -5.050E+01 | .0 |
| 2 | 1.000E+00 .0 | -2.200E+02 | 8.809E-02 | 8.677E-02 | -2.181E-01 | -3.103E-01 | 2.183E-01 | -1.220E-01 | -5.050E+01 | .0 |

INPUT MODE SHAPES ROTATION - X

| ROW | 1MODE 11MODE | 2MODE | 3MODE | 4MODE | 5MODE | 6MODE | 7MODE | 8MODE | 9MODE | 10MODE |
|-----|-----------------|------------|-----------|------------|------------|-----------|------------|-----------|-------|--------|
| 1 | .0 .0 | 2.164E-03 | 5.549E-04 | -5.479E-04 | -2.358E-04 | 1.732E-03 | -2.526E-04 | 7.435E-04 | .0 | .0 |
| 2 | .0 .0 | -5.272E-03 | 6.522E-04 | -8.188E-04 | -1.309E-04 | 2.191E-03 | -4.791E-04 | 1.069E-03 | .0 | .0 |

| INPUT MODE SHAPES ROTATION - Y | | | | | | | | | | |
|--|-----------------|-------------------------|--------------------------|-------------------------|------------------------|-------------------------|-------------------------|------------------------|-----------------|---------|
| ROW | 1 MODE | 2 MODE | 3 MODE | 4 MODE | 5 MODE | 6 MODE | 7 MODE | 8 MODE | 9 MODE | 10 MODE |
| 1 | .0 1.000E+00 | 9.897E-01 -1.873E-04 | -1.873E-04 -7.660E-04 | -7.660E-04 6.238E-04 | 6.238E-04 4.583E-03 | 4.583E-03 -9.212E-04 | -9.212E-04 5.666E-04 | 5.666E-04 1.000E+00 | 1.000E+00 .0 | |
| 2 | .0 1.000E+00 | 9.996E-01 -2.500E-04 | -2.500E-04 -7.465E-04 | -7.465E-04 6.312E-04 | 6.312E-04 4.632E-03 | 4.632E-03 -8.107E-04 | -8.107E-04 3.514E-04 | 3.514E-04 1.000E+00 | 1.000E+00 .0 | |
| INPUT MODE SHAPES ROTATION - Z | | | | | | | | | | |
| ROW | 1 MODE | 2 MODE | 3 MODE | 4 MODE | 5 MODE | 6 MODE | 7 MODE | 8 MODE | 9 MODE | 10 MODE |
| 1 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |
| 2 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |
| INPUT POINT LOCATIONS (REFERENCE AXIS) | | | | | | | | | | |
| ROW | X | Y | Z | THETA-X | THETA-Y | THETA-Z | | | | |
| 1 | 1.531E+03 | 4.417E+02 | 1.781E+02 | 7.000E+00 | 2.000E+00 | .0 | | | | |
| 2 | 1.531E+03 | 5.112E+02 | 1.866E+02 | 7.000E+00 | 2.000E+00 | .0 | | | | |
| INPUT POINT LOCATIONS (LOCAL AXIS) | | | | | | | | | | |
| ROW | X | Y | Z | THETA-X | THETA-Y | THETA-Z | | | | |
| 1 | 7.505E+02 | 4.450E+02 | .0 | | | | | | | |
| 2 | 7.505E+02 | 5.150E+02 | .0 | | | | | | | |

```

!$SURFACE      4      OUTBD. AIL
SURFACE NUMBER 1      4) MNEMONIC IDENTIFICATION IS (OUTBD. AIL)
)
!TRANSFORM
      TRANSLATION          ROTATION (DEGREES)
      X           Y           Z       PHIX      PHIY      PHIZ
    7.792E+02   .0        1.501E+02   7.000E+00   2.000E+00   .0
      ----- ROTATION -----      TRANSLATION
    9.993908E-01   .0     -3.489950E-02   7.791900E+02
   4.253179E-03   9.925462E-01   1.217951E-01   .0
   3.463936E-02  -1.218693E-01   9.919415E-01   1.500900E+02
)
!C  NODES ON HINGE LINE
!NODES  FROM CARD LOCAL 4
NODE COORDINATES ARE INPUT FROM (CARD  ) IN (LOCAL  ) AXIS FRAME IN THE (METRIC  ) UNIT SYSTEM.
NUMBER OF NODES TO BE READ IS ( 4 )
      9.6500E+02  8.5000E+02   .0     -.0     -.0     -.0
      1.0271E+03  9.5000E+02   .0     -.0     -.0     -.0
      1.0895E+03  1.0500E+03   .0     -.0     -.0     -.0
      1.1300E+03  1.1150E+03   .0     -.0     -.0     -.0
)
!C  PARENT SURFACE IS MAIN WING SURFACE
!MNODES  FRDH  1
!RIGID  10  1
!HINGE  965.0  850.0  1130.0  1115.0  1.
!SA    1  1  1
SA(1) SELECTED FREEDOMS ARE 0 0 1 1 1 0
)
!MOTIONAXIS  Z  0
MOTIION AXIS SCHEME
      NUMBER OF DEFINITION POINTS = 2
      INDICATOR FOR ROTATION AX ORIENTATION ( 0)
      EQUAL 0, FREESTREAM
      NOT EQUAL 0, PERPENDICULAR TO LOCAL STRAIGHT LINE MOTION AXIS
      X-LOC    Y-LOC    SLOPE
      1  9.65CE+02  8.500E+02   .0
      2  1.130E+03  1.115E+03   .0
)
!PRINT  LOCATION
      PRINT OPTION IS 2 (LC  )(  )(  ) 1
)
!PRINT  MODE
      PRINT OPTION IS 6 (MO  )(  )(  ) 1
)
!$END
)

```

***** TITLE *****

TITLE HIGH ASPECT RATIO WING WITH 11 MODAL FREEDOMS

INPUT MODE SHAPES TRANSLATION - X

| ROW | 1MODE 11MODE | 2MODE | 3MODE | 4MODE | 5MODE | 6MODE | 7MODE | 8MODE | 9MODE | 10MODE |
|-----|-----------------|-------|-------|-------|-------|-------|-------|-------|-------|--------|
| 1 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |
| 2 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |
| 3 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |
| 4 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |

INPUT MODE SHAPES TRANSLATION - Y

| ROW | 1MODE 11MODE | 2MODE | 3MODE | 4MODE | 5MODE | 6MODE | 7MODE | 8MODE | 9MODE | 10MODE |
|-----|-----------------|-------|-------|-------|-------|-------|-------|-------|-------|--------|
| 1 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |
| 2 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |
| 3 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |
| 4 | .0 .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 | .0 |

INPUT MODE SHAPES TRANSLATION - Z

| ROW | 1MODE 11MODE | 2MODE | 3MODE | 4MODE | 5MODE | 6MODE | 7MODE | 8MODE | 9MODE | 10MODE |
|-----|-----------------|------------|-----------|-----------|------------|-----------|------------|------------|-------|------------|
| 1 | 1.000E+00 .0 | -4.345E+02 | 5.179E-01 | 6.925E-01 | -1.897E-02 | 9.622E-02 | -2.689E-01 | -1.103E-01 | .0 | .0 |
| 2 | 1.000E+00 .0 | -4.967E+02 | 6.898E-01 | 7.892E-01 | 2.845E-01 | 3.619E-01 | -2.719E-02 | -1.629E-02 | .0 | 1.281E-04 |
| 3 | 1.000E+00 .0 | -5.591E+02 | 8.719E-01 | 1.032E+00 | 6.748E-01 | 7.866E-01 | 5.378E-01 | 6.337E-01 | .0 | 2.563E-04 |
| 4 | 1.000E+00 .0 | -5.994E+02 | 9.930E-01 | 1.203E+00 | 9.534E-01 | 1.113E+00 | 1.014E+00 | 1.202E+00 | .0 | -9.095E-13 |

INPUT MORE SHAPES ROTATION - x

| ROW | 1MODE 11MDF | 2MODE | 3MODE | 4MODE | 5MDF | 6MDF | 7MDF | 8MDF | 9MDF | 10MDF |
|-----|----------------|------------|-----------|------------|-----------|-----------|-----------|------------|------|-----------|
| 1 | .0 .0 | 1.348E-04 | 1.387E-01 | -1.139E-03 | 2.676E-03 | 4.216E-04 | 1.180E-03 | -1.566E-03 | .0 | 5.286E-01 |
| 2 | .0 .0 | 1.268E-04 | 1.464E-03 | -8.360E-04 | 3.306E-03 | 1.456E-03 | 3.262E-03 | 1.265E-03 | .0 | 5.286E-01 |
| 3 | .0 .0 | 1.169E-04 | 1.522E-03 | -6.165E-04 | 3.841E-03 | 2.293E-03 | 5.174E-03 | 3.583E-03 | .0 | 5.286E-01 |
| 4 | .0 .0 | -3.230E-03 | 1.541E-03 | -5.634E-04 | 1.992E-03 | 2.494E-03 | 5.708E-03 | 3.978E-03 | .0 | 5.286E-01 |

INPUT MODE SHAPES ROTATION = Y

| Row | 1 MODE 11 MODE | 2 MODE | 3 MODE | 4 MODE | 5 MODE | 6 MODE | 7 MODE | 8 MODE | 9 MODE | 10 MODE |
|-----|-------------------|-----------|-------------|-------------|-------------|-------------|-------------|-------------|--------|-----------|
| 1 | - .0 - .0 | 9.999E-01 | - 4.447E-04 | - 4.615E-03 | 1.335E-04 | - 2.373E-03 | 3.361E-04 | - 8.568E-04 | - .0 | 8.489E-01 |
| 2 | - .0 - .0 | 9.999E-01 | - 4.966E-04 | - 4.895E-03 | - 2.812E-04 | - 3.259E-03 | - 1.248E-03 | - 4.181E-03 | - .0 | 8.489E-01 |
| 3 | - .0 - .0 | 9.990E-01 | - 5.282E-04 | - 5.106E-03 | - 5.901E-04 | - 3.983E-03 | - 2.681E-03 | - 7.585E-03 | - .0 | 8.489E-01 |
| 4 | - .0 .0 | 9.999E-01 | - 5.304E-04 | - 5.185E-03 | - 6.143E-04 | - 4.211E-03 | - 3.045E-03 | - 9.489E-03 | .0 | 8.489E-01 |

INPUT MORE SHAPES ROTATION = 4

INPUT POINT LOCATIONS (REFERENCE AXIS)

| ROW | X | Y | Z | THETA-X | THETA-Y | THETA-Z |
|-----|-----------|-----------|-----------|-----------|-----------|---------|
| 1 | 1.747E+03 | 8.437E+02 | 2.199E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 2 | 1.810E+03 | 9.429E+02 | 2.299E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 3 | 1.873E+03 | 1.042E+03 | 2.400E+02 | 7.000E+00 | 2.000E+00 | .0 |
| 4 | 1.913E+03 | 1.107E+03 | 2.465E+02 | 7.000E+00 | 2.000E+00 | .0 |

INPUT POINT LOCATIONS (LOCAL AXIS)

| ROW | X | Y | Z | THETA-X | THETA-Y | THETA-Z |
|-----|-----------|-----------|----|---------|---------|---------|
| 1 | 9.650E+02 | 8.500E+02 | .0 | | | |
| 2 | 1.027E+03 | 9.500E+02 | .0 | | | |
| 3 | 1.090E+03 | 1.050E+03 | .0 | | | |
| 4 | 1.130E+03 | 1.115E+03 | .0 | | | |

```

(MDTAPE      MODEOUT          )
        TAPE NAME (MODEOUT) WHERE INTERPOLATED MODAL OUTPUT IS WRITTEN.

(FSMODE     747 WING          )
(FAROT      779.19   0.0    150.09  )

AERODYNAMIC SURFACE TRANSFORMATION
ORIGIN           OFF-SET
X =  7.792E+02   X =  -.0
Y =   .0          Y =  -.0
Z =  1.501E+02

(OUTLD      READ FROM CARD    LOCAL      36   3  )
        OUTPUT LOCATIONS ARE INPUT FROM (CARD      ) IN (LOCAL      ) AXIS FRAME,
        NUMBER OF OUTPUT POINTS =  36
        INDICATOR FOR GENERATING SLOPES =   3
        INDICATOR FOR GAMMA (NORMAL ORIENTATIONS) =   0

ROW      X          Y          Z      TSURF
1 1.578E+02 9.690E+01  .0       1
2 3.340E+02 9.690E+01  .0       1
3 5.343E+02 9.690E+01  .0       1
4 8.651E+02 9.690E+01  .0       1
5 3.186E+02 2.882E+02  .0       1
6 6.614E+02 2.882E+02  .0       1
7 6.238E+02 2.882E+02  .0       1
8 7.298E+02 2.882E+02  .0       1
9 4.728E+02 4.716E+02  .0       1
10 5.836E+02 4.716E+02  .0      1
11 7.096E+02 4.716E+02  .0      2
12 7.918E+02 4.716E+02  .0      3
13 6.201E+02 6.421E+02  .0      1
14 7.110E+02 6.421E+02  .0      1
15 8.143E+02 6.421E+02  .0      1
16 8.818E+02 6.421E+02  .0      1
17 7.535E+02 7.951E+02  .0      1
18 8.295E+02 7.951E+02  .0      1
19 9.159E+02 7.951E+02  .0      1
20 9.724E+02 7.951E+02  .0      1
21 8.613E+02 9.265E+02  .0      1
22 9.268E+02 9.265E+02  .0      1
23 1.001E+03 9.265E+02  .0      1
24 1.050E+03 9.265E+02  .0      4
25 9.462E+02 1.032E+03  .0      1
26 1.004E+03 1.032E+03  .0      1
27 1.070E+03 1.032E+03  .0      1
28 1.112E+03 1.032E+03  .0      4
29 1.008E+03 1.110E+03  .0      1
30 1.061E+03 1.110E+03  .0      1
31 1.120E+03 1.110E+03  .0      1
32 1.158E+03 1.110E+03  .0      4

```

```
33 1.047E+03 1.159E+03 .0          1
34 1.055E+03 1.158E+03 .0          1
35 1.150E+03 1.159E+03 .0          1
36 1.186E+03 1.158E+03 .0          1
(PRINT MODE
 PRINT OPTION IS  0 (MUDR)  )  )  )  )
( $END )
```

OUTPUT POINT LOCATIONS ARE SHIFTED LOCAL COORDINATES

| ROW | X | Y | Z | DISPLACEMENT X | DISPLACEMENT Y | DISPLACEMENT Z | ROTATION X | ROTATION Y | ROTATION Z |
|-----|-----------|-----------|----|-------------------------------|--------------------------------|------------------------|-------------------------|------------------|------------------|
| 1 | 1.578E+02 | 9.690E+01 | .0 | 1.000E+00 2.555E-02 .0 | 3.752E+02 .0 .0 | -3.836E-02 .0 .0 | 2.889E-02 .0 | 2.792E-02 .0 | -1.265E-01 .0 |
| 2 | 3.340E+02 | 9.690E+01 | .0 | 1.000E+00 1.653E-02 .0 | 1.973E+02 .0 .0 | -5.326E-02 .0 .0 | 2.279E-02 .0 | 2.741E-02 .0 | -1.028E-01 .0 |
| 3 | 5.343E+02 | 9.690E+01 | .0 | 1.000E+00 1.675E-02 .0 | 8.886E+00 .0 .0 | -7.202E-02 .0 .0 | 2.134E-02 .0 | 3.106E-02 .0 | -1.237E-01 .0 |
| 4 | 6.651E+02 | 9.690E+01 | .0 | 1.000E+00 -6.037E-02 .0 | -1.388E+02 .0 .0 | -7.435E-02 .0 .0 | 3.799E-02 .0 | 1.405E-04 .0 | -1.948E-01 .0 |
| 5 | 3.186E+02 | 2.882E+02 | .0 | 1.000E+00 -1.771E-02 .0 | 2.110E+02 .0 .0 | -3.753E-02 .0 .0 | -5.600E-04 .0 | 8.644E-03 .0 | 1.041E-01 .0 |
| 6 | 4.614E+02 | 2.882E+02 | .0 | 1.000E+00 -5.739E-02 .0 | 6.902E+01 .0 .0 | -4.122E-02 .0 .0 | 4.246E-03 .0 | -1.058E-02 .0 | 8.601E-02 .0 |
| 7 | 6.238E+02 | 2.882E+02 | .0 | 1.000E+00 -1.673E-01 .0 | -9.532E+01 .0 .0 | -3.879E-02 .0 .0 | 5.736E-02 .0 | -6.657E-02 .0 | -1.945E-01 .0 |
| 8 | 7.298E+02 | 2.882E+02 | .0 | 1.000E+00 -2.543E-01 .0 | -1.975E+02 .0 .0 | -3.076E-02 .0 .0 | 1.251E-01 .0 | -1.245E-01 .0 | -5.628E-01 .0 |
| 9 | 4.728E+02 | 4.716E+02 | .0 | 1.000E+00 -4.589E-02 .0 | 5.644E+01 .0 .0 | 9.930E-03 .0 .0 | -6.817E-02 .0 | -5.352E-02 .0 | 5.887E-01 .0 |
| 10 | 5.836E+02 | 4.716E+02 | .0 | 1.000E+00 -9.946E-02 .0 | -5.324E+01 .0 .0 | 2.532E-02 .0 .0 | -2.154E-02 .0 | -1.051E-01 .0 | 3.107E-01 .0 |
| 11 | 7.096E+02 | 4.716E+02 | .0 | 1.000E+00 -1.425E-01 .0 | -1.788E+02 -9.600E+00 .0 | 5.475E-02 .0 .0 | 7.041E-02 .0 | -1.788E-01 .0 | -2.092E-01 .0 |
| 12 | 7.918E+02 | 4.716E+02 | .0 | 1.000E+00 -1.823E-01 .0 | -2.604E+02 9.180E+01 .0 | 7.211E-02 .0 .0 | 1.328E-01 -4.130E+01 | -2.303E-01 .0 | -5.875E-01 .0 |
| 13 | 6.201E+02 | 6.421E+02 | .0 | 1.000E+00 2.413E-02 .0 | -8.963E+01 .0 .0 | 1.438E-01 .0 .0 | -1.535E-01 .0 | -1.237E-01 .0 | 4.810E-01 .0 |
| 14 | 7.110E+02 | 6.421E+02 | .0 | 1.000E+00 4.589E-02 .0 | -1.805E+02 .0 .0 | 1.749E-01 .0 .0 | -1.884E-02 .0 | -1.860E-01 .0 | 1.311E-01 .0 |
| 15 | 8.143E+02 | 6.421E+02 | .0 | 1.000E+00 8.959E-02 .0 | -2.838E+02 .0 .0 | 2.129E-01 .0 .0 | 1.813E-01 .0 | -2.590E-01 .0 | -1.945E-01 .0 |
| 16 | 8.818E+02 | 6.421E+02 | .0 | 1.000E+00 1.326E-01 .0 | -3.512E+02 .0 .0 | 2.378E-01 .0 .0 | 3.6 6E-01 .0 | -3.128E-01 .0 | -3.044E-01 .0 |
| 17 | 7.535E+02 | 7.951E+02 | .0 | 1.000E+00 7.811E-02 .0 | -2.224E+02 .0 .0 | 3.521E-01 .0 .0 | -1.363E-01 .0 | -7.252E-02 .0 | 5.456E-03 .0 |
| | | | | | | | | | -9.473E-02 .0 |

| | | | | | | | | | | |
|----|-----------|-----------|----|-------------------------|------------------|-------------------------|-----------------|------------------|------------------|------------------|
| 18 | 8.295E+02 | 7.951E+02 | .0 | 1.000E+00 4.740F-02 | -2.990E+02 .0 | 3.882E-01 .0 | 7.870E-02 .0 | -9.704E-02 .0 | -1.205E-01 .0 | -1.565E-01 .0 |
| 19 | 9.159E+02 | 7.951E+02 | .0 | 1.000E+00 6.057E-03 | -3.854E+02 .0 | 4.229E-01 .0 | 4.383E-01 .0 | -1.395E-01 .0 | -1.382E-02 .0 | -2.624E-01 .0 |
| 20 | 9.724E+02 | 7.951E+02 | .0 | 1.000E+00 -8.348E-03 | -4.419E+02 .0 | 4.459E-01 .0 | 6.912E-01 .0 | -1.607E-01 .0 | 9.807E-02 .0 | -3.187E-01 .0 |
| 21 | 8.613E+02 | 9.265E+02 | .0 | 1.000E+00 -3.267E-01 | -3.308E+02 .0 | 5.779E-01 .0 | 2.677E-02 .0 | 1.996E-01 .0 | -1.175E-01 .0 | -1.438E-01 .0 |
| 22 | 9.268E+02 | 9.265E+02 | .0 | 1.000E+00 -2.746E-01 | -3.963E+02 .0 | 6.077E-01 .0 | 3.305E-01 .0 | 1.966E-01 .0 | 4.356E-02 .0 | -1.514E-01 .0 |
| 23 | 1.001E+03 | 9.265E+02 | .0 | 1.000E+00 -1.237E-01 | -4.70RE+02 .0 | 6.430E-01 .0 | 6.839E-01 .0 | 2.030E-01 .0 | 2.504E-01 .0 | -1.221E-01 .0 |
| 24 | 1.050E+03 | 9.265E+02 | .0 | 1.000E+00 4.832E-02 | -5.193E+02 .0 | 6.668E-01 -3.164E+01 | 9.197E-01 .0 | 2.137E-01 .0 | 4.018E-01 .0 | -7.494E-02 .0 |
| 25 | 9.462E+02 | 1.032E+03 | .0 | 1.000E+00 -2.698E-01 | -4.156E+02 .0 | 7.707E-01 .0 | 3.234E-01 .0 | 5.372E-01 .0 | 2.187E-01 .0 | 1.456E-01 .0 |
| 26 | 1.004E+03 | 1.032E+03 | .0 | 1.000E+00 6.356E-03 | -4.733E+02 .0 | 8.004E-01 .0 | 6.097E-01 .0 | 5.627E-01 .0 | 4.209E-01 .0 | 2.491E-01 .0 |
| 27 | 1.070E+03 | 1.032E+03 | .0 | 1.000E+00 4.287E-01 | -5.392E+02 .0 | 8.348E-01 .0 | 9.413E-01 .0 | 5.966E-01 .0 | 6.690E-01 .0 | 3.978E-01 .0 |
| 28 | 1.112E+03 | 1.032E+03 | .0 | 1.000E+00 7.169E-01 | -5.819E+02 .0 | 8.572E-01 -2.867E+01 | 1.158E+00 .0 | 6.204E-01 .0 | 8.338E-01 .0 | 5.028E-01 .0 |
| 29 | 1.008E+03 | 1.110E+03 | .0 | 1.000E+00 2.356E-01 | -4.781E+02 .0 | 9.211E-01 .0 | 5.807E-01 .0 | 8.590E-01 .0 | 6.023E-01 .0 | 6.331E-01 .0 |
| 30 | 1.061E+03 | 1.110E+03 | .0 | 1.000E+00 6.362E-01 | -5.301E+02 .0 | 9.490E-01 .0 | 8.474E-01 .0 | 8.921E-01 .0 | 8.129E-01 .0 | 7.805E-01 .0 |
| 31 | 1.120E+03 | 1.110E+03 | .0 | 1.000E+00 1.167E+00 | -5.891E+02 .0 | 9.804E-01 .0 | 1.152E+00 .0 | 9.288E-01 .0 | 1.059E+00 .0 | 9.568E-01 .0 |
| 32 | 1.158E+03 | 1.110E+03 | .0 | 1.000E+00 1.528E+00 | -6.278E+02 .0 | 1.001E+00 -2.654E+01 | 1.353E+00 .0 | 9.529E-01 .0 | 1.221E+00 .0 | 1.074E+00 .0 |
| 33 | 1.047E+03 | 1.158E+03 | .0 | 1.000E+00 6.782E-01 | -5.162E+02 .0 | 1.015E+00 .0 | 7.470E-01 .0 | 1.073E+00 .0 | 8.706E-01 .0 | 1.006E+00 .0 |
| 34 | 1.095E+03 | 1.158E+03 | .0 | 1.000E+00 1.119E+00 | -5.647E+02 .0 | 1.041E+00 .0 | 9.981E-01 .0 | 1.104E+00 .0 | 1.073E+00 .0 | 1.152E+00 .0 |
| 35 | 1.150E+03 | 1.158E+03 | .0 | 1.000E+00 1.632E+00 | -6.199E+02 .0 | 1.070E+00 .0 | 1.284E+00 .0 | 1.138E+00 .0 | 1.305E+00 .0 | 1.318E+00 .0 |
| 36 | 1.196E+03 | 1.158E+03 | .0 | 1.000E+00 1.967F+00 | -6.558E+02 .0 | 1.089E+00 .0 | 1.470E+00 .0 | 1.160E+00 .0 | 1.455E+00 .0 | 1.426E+00 .0 |

OUTPUT POINT LOCATIONS ARE SHIFTED LOCAL COORDINATES

| ROW | X | Y | Z | SLOPE | DZ/DX | | | | | | |
|-----|-----------|-----------|----|------------------|--------------------------|------------------|-------------------------|------------------|------------|------------|--|
| 1 | 1.578E+02 | 9.690E+01 | .0 | .0 1.802E-05 | -9.758E-01 .0 | -9.467E-05 .0 | -3.651E-05 .0 | 2.637E-05 | 8.791E-05 | -2.114E-05 | |
| 2 | 3.340E+02 | 9.690E+01 | .0 | .0 -5.170E-05 | -9.828E-01 .0 | -8.263E-05 .0 | -3.009E-05 .0 | -3.675E-06 | 1.061E-04 | 3.015E-05 | |
| 3 | 5.343E+02 | 9.690E+01 | .0 | .0 7.269E-05 | -9.447E-01 .0 | -1.161E-04 .0 | 3.250E-05 .0 | 4.852E-05 | -4.622E-04 | -2.883E-05 | |
| 4 | 6.651E+02 | 9.690E+01 | .0 | .0 -2.350E-04 | -9.470E-01 .0 | -4.306E-05 .0 | 3.297E-05 .0 | -9.875E-05 .0 | -1.668E-04 | 1.951E-04 | |
| 5 | 3.186E+02 | 2.882E+02 | .0 | .0 8.652E-05 | -7.209E-01 .0 | -9.851E-05 .0 | 4.803E-06 .0 | 6.372E-05 .0 | -2.633E-04 | -6.164E-05 | |
| 6 | 4.614E+02 | 2.882E+02 | .0 | .0 -4.539E-04 | -9.943E-01 .0 | 2.195E-05 .0 | 9.537E-05 .0 | -2.452E-04 | -3.619E-04 | 4.101E-04 | |
| 7 | 6.238E+02 | 2.882E+02 | .0 | .0 -8.219E-04 | -9.986E-01 .0 | 5.166E-05 .0 | 5.419E-04 .0 | -4.874E-04 .0 | -2.925E-03 | 8.865E-04 | |
| 8 | 7.298E+02 | 2.882E+02 | .0 | .0 -1.024E-03 | -1.023E+00 .0 | 9.596E-05 .0 | 9.367E-04 .0 | -7.061E-04 .0 | -5.158E-03 | 1.244E-03 | |
| 9 | 4.728E+02 | 4.716E+02 | .0 | .0 -4.214E-04 | -9.906E-01 .0 | 1.087E-04 .0 | 2.446E-04 .0 | -3.702E-04 .0 | -1.453E-03 | 5.417E-04 | |
| 10 | 5.836E+02 | 4.716E+02 | .0 | .0 -5.541E-04 | -9.918E-01 .0 | 1.529E-04 .0 | 5.782E-04 .0 | -5.304E-04 .0 | -3.501E-03 | 8.140E-04 | |
| 11 | 7.096E+02 | 4.716E+02 | .0 | .0 -4.848E-04 | -9.935E-01 -1.000E+00 | 2.112E-04 .0 | 7.586E-04 .0 | -6.266E-04 .0 | -4.602E-03 | 8.792E-04 | |
| 12 | 7.918E+02 | 4.716E+02 | .0 | .0 -4.848E-04 | -9.935E-01 -1.000E+00 | 2.112E-04 .0 | 7.586E-04 -1.000E+00 | -6.266E-04 .0 | -4.602E-03 | 8.792E-04 | |
| 13 | 6.201E+02 | 6.421E+02 | .0 | .0 -2.338E-04 | -9.999E-01 .0 | 4.411E-04 .0 | 6.167E-04 .0 | -3.043E-04 .0 | -5.408E-03 | 3.772E-04 | |
| 14 | 7.110E+02 | 6.421E+02 | .0 | .0 3.593E-04 | -1.000E+00 .0 | 3.754E-04 .0 | 1.668E-03 .0 | -6.671E-04 .0 | -3.654E-03 | -2.604E-04 | |
| 15 | 8.143E+02 | 6.421E+02 | .0 | .0 6.665E-04 | -1.000E+00 .0 | 3.576E-04 .0 | 2.585E-03 .0 | -8.207E-04 .0 | -2.003E-03 | -8.740E-04 | |
| 16 | 8.818E+02 | 6.421E+02 | .0 | .0 4.852E-04 | -9.998E-01 .0 | 3.936E-04 .0 | 2.851E-03 .0 | -7.090E-04 .0 | -1.556E-03 | -1.058E-03 | |
| 17 | 7.535E+02 | 7.951E+02 | .0 | .0 -2.410E-04 | -1.001E+00 .0 | 4.884E-04 .0 | 2.280E-03 .0 | -3.215E-04 .0 | -2.799E-03 | -6.363E-04 | |

OUTPUT POINT LOCATIONS ARE SHIFTED LOCAL COORDINATES

| ROW | X | Y | Z | SLOPE DZ/DY | | | | | | |
|-----|-----------|-----------|----|------------------|------------------|------------------|--------------------------|------------------|------------|------------|
| 1 | 1.578E+02 | 9.690E+01 | .0 | .0 2.978E-04 | 2.211E-01 .0 | -2.986E-05 .0 | -4.619E-05 .0 | 1.270E-04 | 9.006E-05 | -2.306E-04 |
| 2 | 3.340E+02 | 9.690E+01 | .0 | .0 -1.294E-04 | 1.858E-01 .0 | 4.745E-05 .0 | -2.187E-05 .0 | -5.673E-05 | 3.122E-04 | 7.672E-05 |
| 3 | 5.343E+02 | 9.690E+01 | .0 | .0 -8.760E-05 | -8.092E-02 .0 | 5.823E-06 .0 | 3.532E-05 .0 | -4.095E-05 .0 | -1.848E-04 | 7.982E-05 |
| 4 | 6.651E+02 | 9.690E+01 | .0 | .0 -1.880E-04 | 1.234E-01 .0 | 1.119E-04 .0 | -1.430E-04 .0 | -1.270E-04 | 1.256E-03 | 1.031E-04 |
| 5 | 3.186E+02 | 2.882E+02 | .0 | .0 3.287E-04 | 4.828E-01 .0 | 2.218E-05 .0 | -1.878E-04 .0 | 1.343E-04 | 1.097E-03 | -3.054E-04 |
| 6 | 4.614E+02 | 2.882E+02 | .0 | .0 -1.907E-04 | 1.374E-01 .0 | 1.791E-04 .0 | -2.105E-04 .0 | -1.959E-04 | 1.772E-03 | 1.285E-04 |
| 7 | 6.238E+02 | 2.882E+02 | .0 | .0 -2.131E-04 | -1.678E-02 .0 | 2.846E-04 .0 | -6.332E-05 .0 | -4.030E-04 | 9.535E-04 | 3.370E-04 |
| 8 | 7.298E+02 | 2.882E+02 | .0 | .0 -2.561E-04 | -4.452E-02 .0 | 3.578E-04 .0 | 2.114E-04 .0 | -5.798E-04 | -6.968E-04 | 5.596E-04 |
| 9 | 4.728E+02 | 4.716E+02 | .0 | .0 5.076E-04 | -3.683E-03 .0 | 3.735E-04 .0 | -6.671E-04 .0 | -1.533E-04 | 4.008E-03 | -3.319E-04 |
| 10 | 5.836E+02 | 4.716E+02 | .0 | .0 6.869E-04 | -7.596E-03 .0 | 4.605E-04 .0 | -5.975E-04 .0 | -2.036E-04 | 3.268E-03 | -3.512E-04 |
| 11 | 7.096E+02 | 4.716E+02 | .0 | .0 7.613E-04 | 5.134E-03 .0 | 5.553E-04 .0 | -6.395E-04 .0 | -1.916E-04 | 1.934E-03 | -2.741E-04 |
| 12 | 7.918E+02 | 4.716E+02 | .0 | .0 9.940E-04 | -6.514E-03 .0 | 6.288E-04 .0 | -6.623E-04 -8.761E-16 | -2.004E-04 | 1.878E-03 | -4.038E-04 |
| 13 | 6.201E+02 | 6.421E+02 | .0 | .0 4.044E-04 | -5.306E-04 .0 | 9.612E-04 .0 | -2.076E-03 .0 | 7.620E-04 | -7.492E-04 | -3.740E-04 |
| 14 | 7.110E+02 | 6.421E+02 | .0 | .0 1.037E-03 | -7.656E-04 .0 | 8.939E-04 .0 | -8.927E-04 .0 | 3.643E-04 | 1.151E-03 | -1.084E-03 |
| 15 | 8.143E+02 | 6.421E+02 | .0 | .0 9.943E-04 | -7.949E-04 .0 | 9.296E-04 .0 | -3.177E-04 .0 | 4.177E-04 | 2.095E-03 | -1.501E-03 |
| 16 | 8.818E+02 | 6.421E+02 | .0 | .0 3.466E-04 | -5.217E-04 .0 | 1.037E-03 .0 | -5.944E-04 .0 | 8.128E-04 | 1.406E-03 | -1.375E-03 |
| 17 | 7.535E+02 | 7.951E+02 | .0 | .0 -9.564E-04 | -2.430E-03 .0 | 1.216E-03 .0 | -1.888E-03 .0 | 1.532E-03 | -1.377E-03 | -4.913E-04 |

| | | | | | | | | | | |
|----|-----------|-----------|----|------------------|------------------|-------------------------|-----------------|------------------|------------------|------------------|
| 18 | 8.295E+02 | 7.951E+02 | .0 | .0 -3.931E-04 | -9.992E-01 .0 | 4.416E-04 .0 | 3.553E-03 .0 | -4.132E-04 .0 | -1.195E-04 .0 | -1.079E-03 .0 |
| 19 | 9.159E+02 | 7.951E+02 | .0 | .0 -6.285E-04 | -9.978E-01 .0 | 3.761E-04 .0 | 4.570E-03 .0 | -4.971E-04 .0 | 2.182E-03 .0 | -1.245E-03 .0 |
| 20 | 9.724E+02 | 7.951E+02 | .0 | .0 8.715E-05 | -1.001E+00 .0 | 4.286E-04 .0 | 4.464E-03 .0 | -2.737E-04 .0 | 1.968E-03 .0 | -7.764E-04 .0 |
| 21 | 8.613E+02 | 9.265E+02 | .0 | .0 2.263E-04 | -9.999E-01 .0 | 4.455E-04 .0 | 4.578E-03 .0 | -1.089E-04 .0 | 2.303E-03 .0 | -3.385E-04 .0 |
| 22 | 9.268E+02 | 9.265E+02 | .0 | .0 1.472E-03 | -9.999E-01 .0 | 4.678E-04 .0 | 4.701E-03 .0 | 4.312E-05 .0 | 2.649E-03 .0 | 1.919E-04 .0 |
| 23 | 1.001E+03 | 9.265E+02 | .0 | .0 2.731E-03 | -9.999E-01 .0 | 4.810E-04 .0 | 4.799E-03 .0 | 1.499E-04 .0 | 2.946E-03 .0 | 6.653E-04 .0 |
| 24 | 1.050E+03 | 9.265E+02 | .0 | -.0 3.379E-03 | -1.000E+00 .0 | 4.853E-04 -8.489E-01 | 4.833E-03 .0 | 1.850E-04 .0 | 3.054E-03 .0 | 8.635E-04 .0 |
| 25 | 9.462E+02 | 1.032E+03 | .0 | .0 4.050E-03 | -9.998E-01 .0 | 5.118E-04 .0 | 4.923E-03 .0 | 4.155E-04 .0 | 3.390E-03 .0 | 1.606E-03 .0 |
| 26 | 1.004E+03 | 1.032E+03 | .0 | .0 5.832E-03 | -9.999E-01 .0 | 5.228E-04 .0 | 5.018E-03 .0 | 5.060E-04 .0 | 3.693E-03 .0 | 2.137E-03 .0 |
| 27 | 1.070E+03 | 1.032E+03 | .0 | .0 7.163E-03 | -9.994E-01 .0 | 5.268E-04 .0 | 5.082E-03 .0 | 5.555E-04 .0 | 3.899E-03 .0 | 2.502E-03 .0 |
| 28 | 1.112E+03 | 1.032E+03 | .0 | -.0 7.026E-03 | -9.990E-01 .0 | 5.254E-04 -8.489E-01 | 5.078E-03 .0 | 5.604E-04 .0 | 3.890E-03 .0 | 2.504E-03 .0 |
| 29 | 1.008E+03 | 1.110E+03 | .0 | .0 7.312E-03 | -1.001E+00 .0 | 5.351E-04 .0 | 5.106E-03 .0 | 6.171E-04 .0 | 3.982E-03 .0 | 2.706E-03 .0 |
| 30 | 1.061E+03 | 1.110E+03 | .0 | .0 7.983E-03 | -1.000E+00 .0 | 5.335E-04 .0 | 5.135E-03 .0 | 6.355E-04 .0 | 4.077E-03 .0 | 2.881E-03 .0 |
| 31 | 1.120E+03 | 1.110E+03 | .0 | .0 1.011E-02 | -9.999E-01 .0 | 5.273E-04 .0 | 5.202E-03 .0 | 5.823E-04 .0 | 4.243E-03 .0 | 3.033E-03 .0 |
| 32 | 1.158E+03 | 1.110E+03 | .0 | -.0 9.355E-03 | -9.999E-01 .0 | 5.303E-04 -8.489E-01 | 5.179E-03 .0 | 6.128E-04 .0 | 4.195E-03 .0 | 3.021E-03 .0 |
| 33 | 1.047E+03 | 1.158E+03 | .0 | .0 8.161E-03 | -9.999E-01 .0 | 5.357E-04 .0 | 5.146E-03 .0 | 6.689E-04 .0 | 4.128E-03 .0 | 3.024E-03 .0 |
| 34 | 1.095E+03 | 1.158E+03 | .0 | -.0 9.489E-03 | -9.999E-01 .0 | 5.304E-04 .0 | 5.185E-03 .0 | 6.143E-04 .0 | 4.211E-03 .0 | 3.045E-03 .0 |
| 35 | 1.150E+03 | 1.158E+03 | .0 | -.0 9.489E-03 | -9.999E-01 .0 | 5.304E-04 .0 | 5.185E-03 .0 | 6.143E-04 .0 | 4.211E-03 .0 | 3.045E-03 .0 |
| 36 | 1.186E+03 | 1.158E+03 | .0 | -.0 9.489E-03 | -9.999E-01 .0 | 5.304E-04 .0 | 5.185E-03 .0 | 6.143E-04 .0 | 4.211E-03 .0 | 3.045E-03 .0 |

| | | | | | | | | | | |
|----|-----------|-----------|----|------------------|------------------|------------------------|------------------|-----------------|------------------|------------------|
| 18 | 8.295E+02 | 7.951E+02 | .0 | .0 -1.912E-03 | 3.396E-03 .0 | 1.266E-03 .0 | -1.434E-03 .0 | 1.868E-03 .0 | -4.323E-04 .0 | -3.641E-04 .0 |
| 19 | 9.159E+02 | 7.951E+02 | .0 | .0 -2.770E-03 | 3.371E-03 .0 | 1.287E-03 .0 | -1.094E-03 .0 | 2.130E-03 .0 | 3.807E-04 .0 | -8.111E-05 .0 |
| 20 | 9.724E+02 | 7.951E+02 | .0 | .0 -2.192E-03 | -6.503E-04 .0 | 1.364E-03 .0 | -1.305E-03 .0 | 2.465E-03 .0 | -5.073E-05 .0 | 5.705E-04 .0 |
| 21 | 8.613E+02 | 9.265E+02 | .0 | .0 -2.410E-03 | 1.700E-04 .0 | 1.388E-03 .0 | -1.159E-03 .0 | 2.709E-03 .0 | 3.278E-04 .0 | 1.177E-03 .0 |
| 22 | 9.268E+02 | 9.265E+02 | .0 | .0 -1.219E-03 | 2.057E-04 .0 | 1.419E-03 .0 | -1.048E-03 .0 | 2.932E-03 .0 | 7.462E-04 .0 | 1.880E-03 .0 |
| 23 | 1.001E+03 | 9.265E+02 | .0 | .0 -6.414E-05 | 2.115E-04 .0 | 1.440E-03 .0 | -9.426E-04 .0 | 3.099E-03 .0 | 1.084E-03 .0 | 2.492E-03 .0 |
| 24 | 1.050E+03 | 9.265E+02 | .0 | .0 1.851E-03 | 1.265E-04 .0 | 1.465E-03 5.286E-01 | -8.027E-04 .0 | 3.311E-03 .0 | 1.542E-03 .0 | 3.357E-03 .0 |
| 25 | 9.462E+02 | 1.032E+03 | .0 | .0 6.652E-04 | 2.799E-04 .0 | 1.487E-03 .0 | -8.112E-04 .0 | 3.507E-03 .0 | 1.605E-03 .0 | 3.738E-03 .0 |
| 26 | 1.004E+03 | 1.032E+03 | .0 | .0 2.177E-03 | 4.962E-04 .0 | 1.506E-03 .0 | -7.114E-04 .0 | 3.670E-03 .0 | 1.954E-03 .0 | 4.436E-03 .0 |
| 27 | 1.070E+03 | 1.032E+03 | .0 | .0 3.222E-03 | 7.638E-04 .0 | 1.516E-03 .0 | -6.476E-04 .0 | 3.776E-03 .0 | 2.184E-03 .0 | 4.921E-03 .0 |
| 28 | 1.112E+03 | 1.032E+03 | .0 | .0 4.433E-03 | 6.545E-04 .0 | 1.522E-03 5.286E-01 | -5.833E-04 .0 | 3.845E-03 .0 | 2.392E-03 .0 | 5.320E-03 .0 |
| 29 | 1.008E+03 | 1.110E+03 | .0 | .0 3.215E-03 | -2.687E-03 .0 | 1.532E-03 .0 | -6.158E-04 .0 | 3.877E-03 .0 | 2.292E-03 .0 | 5.207E-03 .0 |
| 30 | 1.061E+03 | 1.110E+03 | .0 | .0 3.667E-03 | -3.057E-03 .0 | 1.536E-03 .0 | -5.837E-04 .0 | 3.936E-03 .0 | 2.404E-03 .0 | 5.466E-03 .0 |
| 31 | 1.120E+03 | 1.110E+03 | .0 | .0 4.892E-03 | -3.257E-03 .0 | 1.537E-03 .0 | -5.377E-04 .0 | 3.945E-03 .0 | 2.542E-03 .0 | 5.690E-03 .0 |
| 32 | 1.158E+03 | 1.110E+03 | .0 | .0 4.861E-03 | -3.487E-03 .0 | 1.541E-03 5.286E-01 | -5.301E-04 .0 | 3.990E-03 .0 | 2.586E-03 .0 | 5.834E-03 .0 |
| 33 | 1.047E+03 | 1.158E+03 | .0 | .0 2.574E-03 | -3.150E-03 .0 | 1.547E-03 .0 | -6.051E-04 .0 | 4.047E-03 .0 | 2.404E-03 .0 | 5.676E-03 .0 |
| 34 | 1.095E+03 | 1.158E+03 | .0 | .0 3.978E-03 | -3.230E-03 .0 | 1.541E-03 .0 | -5.634E-04 .0 | 3.992E-03 .0 | 2.494E-03 .0 | 5.708E-03 .0 |
| 35 | 1.150E+03 | 1.158E+03 | .0 | .0 3.978E-03 | -3.730E-03 .0 | 1.541E-03 .0 | -5.634E-04 .0 | 3.992E-03 .0 | 2.494E-03 .0 | 5.708E-03 .0 |
| 36 | 1.186E+03 | 1.158E+03 | .0 | .0 3.978E-03 | -3.230E-03 .0 | 1.541E-03 .0 | -5.634E-04 .0 | 3.992E-03 .0 | 2.494E-03 .0 | 5.708E-03 .0 |

I\$QUIT

REFERENCES

1. Miller, R. D.; Kroll, R. I.; and Clemons, R. E.: Dynamic Loads Analysis System (DYLOFLEX) Summary. NASA CR-2846-1, 1979.
2. Miller, R. D.; Richard, M.; and Rogers, J. T.: Feasibility of Implementing Unsteady Aerodynamics Into the FLEXSTAB Computer Program System. NASA CR-132530, October 1974.
3. Etkin, B.: Dynamics of Flight. John Wiley and Sons, Inc., 1959.

| | | | |
|--|---|---|-----------------------------|
| 1 Report No NASA CR-2847 | 2. Government Accession No. | 3 Recipient's Catalog No | |
| 4. Title and Subtitle MODAL INTERPOLATION PROGRAM, L215 (INTERP) Volume I: Engineering and Usage | | 5 Report Date October 1979 | |
| 7 Author(s) R. I. Kroll and M.Y. Hirayama | | 6 Performing Organization Code B04C D6-44456 | |
| 9. Performing Organization Name and Address Boeing Commercial Airplane Company P.O. Box 3707 Seattle, Washington, 98124 | | 8 Performing Organization Report No May 1975 to May 1977 | |
| 12 Sponsoring Agency Name and Address National Aeronautics and Space Administration Washington, DC 20546 | | 10 Work Unit No NAS1-13918 | |
| 15. Supplementary Notes Langley Technical Monitors: Robert C. Goetz and Boyd Perry III Topical Report | | 13 Type of Report and Period Covered May 1975 to May 1977 | |
| 16 Abstract This document describes the usage of the Modal Interpolation Program L215 (INTERP). The program uses modal data to form sets of arrays containing interpolation coefficients. The interpolation arrays can then be used to determine displacements at various aerodynamic control points. The displacements consist of translations normal to the aerodynamic surface and surface slopes that are parallel and perpendicular to the freestream direction. Five different interpolation methods are available. A description of the data manipulation and the interpolation methods is presented in volume I of this document. Volume II contains a description of the design and structure of the program to aid those who will maintain and/or modify the program in the future. | | | |
| 17. Key Words (Suggested by Author(s)) Modal interpolation Beam spline Motion axis Surface spline Motion point Polynomial interpolation | | 18. Distribution Statement Unclassified - Unlimited Subject Category 02 | |
| 19. Security Classif. (of this report) Unclassified | 20. Security Classif. (of this page) Unclassified | 21. No. of Pages 118 | 22. Price* \$6.50 |

*For sale by the National Technical Information Service, Springfield, Virginia 22151